




Reference guide

Remote control and programming unit

RCC-02 and RCC-03 for the Xtender

User information

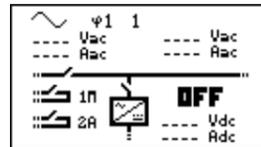

Battery

- Battery voltage
- Battery real charge current
- Programmed charge current
- Battery voltage ripple
- Charging phase (bulk charge, absorption, floating charge...)
- Dynamic compensation of the battery voltage (compensation of thresholds due to the battery internal resistance)
- Working mode (inverter, charger...)
- Battery temperature (provided if a sensor is installed)
- Compensation implied by the battery temperature (provided if a sensor is installed)
- Discharge of battery of the previous day
- Discharge of battery of the current day

Input AC

- Input voltage
- Input current
- Input power AC-In
- Input frequency
- Energy from AC-In of the previous day
- Energy from AC-In of the current day

Output AC

- Output voltage
- Output current
- Output power
- Output frequency
- Consumers energy of the previous day
- Consumers energy of the of the current day

General


- State of the transfer contacts
- State of the inverter-charger contacts
- State of the auxiliary contacts
- Working mode of the auxiliary contacts
- Lock states
- Smart Boost active
- Active sharing of the available power (Power Sharing)

Event history



- Alarm low battery voltage
- Stop battery voltage too low
- Stop high battery voltage
- AC-In synchronisation in progress
- Error incorrect input frequency
- Error input voltage too high
- Error input voltage too low
- Stop inverter overvoltage
- Stop overtemperature
- Stop excessive battery voltage ripple
- Maximum input current exceeded, transfer prohibited
- Error voltage at AC-Out
- Error phase not defined

Adjustment of the remote control

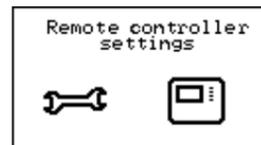


- Language {5000}
- Other languages {5036}
- Time {5001}
- Date {5002}
- User level {5012}
- Drive the remote control to the user level basic {5019}
- Backup and restoring {5013}
 - Backup of all files {5041}
 - Messages backup {5030}
 - Backup of remote control configurations {5015}
 - Backup of Xtender configurations {5017}
 - Load Xtender parameters preset {5045}
 - Loading the remote control configurations {5016}
 - Loading the Xtender configurations {5018}
 - Loading a master file {5034}
 - Separator of the csv files {5032}
- Contrast {5006}
- Back-lighting {5007}
 - Back-lighting always off {5008}
 - Duration of the back-lighting {5009}
 - Red back-lighting if Xtender OFF and default {5026}
- Inactivity period before returning to standard display {5010}
- Duration of display for quick messages {5011}
- Acoustic alarm {5027}


Quick start guide

Setting of the language

 To begin, set your remote control RCC for a display of the information in English. The basic display is:



 Press 1 time on the key "arrow downwards" to display the following screen: Once beyond this screen you can come back to it by means of the key "arrow upwards".



Press the key SET to enter the remote control settings. The screen of the language choice appears.



Press once more the key SET to modify the current language. The language then appears in reverse video.

 


With the keys "arrow upwards" and "arrow downwards" choose the language you wish. Then validate your choice by means of the key SET (OK). We can now leave the setting of the remote control with the key ESC.


Adaptation to the source

It is a matter of indicating to the Xtender the power available to charge the batteries and to supply the users. In order to adapt your installation to the source it is connected to, proceed as follows:


The basic display is:



 Press 2 times on the key "arrow downwards" to display the following screen: Once beyond this screen you can come back to it by means of the key "arrow upwards".



 Press the key SET to access to the settings.



Then again on the key SET to access to the basic parameters.



 
Press the key SET to modify the value of this parameter (it appears in reverse video). By means of the keys "arrow upwards" and "arrow downwards" change the value to adapt it to your source and validate your setting with the key SET (OK).

Adaptation to the battery


(Charge current {1138})

In order that your Xtender manages the best possible the energy stored in your batteries and that it charges them optimally, it is necessary to indicate the current which they can be charged with. You will find this value in the technical data provided by your batteries manufacturer.


The basic display is:



 Press 2 times on the key "arrow downwards" to display the following screen: Once beyond this screen you can come back to it by means of the key "arrow upwards".



 Press the key SET to access to the settings.



Then again on the key SET to access to the basic parameters. With the key "arrow downwards", access the setting "Battery and charger cycle".



You are now going to set the charge current for the batteries:

 


Press the key SET to modify the value of this parameter (it appears in reverse video). With the keys "arrow upwards" and "arrow downwards" change the value to adapt your battery and validate your setting with the key SET (OK).


Activation of the function Smart-Boost

If your AC-In source is limited in power, the Xtender can work as a support and add the missing power for your loads. First of all, check that you have adapted the Xtender to your source (see previous chapter: Adaptation to the source {1107})


The basic display is:



 
Press 2 times on the key "arrow downwards" to display the following screen: Once beyond this screen you can come back to it by means of the key "arrow upwards".



 
Press the key SET to access to the settings.



 
Then again on the key SET to access to the basic parameters. Press 2 times on the key "arrow downwards". You reach now the parameter for authorization of the Smart-Boost function {1126}.



 You can now authorize the function. Press the key SET to access this parameter in modification mode, then the keys UP or DOWN to change the option. To end up, validate with the key SET.



Adjustment of the Xtender

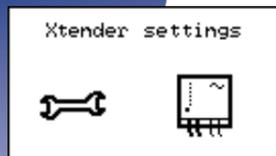

Basic configurations {1100}

Maximum current of the AC source (power sharing) {1107}
Charge current {1138}
Smart-Boost authorized {1126}
Authorized inverter {1124}
Immediate detection of input voltage loss (UPS) {1435}
Standby level {1187}
Restore default configurations {1395}

Battery management and cycle {1137}

Authorized charger {1125}
Charge current {1138}
Temperature correction coefficient {1139}
Undervoltage {1568}
 Battery undervoltage level without load {1108}
 Battery undervoltage dynamic compensation {1531}
 Battery undervoltage dynamic compensation {1191}
 Kind of dynamic compensation {1532}
 Battery undervoltage level at full load {1109}
 Battery undervoltage duration before turn off {1190}
 Restart voltage after batteries undervoltage {1110}
 Battery low level for acoustic alarm {1196}
 Acoustic alarm duration {1469}
 Battery adaptive low voltage {1194}
 Max voltage for adaptive low voltage {1195}
 Reset voltage for adaptive correction {1307}
 Increment step of the adaptive low voltage {1298}
 Battery overvoltage level {1121}
 Restart voltage level after an battery overvoltage {1122}
 Battery floating level {1140}
 Force phase of floating {1467}
 New cycle {1141}
 Force new cycle {1142}
 Voltage 1 for a new cycle {1143}
 Duration at undervoltage 1 for a new cycle {1144}
 Voltage 2 for a new cycle {1145}
 Duration of an undervoltage 2 for a new cycle {1146}
 New priority cycle on the absorption and equalisation phases {1149}

Battery cycling restricted {1147}
Minimal delay between cycles {1148}
Absorption phase {1451}
Authorized absorption {1155}
Absorption voltage {1156}
Duration of absorption {1157}
Completion of absorption released by the current {1158}
 Current at and of absorption {1159}
 Maximal frequency of absorption control {1160}
 Minimal delay since last absorption {1161}
Equalization phase {1452}
 Start equalization {1162}
 Authorized equalization {1163}
 Equalization before absorption phase {1291}
 Equalization current {1290}
 Equalization voltage {1164}
 Duration of equalization {1165}
 Number of cycles prior to equalization {1166}
 Equalization at set intervals {1284}
 Weeks between equalizations {1285}
 End of equalization activated by the current {1168}
 End of equalization current {1169}
Phase of reduced floating {1453}
 Reduced floating allowed {1170}
 Floating duration before reduced floating {1171}
 Reduced floating voltage {1172}
Phase of periodic absorption {1454}
 Periodic absorption allowed {1173}
 Periodic absorption voltage {1174}
 Reduced floating duration before periodic absorption {1175}
 Periodic absorption duration {1176}

Inverter {1186}

Authorized inverter {1124}
Output voltage target {1286}
Allow AC voltage increase in function of battery voltage {1548}
Max AC voltage increase with battery voltage {1560}
Inverter frequency {1112}
Inverter frequency increase when battery full {1536}
Allow frequency increase in function of battery voltage {1549}
Max frequency increase {1546}
Standby and turn on {1420}
 Standby level {1187}
 Time delay between standby pulses {1189}
 Standby number of pulses {1188}
Solsafe system presence,
Energy source at AC-Out side {1438}

AC-IN and transfer{1197}

Authorized transfer {1128}
 Delay before closing transfer relay {1528}
Maximum current of the AC source (power sharing) {1107}
Decrease max input limit current with AC-In voltage {1527}
Smart-Boost authorized {1126}
Overrun AC source current limit without opening the transfer relay {1436}
Immediate detection of input voltage loss (UPS) {1435}
Tolerance on fast detection of input loss {1510}
Input voltage giving an opening of the transfer relay with delay {1199}
Delay before passing to inverter {1198}
Input voltage giving an immediate opening of the transfer relay {1200}
Charge current derating {1471}
 AC input low limit voltage to allow charger function {1309}
 Adaptation range of the charge current according to the input voltage {1433}
 Charge current decrease coef. at voltage limit to turn back in inverter mode {1295}
Delta frequency allowed above the standard input frequency {1505}
Delta frequency allowed under the standard input frequency {1506}
Duration with frequency error before opening the transfer {1507}

Auxiliary contacts 1 {1201} & 2 {1310} simple functions

Reset all settings {1569} {1570}
Switching mode {1202} {1311}
Combination of events mode {1497} {1498}
Limit the time of activation {1512} {1513}
Maximum duration of activation {1514} {1515}
Temporal restrictions {1203} {1312}
 Program 1 {1204} {1313}
 Days of the week {1205} {1314}
 Starting time {1206} {1315}
 Finishing time {1207} {1316}
 Program 2 {1208} {1317}
 Days of the week {1209} {1318}
 Starting time {1210} {1319}
 Finishing time {1211} {1320}
 Program 3 {1212} {1321}
 Days of the week {1213} {1322}
 Starting time {1214} {1323}
 Finishing time {1215} {1324}

Contacts activated with set schedules {1269} {1378}
 Program 1 {1270} {1379}
 Days of the week {1271} {1380}
 Time of start of activation {1272} {1381}
 Time of end of activation {1273} {1382}
 Program 2 {1274} {1383}
 Days of the week {1275} {1384}
 Time of start of activation {1276} {1385}
 Time of end of activation {1277} {1386}
 Program 3 {1278} {1387}
 Days of the week {1279} {1388}
 Time of start of activation {1280} {1389}
 Time of end of activation {1281} {1390}
Contacts activated by an event {1455} {1456}
 Xtender OFF {1225} {1333}
 Xtender ON {1518} {1519}
 Remote ON/OFF input active {1543} {1544}
 Battery undervoltage alarm {1226} {1334}
 Battery overvoltage {1227} {1335}
 Inverter or Smart-Boost overload {1228} {1336}
 Overtemperature {1229} {1337}
 No overtemperature {1520} {1521}
 Active charger {1231} {1339}
 Active inverter {1232} {1340}
 Smart-Boost active {1233} {1341}
 AC-In present with fault {1234} {1342}
 AC-In present {1235} {1343}
 Transfer relay drawn {1236} {1344}
 AC-Out present {1237} {1345}
 Battery charging in bulk charge phase {1238} {1346}
 Battery charging in absorption phase {1239} {1347}
 Battery charging in equalization phase {1240} {1348}
 Battery charging in floating phase {1242} {1350}
 Reduced floating {1243} {1351}
 Periodic absorption {1244} {1352}
 Autonomy test running {1529} {1530}
Contacts activated by the battery voltage {1245} {1353}
 Dynamic compensation of battery level {1288} {1354}
 Voltage 1 active {1246} {1355}
 Voltage 1 {1247} {1356}
 Duration 1 {1248} {1357}
 Voltage 2 active {1249} {1358}
 Voltage 2 {1250} {1359}
 Duration 2 {1251} {1360}
 Voltage 3 active {1252} {1361}
 Voltage 3 {1253} {1362}
 Duration 3 {1254} {1363}
 Voltage for deactivation {1255} {1364}
 Duration over battery voltage for deactivation {1256} {1365}
 Deactivate if battery in floating phase {1516} {1517}

Contacts activated by inverter power or Smart-Boost {1257} {1366}
 Power 1 active {1258} {1367}
 Power 1 {1259} {1368}
 Duration 1 {1260} {1369}
 Power 2 active {1261} {1370}
 Power 2 {1262} {1371}
 Duration 2 {1263} {1372}
 Power 3 active {1264} {1373}
 Power 3 {1265} {1374}
 Duration 3 {1266} {1375}
 Power for deactivation {1267} {1376}
 Duration below power for deactivation {1268} {1377}

Auxiliary contacts 1 & 2 extended functions {1489}

Generator control {1490}
 Generator startup {1491}
 Duration of starter impulse {1492}
 Number of startup attempts {1493}
 Duration between the starter attempts {1494}

System {1101}

Remote entry {1537}
 Remote entry active {1545}
 Prohibits transfert relay {1538}
 Prohibits inverter {1539}
 Prohibits charger {1540}
 Prohibits Smart Boost {1541}
 Use a alternate max input current {1566}
 Alternate max. input current {1567}
Batteries priority as energy source {1296}
 Battery priority voltage {1297}
Buzzer alarm duration {1565}
Auto restarts {1129}
 After battery undervoltage {1130}
 Number of battery under-voltages allowed before final stop {1304}
 Leadtime to counting the battery under-voltages allowed final stop {1404}
 Number of critical battery under-voltages before final stop {1305}
 Leadtime to counting the critical battery under-voltages allowed before final stop {1405}
 After battery overvoltage {1131}
 After inverter or Smart-Boost overload {1132}
 Delay to restart after an overload {1533}
 After overtemperature {1134}
Autostart to the battery connection {1111}
System earthing {1484}
 Prohibited ground relay {1485}
 Continus neutral {1486}

Autotest of the battery autonomy {1473}
 Functionality test (weekly) {1474}
 Start manually a functionality test (weekly) {1495}
 Day in the week of the test {1475}
 Hour of the beginning of the test {1476}
 Duration of the test {1477}
 Autonomy test (monthly) {1478}
 Start manually an autonomy test (monthly) {1496}
 Months of the test {1479}
 Day in the month of the test {1480}
 Day in the week of the test {1481}
 Hour of the beginning of the test {1482}
 Duration of the test {1483}
 Reset of all the inverters {1468}

Multi Xtender {1282}

Three-phase integral mode {1283}
Multi inverters allowed {1461}
Multi inverters independents {1462}
Allow slaves standby in multi-Xtender system {1547}

Injection {1522}

Grid injection allowed {1127}
Max injection current {1523}
Battery voltage target for forced injection {1524}
Forced injection start time {1525}
Forced injection stop time {1526}

Studer Innotec

Rue des Casernes 57
CH - 1950 Sion
Tél: +41 (0)27 205 60 80
E-mail: info@studer-innotec.com
Web: www.studer-innotec.com

