

# Remote control and programming unit **RCC-02** and **RCC-03** for the Xtender

---

## User manual





## Reference

This document applies to versions of firmware V1.3.8 or higher of the remote control.  
If any doubt about your software version, you can check it with the menu « Information on the system » page 68

## Copyright

Copyright © STUDER Innotec. All rights reserved



## SUMMARY

|   |           |
|---|-----------|
| <b>Foreword</b> .....   | <b>6</b>  |
| Conventions .....   | 6         |
| Product recycling .....                                       | 6         |
| Studer Innotec contact details .....                          | 7         |
| Your reseller' contact details .....                          | 7         |
| <b>Warnings and caution</b> .....                             | <b>8</b>  |
| Warranty .....  | 8         |
| Limitation of responsibility .....                            | 8         |
| Safety instructions .....                                     | 8         |
| Acceptance of the software licence and updates .....          | 8         |
| <b>Introduction</b> .....                                     | <b>10</b> |
| Models concerned .....  | 10        |
| Controls and indicators .....                                 | 10        |
| SD card .....   | 11        |
| <b>Connection</b> .....                                       | <b>12</b> |
| Series connection .....                                       | 12        |
| RCC-02 .....  | 12        |
| RCC-03 .....  | 12        |
| Xtender XTH .....   | 13        |
| Xtender XTM .....   | 13        |
| <b>Dimensions</b> .....                                       | <b>14</b> |
| RCC-02 .....  | 14        |
| RCC-03 .....  | 14        |
| <b>Quick Start Guide</b> .....                                | <b>15</b> |
| Setting of the language .....                                 | 15        |
| Adaptation to the source .....                                | 15        |
| Adaptation to the battery .....                               | 16        |
| Activation of the function Smart-Boost .....                  | 17        |
| <b>Basic displays</b> .....                                   | <b>18</b> |
| <b>Activating and deactivating the combi Xtender</b> .....    | <b>20</b> |
| <b>Quick setting of the maximum source AC current</b> .....   | <b>21</b> |
| <b>Setting of the RCC remote control</b> .....                | <b>22</b> |
| Setting of the language {5000} .....                          | 22        |
| Other languages {5036} .....                                  | 22        |
| Setting of date {5002} and time {5001} .....                  | 23        |
| User level {5012} .....                                       | 23        |
| Drive the remote control to the user level basic {5019} ..... | 23        |
| Backup and restoring {5013} .....                             | 23        |
| Backup of all files {5041} .....                              | 23        |
| Messages backup {5030} .....                                  | 24        |
| Backup of remote control configuration {5015} .....           | 24        |
| Backup of Xtender configuration {5017} .....                  | 24        |
| Load Xtender parameters preset {5045} .....                   | 24        |
| Loading the remote control configuration {5016} .....         | 24        |
| Loading the Xtender configuration {5018} .....                | 24        |
| Loading a master file {5034} .....                            | 24        |
| Separator of the csv files {5032} .....                       | 25        |
| Adjustment of the contrast {5006} .....                       | 25        |
| Adjustment of the back-lighting {5007} .....                  | 25        |

|  |           |
|--|-----------|
| Back-lighting always off {5008} .....  | 25        |
| Duration of the back-lighting {5009} .....                                   | 25        |
| Red back-lighting if the Xtender is OFF and if there is a fault {5026} ..... | 25        |
| Inactivity period before returning to the standard display {5010} .....      | 25        |
| Duration of display for quick messages {5011} .....                          | 25        |
| Acoustic alarm {5027} .....  | 25        |
| <b>Information on the operating mode of the installation .....</b>           | <b>26</b> |
| Display of the parallel and three-phase systems .....                        | 28        |
| <b>Event history .....</b>   | <b>29</b> |
| Alarm: Low battery voltage (000) .....                                       | 29        |
| Stop: Battery voltage too low (019) .....                                    | 29        |
| Stop: High battery voltage (020) .....                                       | 29        |
| Message: AC IN synchronization in progress (003) .....                       | 30        |
| Error: Incorrect input frequency (004) .....                                 | 30        |
| Error: Input voltage too high (006) .....                                    | 30        |
| Error: Input voltage too low (007) .....                                     | 30        |
| Stop: Inverter overvoltage (008) .....                                       | 30        |
| Stop: Overtemperature (014) (015) (016) .....                                | 30        |
| Stop: Excessive battery voltage ripple (018) .....                           | 31        |
| Message: Power sharing exceeded; transfer prohibited (021) .....             | 31        |
| Error: Voltage at AC Out (022) .....   | 31        |
| Error: Phase not defined (023) .....   | 31        |
| Stored events .....  | 31        |
| <b>Setting of the combi Xtender .....</b>                                    | <b>33</b> |
| General .....  | 33        |
| Configuration on a system with several Xtenders .....                        | 33        |
| Utilisation and access levels .....  | 33        |
| Pre-defined functions of the auxiliary relays .....                          | 33        |
| Access to the parameters .....   | 34        |
| Access to a parameter by its number .....                                    | 34        |
| Access to a parameter via the menu .....                                     | 34        |
| BASIC CONFIGURATIONS {1100} .....  | 35        |
| Maximum current of the AC source (power sharing) {1107} .....                | 35        |
| Charge current {1138} .....  | 35        |
| Smart boost authorized {1126} .....  | 35        |
| Authorized inverter {1124} .....   | 36        |
| Activate immediate detection of grid outage (UPS) {1435} .....               | 36        |
| Standby level {1187} .....   | 36        |
| Restore default configurations {1395} .....                                  | 37        |
| MANAGEMENT AND BATTERY CYCLE {1137} .....                                    | 37        |
| Authorized charger {1125} .....  | 41        |
| Charge current {1138} .....  | 41        |
| Temperature correction coefficient {1139} .....                              | 41        |
| Undervoltage {1568} .....  | 41        |
| Level of battery undervoltage at no load {1108} .....                        | 41        |
| Dynamic compensation of the batteries undervoltage {1531} .....              | 42        |
| Duration of undervoltage before disconnection {1190} .....                   | 42        |
| Reactivation voltage after battery undervoltage {1110} .....                 | 42        |
| Acoustic alarm of the battery undervoltage {1196} .....                      | 42        |
| Adaptable low voltage disconnection {1194} .....                             | 42        |
| Adaptable battery low voltage disconnection maximum voltage {1195} .....     | 42        |
| Reset voltage of the adaptable correction {1307} .....                       | 43        |
| Increment of the adaptative correction {1298} .....                          | 43        |
| Maximum operating voltage {1121} .....                                       | 43        |
| Reactivation voltage after battery overvoltage {1122} .....                  | 43        |
| Battery maintenance voltage (floating) {1140} .....                          | 43        |

|  |    |
|--|----|
| Force passage to floating mode {1467} .....  | 43 |
| New cycle {1141} .....   | 43 |
| Force new cycle {1142} .....   | 43 |
| Voltage 1 for a new cycle {1143} and Duration at undervoltage 1 for a new cycle {1144} .....         | 43 |
| Voltage 2 for a new cycle {1145} and Duration at undervoltage 2 for a new cycle {1146} .....         | 43 |
| New priority cycle on the absorption and equalization phases {1149} .....                            | 44 |
| Restricted maximum cycle frequency {1147} .....  | 44 |
| Absorption phase {1451} .....  | 44 |
| Authorized absorption {1155} .....   | 44 |
| Absorption voltage {1156} .....  | 44 |
| Duration of absorption {1157} .....  | 44 |
| Completion of absorption released by the current {1158} .....  | 45 |
| Control of the maximum frequency of the absorptions {1160} .....                                     | 45 |
| Equalization phase {1452} .....  | 45 |
| Force an equalization {1162} .....   | 45 |
| Authorized equalization {1163} .....   | 46 |
| Equalization before absorption phase {1291} .....  | 46 |
| Equalization current {1290} .....  | 46 |
| Equalization voltage {1164} .....  | 46 |
| Duration of equalization {1165} .....  | 46 |
| Number of cycles prior to equalization {1166} .....  | 46 |
| Equalization at set intervals {1284} .....   | 46 |
| End of equalization activated by the current {1168} .....  | 47 |
| Reduced floating phase {1453} .....  | 47 |
| Authorized reduced floating phase {1170} .....   | 47 |
| Duration of floating before reduced floating {1171} .....  | 47 |
| Voltage of reduced floating {1172} .....   | 47 |
| Periodic absorption phase {1454} .....   | 48 |
| Authorized periodic absorption {1173} .....  | 48 |
| Periodic absorption voltage {1174} .....   | 48 |
| Duration of reduced floating before periodic absorption {1175} .....                                 | 48 |
| Duration of periodic absorption {1176} .....   | 48 |
| INVERTER {1186} .....  | 48 |
| Authorized inverter {1124} .....   | 48 |
| Output voltage {1286} .....  | 49 |
| Increase of the linear AC-Out voltage with the battery voltage {1548} .....                          | 49 |
| Maximum increase of the AC-Out voltage by the battery voltage {1560} .....                           | 49 |
| Frequency {1112} .....   | 49 |
| Increase of the frequency at full battery {1536} .....   | 50 |
| Frequency increase with the battery voltage {1549} .....   | 51 |
| Maximum increase of the frequency {1546} .....   | 51 |
| Standby and start (load detection) {1420} .....  | 51 |
| Standby level {1187} .....   | 51 |
| Duration between the standby pulses {1189} .....   | 52 |
| Number of standby periods {1188} .....   | 52 |
| Solsafe presence {1438} .....  | 52 |
| AC-IN AND TRANSFER {1197} .....  | 52 |
| Authorized transfer {1128} .....   | 52 |
| Delay before closing of the transfer relay {1528} .....  | 52 |
| Maximum current of the AC source (power sharing) {1107} .....  | 53 |
| Decrease of the source max. current with the input voltage {1527} .....                              | 53 |
| Smart-Boost authorized {1126} .....  | 53 |
| Authorization for exceeding the power sharing current without interrupting the transfer {1436} ..... | 53 |
| Activate immediate detection of grid outage (UPS) {1435} .....                                       | 54 |
| Tolerance on the immediate detection of a grid loss {1510} .....                                     | 54 |
| Transfer AC-In for delayed transfer opening {1199} .....   | 54 |

|  |    |
|--|----|
| Delay before passing to inverter {1198} .....  | 54 |
| Immediate transfer AC-In voltage {1200} .....  | 54 |
| Adjusting the charge current {1471} .....  | 54 |
| Minimum AC In voltage to authorize the charging {1309} .....                         | 54 |
| Adaptation range of the charge current according to the input voltage {1433} .....   | 54 |
| Correction coefficient for the voltage passing to the inverter {1295} .....          | 55 |
| Frequency delta accepted above End {1505} .....                                      | 55 |
| Frequency delta accepted below End {1506} .....                                      | 55 |
| Duration of erroneous frequency before disconnecting the transfer relay {1507} ..... | 55 |
| CONFIGURATION FOR AUXILIARY CONTACTS 1 AND 2 {1201} {1310} .....                     | 55 |
| Simple functions .....   | 56 |
| Reset all settings {1569} {1570} .....   | 56 |
| Switching mode {1202} {1311} .....   | 56 |
| Combination of events mode {1497} {1498} .....                                       | 57 |
| Limit the time of activation {1512} {1513} .....                                     | 57 |
| Maximum duration of activation {1514} {1515} .....                                   | 57 |
| Temporal restrictions {1203} {1312} .....  | 57 |
| Contacts activated with set schedules {1269} {1378} .....                            | 58 |
| Contacts activated by an event {1455} {1456} .....                                   | 58 |
| Xtender OFF {1225} {1333} .....  | 58 |
| Xtender ON {1518} {1519} .....   | 58 |
| Remote ON/OFF input active {1543} {1544} .....                                       | 58 |
| Battery undervoltage alarm {1226} {1334} .....                                       | 58 |
| Battery overvoltage {1227} {1335} .....  | 58 |
| Inverter or smart boost overload {1228} {1336} .....                                 | 58 |
| Overtemperature {1229} {1337} .....  | 59 |
| No Overtemperature alarm {1520} {1521} .....   | 59 |
| Active charger {1231} {1339} .....   | 59 |
| Active inverter {1232} {1340} .....  | 59 |
| Smart-Boost active {1233} {1341} .....   | 59 |
| AC In present with fault {1234} {1342} .....   | 59 |
| AC In present {1235} {1343} .....  | 59 |
| Transfer relay drawn {1236} {1344} .....   | 59 |
| AC Out present {1237} {1345} .....   | 59 |
| Battery charging in bulk charge phase {1238} {1346} .....                            | 59 |
| Battery charging in absorption phase {1239} {1347} .....                             | 59 |
| Battery charging in equalization phase {1240} {1348} .....                           | 59 |
| Battery charging in floating phase {1242} {1350} .....                               | 60 |
| Battery charging in reduced floating phase {1243} {1351} and .....                   | 60 |
| Battery charging in periodic absorption phase {1244} {1352} .....                    | 60 |
| Autonomy test in progress {1529} {1530} .....  | 60 |
| Contacts activated by the battery voltage {1245} {1353} .....                        | 60 |
| Dynamic compensation of the thresholds {1288} {1354} .....                           | 60 |
| Deactivate if the battery is in floating mode {1516} {1517} .....                    | 60 |
| Contacts activated by inverter power or Smart-Boost {1257} {1366} .....              | 61 |
| EXTENDED FUNCTIONS {1489} .....  | 61 |
| Generator startup {1490} .....   | 61 |
| Generator startup {1491} .....   | 61 |
| Duration of starter impulse {1492} .....   | 61 |
| Number of startup attempts {1493} .....  | 62 |
| Duration between the starter attempts {1494} .....                                   | 62 |
| SYSTEM {1101} .....  | 62 |
| Command entry {1537} .....   | 62 |
| Command entry active {1545} .....  | 62 |
| Transfer prohibited {1538} .....   | 62 |
| Inverter prohibited {1539} .....   | 62 |
| Charger prohibited {1540} .....  | 62 |

|  |           |
|--|-----------|
| Smart Boost prohibited {1541} .....                                    | 62        |
| Use a different value for the source maximum current {1566}.....       | 62        |
| Second maximum current of the source {1567}.....                       | 62        |
| Battery as priority energy source {1296}.....                          | 62        |
| Votage of the battery priority {1297}.....                             | 63        |
| Automatic restart {1129}.....  | 63        |
| Auto-start when switched on {1111}.....                                | 64        |
| Ground/neutral system {1484} .....                                     | 64        |
| Ground relay prohibited {1485}.....                                    | 64        |
| Neutral always connected {1486} .....                                  | 64        |
| Self-test of autonomy {1473} .....                                     | 64        |
| Weekly test {1474}.....  | 64        |
| Monthly test {1478} .....  | 65        |
| Manual start of a monthly test {1496}.....                             | 65        |
| Month of test {1479} .....   | 65        |
| Date of the monthly test {1480}.....                                   | 65        |
| Day of the weekly test {1481} .....                                    | 65        |
| Time of test start {1482}, Duration of test {1483}.....                | 65        |
| Reset of all inverters {1468}.....                                     | 65        |
| MULTI XTENDER {1282}.....  | 66        |
| 3-phase integral mode {1283} .....                                     | 66        |
| Multiple authorized inverters {1461} .....                             | 66        |
| Multiple independent inverters {1462}.....                             | 66        |
| Authorize the stand-by of the secondary inverters (slaves) {1547}..... | 66        |
| GRID-FEEDING {1522}.....   | 66        |
| Grid-feeding authorized {1127} .....                                   | 66        |
| Maximum grid-feeding current {1523}.....                               | 66        |
| Forced grid-feeding {1524} {1525} {1526}.....                          | 67        |
| <b>Information on the system .....</b>                                 | <b>68</b> |
| Remote controls.....   | 68        |
| Xtender.....   | 68        |
| <b>Updates .....</b>   | <b>69</b> |
| Updating process .....   | 69        |
| Compatibility .....  | 69        |
| <b>Application examples.....</b>                                       | <b>70</b> |
| General use : Inverter, Charger with grid .....                        | 70        |
| Use of a limited power source .....                                    | 70        |
| Use to increase the power on an existing installation .....            | 71        |
| Load shedding of the second priority loads .....                       | 71        |
| <b>Appendices .....</b>  | <b>72</b> |
| Appendix 1 : List of configuration interdependencies .....             | 72        |
| <b>Factory setting values .....</b>                                    | <b>74</b> |
| <b>Index of the numbers of parameters {xxxx}.....</b>                  | <b>83</b> |
| <b>Notes.....</b>  | <b>85</b> |

## FOREWORD

This manual contains information relating to the functioning of the RCC-02 and RCC-03 remote controls.

The use of certain functions sometimes requires increased knowledge in various fields. This manual cannot provide this. In case of doubt, please contact your reseller or installer.

## CONVENTIONS

|   |  |
|---|--|
|  | This symbol is used to indicate the presence of a dangerous voltage that is sufficient to constitute a risk of electric shock. |
|  | This symbol is used to indicate a risk of material damage.   |
|  | This symbol is used to indicate information that is important or which serves to optimize your system.                         |

### Terminology:

The following terms are used in the manual to provide greater clarity:

**RCC** is used to indicate the remote control RCC-02 or RCC-03 if the description applies to both models.


**Installation** is used to describe all the electrical equipment connected together. This may be the source (public grid or generator), and one or more Xtender(s) with or without remote control as well as electrical consumers.

**System** is used to describe the entirety of Xtenders with or without remote control.

**Xtender** or **combi** is used to describe one or more Xtender(s) connected together.

## PRODUCT RECYCLING

The RCC remote control conforms to the European directive 2002/95/EC on hazardous substances and does not contain the following elements: lead, cadmium, mercury, hexavalent chrome, PBB or PBDE.

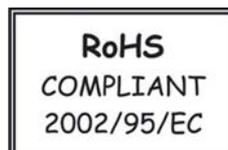

To dispose of this product, please use the service for the collection of electrical waste and observe all applicable obligations according to the place of purchase.

## STUDER INNOTECH CONTACT DETAILS

Studer Innotec  
Rue des Casernes 57  
CH – 1950 Sion

Tel. +41 (0)27 205 60 80  
Fax. +41 (0)27 205 60 88

Customer service: [info@studer-innotec.com](mailto:info@studer-innotec.com)  
Sales office: [sales@studer-innotec.com](mailto:sales@studer-innotec.com)  
Technical support: [support@studer-innotec.com](mailto:support@studer-innotec.com)

Website: [www.studer-innotec.com](http://www.studer-innotec.com)

## YOUR RESELLER' CONTACT DETAILS



## WARNINGS AND CAUTION

### WARRANTY

Studer Innotec warrants its full range of inverters to be free from defects in workmanship and materials for a period of 2 years from the date of purchase (max. 3 years after date of manufacture).

Any warranty claim will be refused if it is not sent back to the point of sale, or another place indicated by Studer Innotec, in appropriate packaging and accompanied by a copy of the dated proof of purchase.

No warranty claims will be accepted for damage resulting from handling, usage or processing that does not explicitly appear in this manual.

Cases of damage arising from the following causes are notably excluded from the warranty:

Inappropriate use

The presence of liquids in the device or oxidation resulting from condensation

Damage resulting from falls or mechanical shocks

The opening or alteration of the RCC remote control, carried out without the explicit authorization of Studer Innotec

Damage due to atmospheric surge voltage (lightning)

Damage from transportation due to inappropriate packaging

### LIMITATION OF RESPONSABILITY

The placement, commissioning, use, maintenance and servicing of the RCC remote control cannot be the subject of monitoring by Studer Innotec. For this reasons Studer Innotec assumes no responsibility and liability for damage, costs or losses resulting from an installation that does not conform to the instructions, from a defective functioning or from a deficient maintenance.

The use of Studer Innotec devices is the responsibility of the customer in all cases. This equipment is neither designed nor guaranteed to supply installations used for vital medical care nor any other critical installation carrying significant potential damage risks to people or the environment.

Studer Innotec does not assume any responsibility for the infringement of patent rights or other rights of third parties that result from using the devices.

The responsibility of Studer Innotec may not under any circumstances exceed the amount spent to purchase the product.

Studer Innotec reserves the right to make any modifications to the product without prior notification.

### SAFETY INSTRUCTIONS

Carefully read the following safety instructions in order to avoid any injury or risk of damaging this product and those that are connected to it.

Only use the connection cable specified and supplied by Studer Innotec. Under no circumstances should you use a damaged cable. In case of doubt about the condition of this device, it should be inspected by a qualified technician.

Do not use the RCC remote control in a humid environment.

Do not use the RCC remote control in an explosive environment.

### ACCEPTANCE OF THE SOFTWARE LICENCE AND UPDATES

By using the RCC remote control, you are accepting the terms and conditions of the following licence agreement. Please read this carefully.

Studer Innotec is granting a limited licence to use the software installed in this equipment in its executable binary format during the normal functioning of the product. The title, the property rights and the copyrights relating to this software, remain the property of Studer Innotec.

You acknowledge that the software is the property of Studer Innotec and that it is protected by copyright law according to the international copyright treaties.

You also acknowledge that the structure, organisation and software code are valuable commercial secrets belonging to Studer Innotec. You agree not to decompile, disassemble, alter or reverse either the unit or the engineering or make the software readable, irrespective of which part of the software, or to create any work whatever that is based on this software.

Updating must be done in the full awareness of the cause and is always the responsibility of the customer. Partial updates may cause ruptures in the compatibility or in its stochastic operation.

## INTRODUCTION

Congratulations! The purchase of an RCC remote control offers you unlimited access to the various functions of the devices in the Xtender series. Numerous configurations that can now be accessed allow you to optimize the operation of the installation. Despite all these options, the Xtender works on a simple basis.

Different figure scenarios as well as associated configurations are presented at the end of this manual.

The manual for the RCC remote control is divided into several distinct parts:

**The first part** is dedicated to the adjustments of the RCC remote control, whether this is the language used or the clock, which are sometimes necessary for the whole installation to work well.

**The second part** is concerned with immediate information on the installation. This gives access to the electric values such as the battery voltage, inverter load and many more.

**The third part** shows the functions for saving events occurring in the installation. This may be necessary for diagnosing a weakness or simply to check that the whole unit is working well during its whole service life.

**The fourth part**, which is more technical, presents various options for configuring the Xtender.

Do not change the configurations except when you have the technical knowledge; otherwise, the operation of the installation could be at risk or installation itself could be partly damaged.

**The fifth part** consists of more general items like information about the system, the updating process or examples of applications.

## MODELS CONCERNED

The RCC remote control may be connected to any Xtender, the use of which is clearly detailed in its operating instructions.

## CONTROLS AND INDICATORS


The RCC remote control is equipped with four operating keys as well as a graphic display with back-lighting. The function of the keys may change according to the context of utilisation and a reminder of the function in progress is given at the right of the display.

Generally the keys UP and DOWN are used to alter values or options relating to what is on the display and the two central keys are used to access, confirm or quit the item shown.

If the back-lighting function is activated, pressing one of the keys starts it up.



## SD CARD

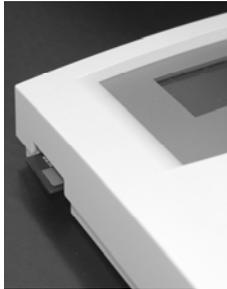

RCC-02

The RCC remote control is equipped with an SD (smart data)-type memory card reader. This card (supplied) is used for various functions described in this manual. It allows, amongst others, the following functions: recording statistics, updates, backups or restoration of configurations or adjustments. The filing system used for the data is the FAT system (FAT16). This card can be read using any standard SD card reader.

As far as the RCC-03 is concerned, the use of the SD card requires removing the remote control since the access to the SD lies behind.



RCC-03



**Do use exclusively the cards supplied:** the reading system of the remote control is not guaranteed with all SD card types.

- The cards formatted with the system FAT32 don't work
- The cards of more than 2GB are not compatible
- The cards type HC are not compatible

## CONNECTION

The RCC-02 remote control must be firmly fastened using 3 screws on a flat support. The remote control RCC-03 is meant to be integrated. It must be mounted by means of 4 screws (not supplied) on a flat place without any mechanical constraints to the front plate. Once the RCC remote control is fastened it can be connected to the inverter using the authorized cable only. If the cable is damaged or if a socket is detached, the cable must not be connected since this can lead the whole installation to malfunction.

A maximum of 3 remote controls can be connected to one unit.

### SERIES CONNECTION

To connect several RCC remote controls in series, you must activate termination at the two extremities on both units and deactivate it on the intermediate units.


Termination is activated on each Studer Innotec product by default.

Activate the termination on each element of the series connected with a single cable.


Deactivate the termination on each element of the series connected with two cables.

To deactivate the termination on an inverter or RCC remote control, turn the switch to the right.

### RCC-02

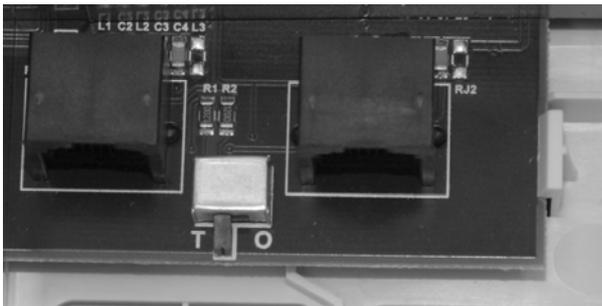


RCC-02 termination activated (position T)

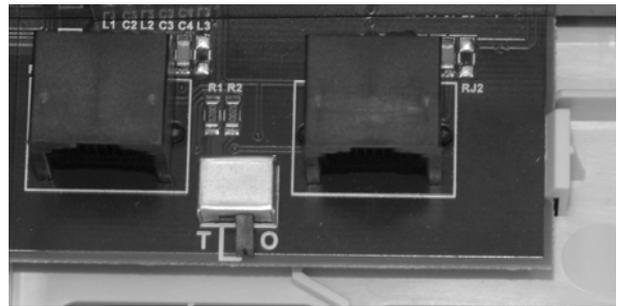


RCC-02 termination deactivated (position O)

### RCC-03

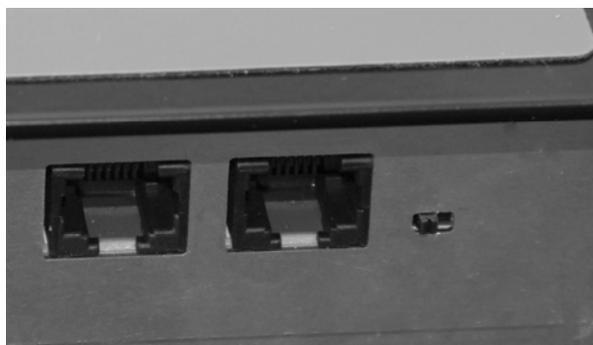


RCC-03 termination activated  
(left position)

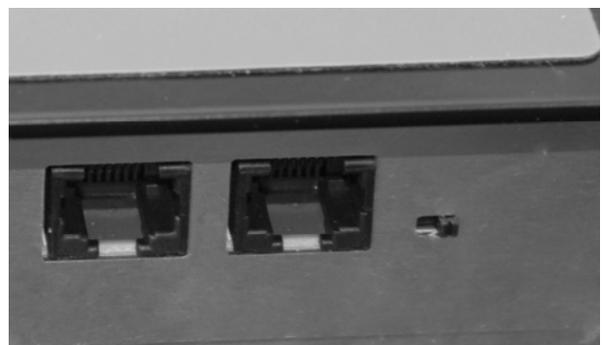

RCC-03 termination deactivated  
(right position)


## Xtender XTH

To activate the termination on the Xtender, move the two mini-switches to position T, and to deactivate it, move them downwards to position O.

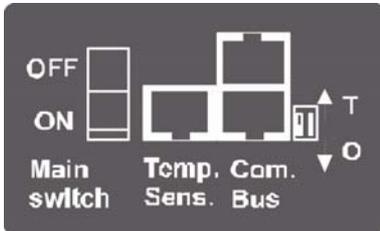


## Xtender XTM

On an Xtender type XTM, to activate the termination, put the mini-switch on position T, to deactivate it, move it to the right on position O.

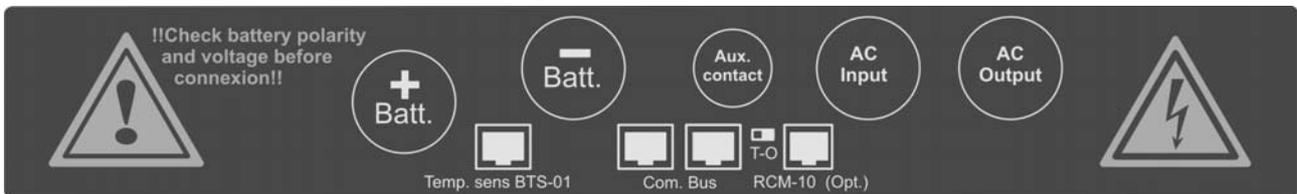


## DIMENSIONS

### RCC-02

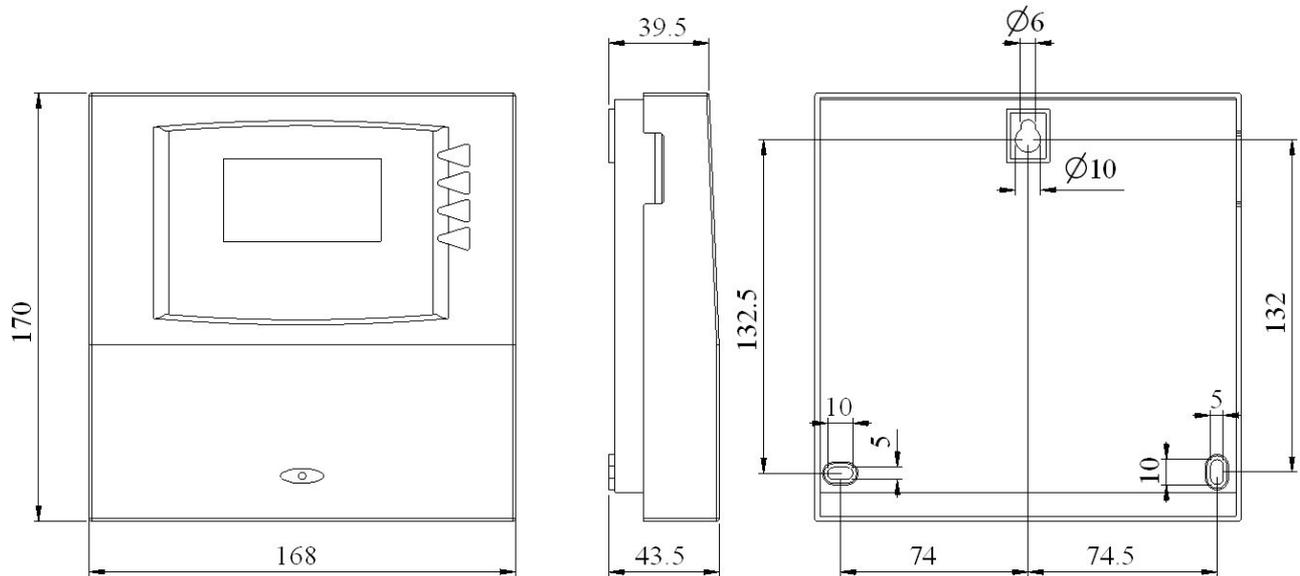

### RCC-03

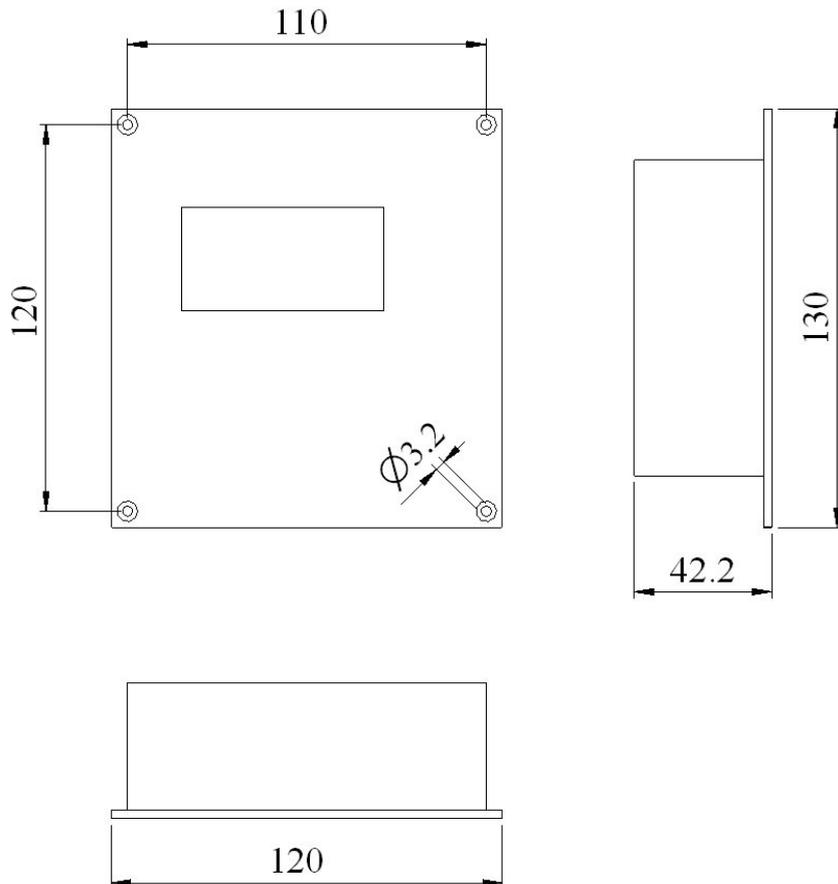


## QUICK START GUIDE


The remote control RCC gives you access to a many settings possibilities. However, in most cases the setting of two parameters only is required for the perfect running of your installation.

### SETTING OF THE LANGUAGE

To begin, set your remote control RCC for a display of the information in English.  
The basic display is:

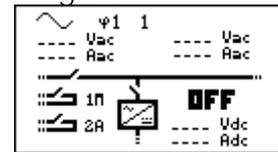

Press 1 time on the key "arrow downwards" to display the following screen:  
Once beyond this screen you can come back to it by means of the key "arrow upwards".

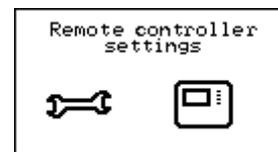

Press the key SET to enter the remote control settings. The screen of the language choice appears.



Press once more the key SET to modify the current language. The language then appears in reverse video.




With the keys "arrow upwards" and "arrow downwards" choose the language you wish. Then validate your choice by means of the key SET (OK).  
We can now leave the setting of the remote control with the key ESC.

### ADAPTATION TO THE SOURCE


It is a matter of indicating to the Xtender the power available to charge the batteries and to supply the users.

In order to adapt your installation to the source it is connected to, proceed as follows:


The basic display is:

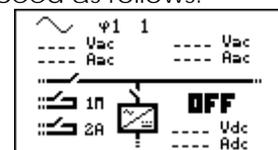

Press 2 times on the key "arrow downwards" to display the following screen:  
Once beyond this screen you can come back to it by means of the key "arrow upwards".

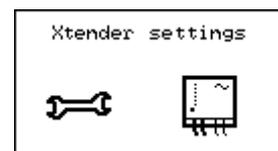

Press the key SET to access to the settings.  
Then again on the key SET to access to the basic parameters.

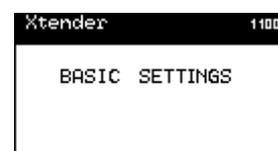

You can now adapt your installation to the source which it is connected to.  
Max. current of the AC source (power-sharing) {1107}.



|   |   |
|---|---|
|  | <p>In case of using the Xtender on a public grid, it is actually the value of the circuit breaker on the source side (fuse or breaker).<br/>In a building, this value lies generally between 8 and 16A.<br/>In the case of a shorepower or of a camping terminal, it lies between 2 and 6A.</p> <p>In case of using the Xtender on a genset, you can divide the genset power by the operating voltage (for instance for a genset of 3500VA, or 3500W, and 230V you get <math>3500/230=15.2</math>).<br/>Caution: the powers given on the gensets are often overestimated compared to their real performances. To obtain a useable value it is necessary to multiply this result by 0.6 or 0.7 (in that case <math>15.2*0.7=10.64</math>).</p> |
|---|---|

Press the key SET to modify the value of this parameter (it appears in reverse video). By means of the keys "arrow upwards" and "arrow downwards" change the value to adapt it to your source and validate your setting with the key SET (OK).


## ADAPTATION TO THE BATTERY

Charge current {1138}


In order that your Xtender manages the best possible the energy stored in your batteries and that it charges them optimally, it is necessary to indicate the current which they can be charged with. You will find this value in the technical data provided by your batteries manufacturer.

|   |   |
|---|---|
|  | <p>In the case of lead-acid batteries, one generally uses one tenth or one fifth of the battery capacity value.<br/>For instance for a 500Ah battery: <math>500/10=50A</math> to <math>500/5=100A</math>.</p> |
|---|---|


The basic display is:

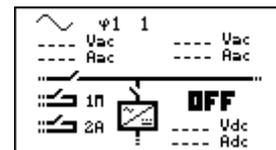


Press 2 times on the key "arrow downwards" to display the following screen:  
Once beyond this screen you can come back to it by means of the key "arrow upwards".

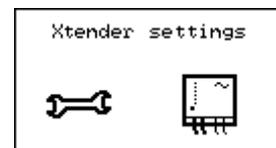

Press the key SET to access to the settings.  
Then again on the key SET to access to the basic parameters.  
With the key "arrow downwards", access the menu "Battery and charger cycle".

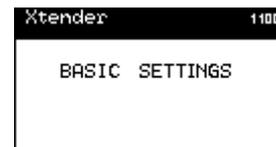

You are now going to set the charge current for the batteries:  
Press the key SET to modify the value of this parameter (it appears in reverse video). With the keys "arrow upwards" and "arrow downwards" change the value to adapt your battery and validate your setting with the key SET (OK).

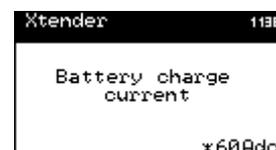


## ACTIVATION OF THE FUNCTION SMART-BOOST

If your AC-In source is limited in power, the Xtender can work as a support and add the missing power for your loads.


First of all, check that you have adapted the Xtender to your source (see previous chapter: Adaptation to the source {1107})

The basic display is:

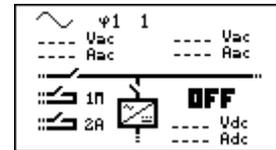

Press 2 times on the key "arrow downwards" to display the following screen:


Once beyond this screen you can come back to it by means of the key "arrow upwards".

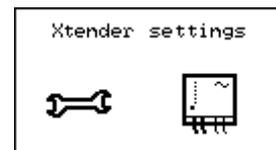


Press the key SET to access to the settings.

Then again on the key SET to access to the basic parameters.

Press 2 times on the key "arrow downwards".

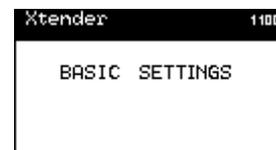

You reach now the parameter for authorization of the Smart-Boost function {1126}.

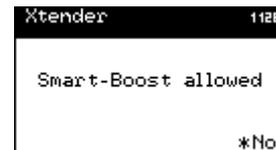


You can now authorize the function. Press the key SET to access this parameter in modification mode, then the keys UP or DOWN to change the option. To end up, validate with the key SET.



## BASIC DISPLAYS

When the remote control is connected to an Xtender, it is possible to access to different display menus divided into distinct categories.



Information on the system

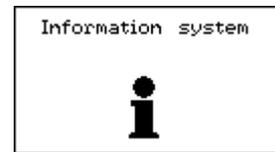

The history of events occurring in the installation




Real time information displays on the operating mode of the installation

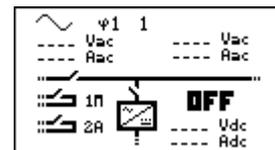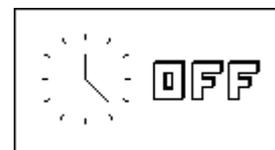


Information

Adjustment of RCC remote control options

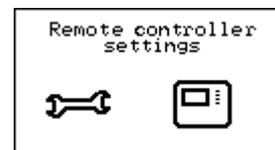

Adjustment of configurations on the Xtender(s)

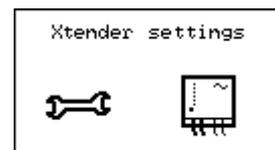



Setting

To go from one display to the other, use the keys UP and DOWN on the RCC remote control.  
To visualize or modify the options of one of the basic displays, press the key SET when this one is displayed.

 Depending on the components connected to your system, it is possible that other displays complete this serie.

In the case of a system in 3-phase or in parallel, the following displays are available too:


Real time display of information on the state of running of the installation

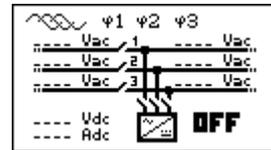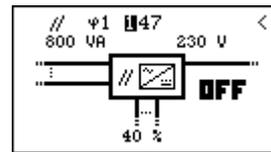

## ACTIVATING AND DEACTIVATING THE COMBI XTENDER

When one of the displays is visible, it is possible to activate or deactivate the Xtender. To do this, simply press the key ESC. The key request on the screen indicates whether you are going to activate or deactivate the unit.

Once the key has been pressed, you must confirm your choice by using the key YES. If you do not want the action to be carried out, it can be cancelled by pressing the NO key.

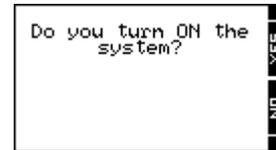

Note: This is a comprehensive signal and leads to the stoppage or starting of all Xtenders connected to the remote control.

## QUICK SETTING OF THE MAXIMUM SOURCE AC CURRENT


It is possible to access directly to the setting of the AC source maximum current (Power sharing) {1107} with the key SET (FAST) from the simplified display (clock).



For the users travelling, the available source often differs in power. This quick access menu allows to easily set the maximum current available.

## SETTING OF THE RCC REMOTE CONTROL

This screen gives you access to the remote control basic settings. From one of the basic menu items, use the keys UP and DOWN until reaching the item "Adjustment of the remote control", then confirm by using the key SET.

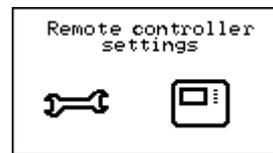


When the item to be modified appears on the screen, press the key SET to be able to modify it. This value then displays in inverse video. Now use the keys UP and DOWN to modify it. Once the correct value has been obtained, confirm by using the SET key or exit without modifying by using the key ESC.



 Each configuration has a unique ID displayed top right (see example below) these numbers are indicated between curly brackets in this manual : {xxxx}

EXAMPLE to modify the current date  
Go to the following screen using the UP and DOWN keys.  
Press the key SET to access the remote control adjustment.

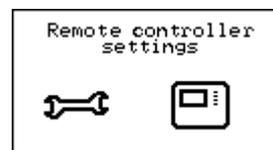

Go to the following screen using the key DOWN.  
Press the key SET to modify the configuration



Set the correct date using the keys UP and DOWN  
Go to the adjustment of the month using the key SET  
Also set the month using the keys UP and DOWN  
To complete, go to the year adjustment using the key SET  
After having adjusted the year using the keys UP and DOWN, confirm using the key SET.



## SETTING OF THE LANGUAGE {5000}

The default language is English and the Xtender can store up to four languages simultaneously. This configuration allows you to choose one of them.

## OTHER LANGUAGES {5036}

The default available languages in the remote control are: English, French, German and Spanish. It is possible to change the languages memorized in the remote control. To do this you must have a SD card with the file for the language you wish to use. Ask your reseller to know what languages are available.

The first language available (English) can not be modified.

To change a language, follow this process:

Make sure you have a SD card with the file for the language you wish to use

Insert the SD card and wait for an possible automatical update of the remote control

Enter the menu „other languages“ {5036}

Choose the language you wish to replace (second, third or fourth {5038}{5039}{5040}) and select the new language

The updating is done automatically

## SETTING OF DATE {5002} AND TIME {5001}

The Xtender has a perpetual calendar and an internal clock powered by a backup battery. The correct adjustment of the date and time allows accurate recording of events occurring in the installation as well as correct use of time-related functions, e.g. the disabling of the auxiliary relays during the night.

## USER LEVEL {5012}

The setting of the user level allows you to choose the access to the Xtender according to your level of expertise.

The **INFO ONLY** level may be selected by entering the code 460081. This level does not allow the Xtender configurations to be modified, it only allows information to be displayed on the system.



Use the INFO ONLY level after adjusting the configurations if the remote control is located in a public place or if it is accessible by people who are not authorized to carry out adjustments on your system. You may change the level at any time to make new adjustments, by entering the appropriate code.

The **BASIC** level allows you to configure basic Xtender functions, limiting the field of actions to simple configurations. Please note that the incorrect adjustment of basic configurations may lead to the malfunctioning of the installation. This level is selected by default. To return to this level after a change, enter code 943274.

The **EXPERT** level allows access to more complex Xtender configurations and this level of usage may only be used with extensive specialist knowledge. To access the expert level, enter code 426468.

## DRIVE THE REMOTE CONTROL TO THE USER LEVEL BASIC {5019}

You can with this option bring the remote control back to the level "user Basic".



Use this function at the end of the system setting to go out of the EXPERT mode.

## BACKUP AND RESTORING {5013}

The different options of this menu allow you to do a safety backup of your system or various actions in relation to the SD card.



The remote control RCC is not compatible with all types of SD cards. Cards with FAT32 formatting system are not supported, therefore cards with more than 2GB can not be used.

## Backup of all files {5041}

This function enables to save in one operation all files linked to the remote control:

The files of events history

The files of the remote control parameters

The files of the Xtender parameters



Caution : while using this function with a 9 Xtender system, the process of copying files can last up to 15 minutes.

## Messages backup {5030}

This parameter allows to save the message files (Event history) on the SD card. The data are written in a CSV format file that can be read by almost all spreadsheets and word processing softwares. The file is written in a directory called STATS and in a subdirectory which shows the backup date.

## Backup of remote control configuration {5015}

This function writes useful configurations for the operation of the remote control on to the SD card. You can use this function to do a backup of the remote control parameters or to visualize on a computer the values that you have selected.

The file in CSV format is written in a directory called CSVFILES\« FID »\DATE.

The directory FID indicates the unique identification of your remote control and contains the subdirectory which indicates the date of backup.

## Backup of Xtender configuration {5017}

This function writes the operational configurations on to the SD card of the Xtender. You can use this function to do a backup of the remote control parameters or to visualize on a computer the values that you have selected.

The file in CSV format is written in a directory called CSVFILES\« FID »\DATE.

The directory FID indicates the unique identification of your Xtender and contains the subdirectory which indicates the date of backup.

## Load Xtender parameters preset {5045}

Libraries of predefined parameters are available for specific applications (such as Solsafe). From this menu you can load one of these libraries. You can also combine various libraries.



If two or more libraries handle the same parameter, the value of the last library loaded is used.

## Loading the remote control configuration {5016}

Reload the remote control configurations. If several files have been created with different remote controls, the loaded file is the one that corresponds to the remote control being used. If the parameters have been backed-up several times at different dates, the last backup will be loaded.

## Loading the Xtender configuration {5018}

Reload the Xtender configurations. If several files have been created with different Xtenders, the loaded file is the one that corresponds to the Xtender being used. If the parameters have been backed-up several times at different dates, the last backup will be loaded.

## Loading a master file {5034}

If your installer provides you with a file of parameters for your installation, you can load it by means of this menu. Insert the SD card and launch the loading by pressing the key SET. Caution, the various operations carried out by this process take some minutes.

## **Separator of the csv files {5032}**

This option allows you to choose the field separator for the csv file. As per the operating system and the language that you are using, the separator must be adapted in order to be correctly interpreted. In the case of systems in English, the comma (,) is normally used.

## **ADJUSTMENT OF THE CONTRAST {5006}**

The adjustment of the contrast allows the display to be adjusted in terms of lighting and to a reading position that allows excellent visibility.

## **ADJUSTMENT OF THE BACK-LIGHTING {5007}**

### **Back-lighting always off {5008}**

This adjustment allows you to activate or deactivate the back-lighting. Its activation gives access to an additional configuration that is the duration of the back-lighting.

### **Duration of the back-lighting {5009}**

This configuration allows you to determine after how much time of inactivity the back-lighting will switch off.

### **Red back-lighting if the Xtender is OFF and if there is a fault**

#### **{5026}**

If the Xtender is stopped by a fault (battery undervoltage, overload, etc.) the back-lighting flashes red.

## **INACTIVITY PERIOD BEFORE RETURNING TO THE STANDARD DISPLAY {5010}**

This configuration allows you to determine the time after which the display returns to the basic display if no key is pressed.

## **DURATION OF DISPLAY FOR QUICK MESSAGES {5011}**

Messages of low importance are displayed for a limited period. This adjustment enables you to adapt this duration at your convenience.

## **ACOUSTIC ALARM {5027}**

In the event of an alarm an acoustic signal is activated. You can always deactivate this signal by using this configuration.

## INFORMATION ON THE OPERATING MODE OF THE INSTALLATION


There are two different views for displaying information on the system :

A simplified and a configurable display. When one of these two displays is visible, it is possible to activate or deactivate the system. For further information, please refer to the paragraph on activating and deactivating the combi Xtender.

The simplified display only indicates the current time and the mode of the Xtender (ON or OFF)



The configurable display shows the system in its entirety, represented by a synopsis of distinct information blocks.

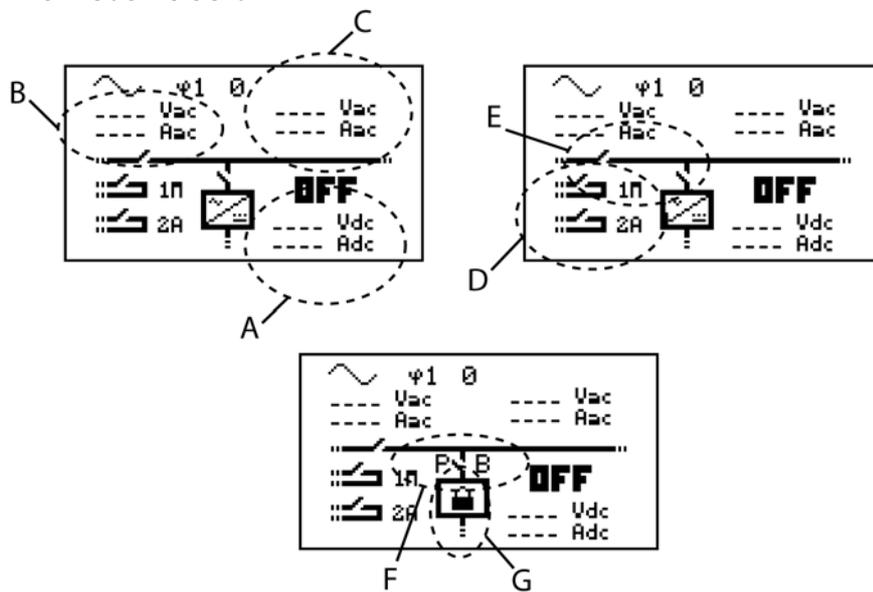

- Information on the battery (A)
- Information on the grid input (B)
- Information on the grid output (C)
- Information on the auxiliary contacts (D)
- Information on the transfer and output relays (E)
- Information on the power sharing mode of the Smart-Boost (F)
- Information on possible locking of the function (G)

Two pieces of information related to blocks A, B and C may be viewed simultaneously. To change displayed information, proceed as follows:


Press the key SET (one of the pieces of information is displayed in reverse video).

Go to the value to be changed by using the UP and DOWN keys.

Enter into modification by using the key SET. You may now view the values that can be displayed in this area.

Using the keys UP and DOWN, select the new information that you want to see appearing.

Confirm your selection by using the key SET.

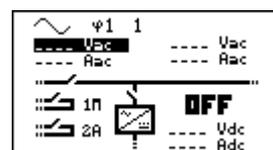

To escape at any time, use the key ESC to return to the starting display.  
The following information is available:

**With regard to the grid input**

AC In input voltage  
AC In input current  
AC In input power  
Input frequency  
The value of the source max current (power sharing)  
Energy from AC-In of the previous day  
Energy from AC-In of the current day

**With regard to the grid output**

Output voltage  
Output current  
Output power  
Output frequency  
Consumers energy of the previous day  
Consumers energy of the of the current day

**With regard to the battery**

Battery voltage  
Actual charge current of the batteries  
Programmed charge current  
Ripple voltage of the batteries  
Charging phase (bulk charge, absorption, float charge, etc.)  
Dynamic compensation of the battery (compensation of the thresholds due to the internal resistance of the battery)  
Operating mode (inverter, charger, etc.)  
Battery temperature (if a sensor is present)  
The battery temperature's inherent compensation (if a sensor is present)  
Discharge of battery of the previous day  
Discharge of battery of the current day

If a piece of information is not available, the screen displays - - - -.

Information on the auxiliary relays as well as the output and transfer relays appears as open or closed in the synopsis according to their current state.

Auxiliary relays are indicated with their corresponding number as well as the letter A if they are operating in automatic mode and M if they are controlled manually.

Other letters may be displayed with regard to specific programming. Please refer to the corresponding chapter.

The general operating mode of the combi Xtender is displayed in large letters on the two visualisation screens (ON or OFF).



## DISPLAY OF THE PARALLEL AND THREE-PHASE SYSTEMS

While using several Xtenders in parallel or in three-phase, an additional view is available. This view summarizes the various electrical values of the system. Like for the display of a system with one single Xtender, you can access to the displayed values in order to modify them.

Each summarized view gives access to the display of one Xtender.

In the view of the three-phase, you have access to the detail of one phase by pushing the key SET and then, by pushing UP or DOWN, you can choose the phase you want to see displayed in details.

If the phase consists of several Xtenders in parallel or if the system is a single phase one but with several Xtenders in parallel, you can then have access to the display of each Xtender by selecting in the view parallel one of the three available inverters.

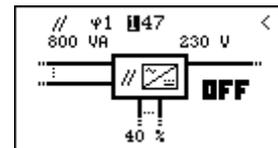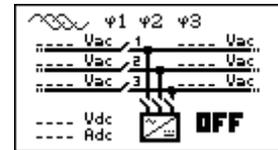

## EVENT HISTORY

This screen allows you to view the various events that have occurred in the installation.



The events that occur in your installation are displayed on the remote control screen. The events are classified within two categories:

The events that may have serious consequences are displayed up to the moment where the user confirms that he has taken note of them by pressing on an RCC remote control key. These events are recorded in the event history and may be consulted subsequently.

Events not posing a risk are indicated briefly on the display and then disappear. Some are recorded in the event history and others are not (see the list of elements stored further on).

On the other hand, the messages may have different origins and they are preceded by an attribute to enable you to understand the importance:

**Message** : normal event but one that conditions or influences the operation of the Xtender.

**Error**: an event that prevents the correct or normal operation of the Xtender.

**Alarm**: an event that may cause a malfunction of the installation if it is not corrected.

**Stop**: The system had to be stopped as a major event is preventing its operation.

### ALARM: LOW BATTERY VOLTAGE (000)

The battery is almost completely discharged. If the situation persists, the inverter function of the Xtender will be deactivated.

Solution: Recharge your batteries more frequently or increase the power available for charging (e.g. with more solar generators).

|   |  |
|---|--|
|  | This message is generated in conjunction with the undervoltage of the battery configuration {1108} and not with acoustic alarm {1196}. |
|---|--|

|   |   |
|---|---|
|  | The service life of the batteries is greatly conditioned by their state of charge. Prolonged or repeated operation at a low charge may cause damage. With the Smart-Boost function activated, it is also possible to discharge the batteries even if connected to a source of energy. |
|---|---|

### STOP: BATTERY VOLTAGE TOO LOW (019)

The Xtender inverter and boost functions are deactivated since the batteries are discharged.

Solution: Recharge your batteries to automatically reactivate these functions.

### STOP: HIGH BATTERY VOLTAGE (020)

The battery voltage present on the Xtender is too high. The system is stopped for safety reasons.

Solution: Check that the rated voltage of the battery conforms to that required by your Xtender.

Where an external charger is being used, check that this is charging the batteries at a voltage admissible for the Xtender.

### MESSAGE: AC IN SYNCHRONIZATION IN PROGRESS (003)

A valid voltage has been detected on the AC IN input and the Xtender is synchronizing. Once synchronized, the consumers will be transferred to it and the battery will be charged.

|   |  |
|---|--|
|  | Note: It is possible to prohibit the transfer or the battery charging. |
|---|--|

### ERROR: INCORRECT INPUT FREQUENCY (004)

The voltage at AC IN does not have a frequency included in the admissible range for the Xtender.  
Solution: When operating on a generator, check its speed.

|   |  |
|---|--|
|  | If you are not equipped to measure the generator frequency, measure its voltage with no load. Indeed, if the voltage is correct, the frequency is generally correct as well. |
|---|--|

### ERROR: INPUT VOLTAGE TOO HIGH (006)

The voltage at the AC IN is too high for the Xtender and represents a danger for the consumers; the transfer relay is not activated.  
Solution: Reduce the voltage on the AC IN input to come into an admissible range.

### ERROR: INPUT VOLTAGE TOO LOW (007)

The voltage at AC IN is too low for the Xtender. The transfer of consumers and battery charging are not activated.  
Solution: Reduce the voltage on the AC IN input to come into an admissible range.

|   |   |
|---|---|
|  | Do not increase the voltage of the generator during the battery charging or when the consumers are connected to it: If the consumers stop, an overvoltage may arise which will destroy components of your installation. |
|---|---|

|   |  |
|---|--|
|  | If the transfer of the consumers is carried out and the message appears some seconds after the start of the battery charging, check that you have not adjusted the charging voltage of the batteries too high in relation to your source.<br>Also check the adjustment of the power sharing configuration. |
|---|--|

### STOP: INVERTER OVERVOLTAGE (008)

The consumers require more power than the Xtender inverter can supply.  
Solution: Adapt the maximum power output of your consumers to the maximum power output of the Xtender.

### STOP: OVERTEMPERATURE (014) (015) (016)

The Xtender stops due to overheating.  
Solution: Adapt the maximum power output of your consumers to the rated power output of the Xtender.  
Check that the ventilation holes of the Xtender are not obstructed.  
Check that the Xtender is not situated in a place where the ambient temperature is too high.



The overtemperature is disadvantageous for the service life of certain electronic components. If the stoppages due to overtemperature happen frequently, corrective measures will be required.

## **STOP: EXCESSIVE BATTERY VOLTAGE RIPPLE (018)**

The Xtender is stopped as the voltage ripple at the battery cables is too high.  
Solution: Check that the battery cable section is correct.  
Check the tightness of the battery cables.  
Check that the charge current matches your battery.  
Check the state of your batteries.



The use of batteries of an inappropriate capacity may also cause this error message. In this case, reduce the charge current or lower the power output of the consumers.



The voltage ripple on the batteries may be caused by their ageing. In this case, lower the charge current.

## **MESSAGE: POWER SHARING EXCEEDED; TRANSFER PROHIBITED (021)**

The power output of the consumers exceeds the one specified for the source, and the transfer relay cannot be activated. The Xtender operates in inverter mode.  
Solution: Check that the configuration of the maximum current for the source corresponds to the maximum current of the source connected at AC In.  
Reduce the number or power output of the consumers.



In this case, the transfer relay is not activated and the recharging of the batteries cannot take place. If this situation continues, you might discharge your batteries.

## **ERROR: VOLTAGE AT AC OUT (022)**

An unwanted voltage is present at AC Out.  
Solution: Check the installation cabling. No source should be connected to the Xtender output (AC Out).  
In case of connection to a grid inverter, the function « solsafe presence » must be activated.

## **ERROR: PHASE NOT DEFINED (023)**

The Xtender cannot operate without the phase being defined.  
Solution: Check the phase definition jumper in the cable connection zone.  
Refer to the Xtender manual for more information.

## **STORED EVENTS**

Events are stored in the remote control. Any system not permanently connected to a remote control does not store the events.

- Disconnection due to inverter overload
- Disconnection due to battery overvoltage
- Disconnection due to battery undervoltage
- Disconnection due to Xtender overtemperature
- AC In voltage too high
- Bulk charge too long (risk of short-circuited element)
- Battery voltage ripple too high (charge current too high for the battery used)
- Voltage at AC Out

Results of the autonomy tests  
Overrunning of the power source and transfer relay opening

To access the event history via one of the basic displays, change the screen by using the keys UP and DOWN until the "event history" screen appears and then validate using the key SET.

The number shown at the top right indicates the message number. In a system with several Xtenders, the events are presented in chronological order and the lower line indicates the Xtender to which the event refers.

Each event is recorded as well as the date and time of its occurrence. The keys UP and DOWN allow you to view all the events that have occurred.

Where there is a system with multiple Xtenders, each message also contains the number of the Xtender that has generated the message.

Quit the message display by using the key ESC.




```
History 0021
12h03 06.01.2000
Error : Input
voltage too low
Inverter 1
```

## SETTING OF THE COMBI XTENDER

A complete list of the accessible parameters can be found at the end of this manual.

### GENERAL

The Xtender inverter/charger has been designed to ensure that all basic functions of an energy management system work completely independently. In its original version, no adjustment is usually required.

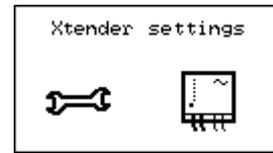

Caution, a hazardous setting of the parameters may lead to a disfunctioning of the whole installation, or event to damaging it.

Nevertheless, in certain installation conditions, it may be necessary to adjust some operating configurations. This is why the RCC remote control gives access to the adjustment of many configurations and within a range largely exceeding the usual values. Use these adjustment options with care and only with due specialist knowledge. Changing configurations is not the responsibility of Studer Innotec. Please refer to the chapter on limitation of responsibility for more information on this topic.

### CONFIGURATION ON A SYSTEM WITH SEVERAL XTENDERS

When there is a system to which several Xtenders are connected, the changing of a configuration is global. It will be applied to all the Xtenders connected together. To carry out adjustments on a single Xtender, it is necessary to remove the connection cables and only keep the connection between the remote control and the Xtender on which the different adjustment is being carried out. It is thereby possible to configure each Xtender of a system independently. Once the configuration has been carried out, the original connection can be re-established.



Note: If you have carried out an individual configuration, once a configuration has been changed, the system reconnected by the data connection cable modifies this configuration for all the Xtenders connected.



Caution, in case of different connection of the devices, the rule regarding terminations must be applied.

### UTILISATION AND ACCESS LEVELS

The functions described below refer to the EXPERT level. Depending on the user level selected, access to all the functions may not be possible. Refer to the chapter on setting the user level of the remote control for more information on this subject.

### PRE-DEFINED FUNCTIONS OF THE AUXILIARY RELAYS

The two auxiliary relays (dry contacts) of the inverter-charger Xtender are already programmed with factory settings and can be activated with various functions. They react to different signals. The factory settings depend on the Xtender models. For more information on the auxiliary contacts pre-set functions, please see the inverter-charger Xtender manual.



Caution, if your installer or supplier has done pre-settings, these pre-set functions may have been changed.

## ACCESS TO THE PARAMETERS

You can access to the parameters by two different ways. First one is access by its reference number and second one is access by the thematic menu.



### Access to a parameter by its number

Each Xtender parameter is directly accessible by its unique reference number. This function can be used in order to change the value of a parameter or to consult its set value.

If you know the reference number of a parameter that you want to change, you can access to it directly with this menu. Move with the keys UP and DOWN to highlight the parameter then select it by the key SET. You have then the possibility to change the value of this parameter.

For each parameter, its set value is written opposite to it. If a parameter does not have a value displayed, this means that you do not have the user level required to change the value or that the parameter does not have a value (a menu title for instance).

When you want to access to a parameter which access level is superior to yours, it is possible to do it only with a code: select the parameter that you want to change with the keys UP and DOWN then press the key SET. The remote control then displays a 4 digits number. By communicating this number to your installer, you can receive an activation number which will allow to modify the wanted parameter.

The key received is valid only for one single access to the wanted parameter. This is why it can be necessary to be online with your installer when it comes to do several changes.

### Access to a parameter via the menu


The Xtender configurations are divided into several categories:

- Basic configurations
- Battery and its charge cycle configurations
- Inverter configurations
- The parameters of charger and input signals
- First auxiliary contact configurations
- Second auxiliary contact configurations
- Auxiliary contact extended function configurations
- The parameters of the system
- Three-phase or parallel operation configurations
- The parameters of grid feeding

According to the user level selected, it is possible to access several hundred configurations. For this reason, each configuration has a unique ID displayed top right. In the event of questions on the subject of a configuration, ensure that you have this number at hand.

When you modify a configuration, a star is displayed to the left of the value if it corresponds to the factory-set value.

The various configurations can be adjusted within a large range. Nevertheless, some configurations are interdependent and cannot be adjusted beyond the value of other configurations. You can consult the list of dependencies on the list in appendix 1.

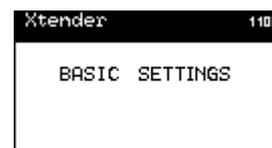


## BASIC CONFIGURATIONS {1100}

The basic configurations serve to adapt the Xtender characteristics to the elements that surround it. Use these configurations in order to optimize the operation of the inverter/charger and to benefit from the maximum performance of your installation.

### *Maximum current of the AC source (power sharing) {1107}*

Adjust this configuration in the event of connection to a limited power source, for example, a generator of moderate power output or a dock or camping connection. The adjustment of this value limits the instantaneous power consumed from the source in charger mode. The power available is attributed by first priority to consumers and then to battery charging. If the consumption level changes, the battery charge current is automatically adjusted.

Power available and used to recharge the batteries  
Maximum AC source current (adjusted to 10 A here)  
Consumer current  
Power supplied by the inverter (Smart-Boost function)

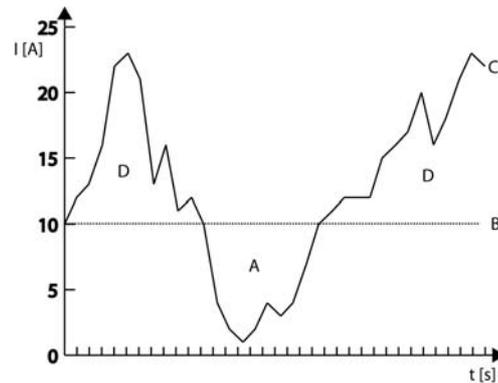

**i** If the consumption level is higher than the controlled level, the maximum source current will be exceeded, except when the Smart-Boost function is activated.

**i** It's possible to access faster to this function, please refer to the page 15

### *Charge current {1138}*

Use this value in order to adapt the charge current to the battery. With this configuration, the maximum current to be used for charging your battery is adjusted. The current appropriate for the battery can be found in its technical data. The value set by this configuration is used during the whole bulk charge phase.

**i** Use this setting to adapt the charge current only with regard to the battery. To adapt the charge current to your source, use the parameter for maximum current at the source (power sharing) {1107}. The right setting of these two values is essential for correct operation as well as the lifetime of your installation.

### *Smart boost authorized {1126}*

The function Smart-Boost is deactivated by default. In this case no assistance will be provided to the source and if the source is overloaded, the energy from the battery is not drawn. Do authorize this function if you have a low power source (generator, shore power or camping plug) and you want more power to be available.

**i** When the Smart-Boost function is active, it is possible to discharge the batteries, even if the Xtender is connected to a source and the charger is active.


### *Authorized inverter {1124}*

This configuration authorizes operation in inverter mode. If the inverter is deactivated, a voltage will be present on the output terminals (AC OUT) only if a correct voltage is present at the input (AC-in) and the transfer is not prohibited.

 This function can be used for supplying non-critical consumers while ensuring that the battery is not discharged even if the source is faulty.

 Note, that if the Smart-Boost function is activated, it is possible to discharge the battery even if the inverter function is locked.

Where there is lock on the inverter, charger or transfer function, a small padlock is displayed on the configuration display.

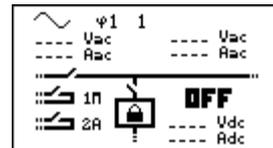

### *Activate immediate detection of grid outage (UPS) {1435}*

This parameter allows to starting the inverter mode as quick as possible in case of fluctuations of the AC-In grid. This function is useful when it comes to very sensitive loads that require an uninterruptible power supply (UPS). If this function is active, being connected to a fluctuating source (weak grid or unstable generator) will lead to a frequent switching between inverter and charger modes by opening and closing of the transfer relay.

### *Standby level {1187}*

The standby function allows energy to be saved if there is no consumer present at the inverter output. In this case, the inverter disconnects its output and periodically emits a load search pulse. If a consumer is detected, it goes back into operational mode while measuring the power supplied and returns to standby if the consumer is deactivated.

This configuration allows adjustment of the power output at which the inverter goes into standby mode.

Proceed as follows to adjust this configuration:

Make sure that the inverter mode is active (no voltage present at the AC In input). The input voltage is 0 and the input relay is indicated as open in real time on the information screen.

Increase the standby level value {1187} to the maximum

Activate the smallest consumer that can be detected and ensure that all the others are deactivated.

Wait for the inverter to pass to standby, and the consumer then engages intermittently around once a second.

Progressively reduce the standby level value {1187} until the consumer runs permanently. If the consumer works for several seconds then stops, decrease the value of the standby level again.

An adjustment value between 0 and 100 is displayed. The value 100 represents the minimum sensitivity (biggest consumer detected).

 If you would like to deactivate the standby function, it is sufficient to adjust the detection level to 0. In this case, the Xtender remains permanently activated if it is working in inverter mode.

### *Restore default configurations {1395}*

Use this function to re-establish the original combi Xtender adjustments.

|   |  |
|---|--|
|  | If your installer has carried out settings while commissioning your installation, this function brings back these settings and not the factory settings. |
|---|--|

### **MANAGEMENT AND BATTERY CYCLE {1137}**


These configurations are intended to adjust the battery charge cycle to the data supplied by its manufacturer. The basic battery cycle is described in the Xtender manual.

|   |  |
|---|--|
|  | Caution : the Xtender charger is meant only to the charge of lead batteries. |
|---|--|


|   |   |
|---|---|
|  | Note: Incorrect values may lead to early ageing or even the destruction of the batteries. |
|---|---|

For further information, contact your battery supplier who will give you the correct values.  
The graphic presentation of the battery cycle shows the options for linking the various phases:


### Minimum battery cycle

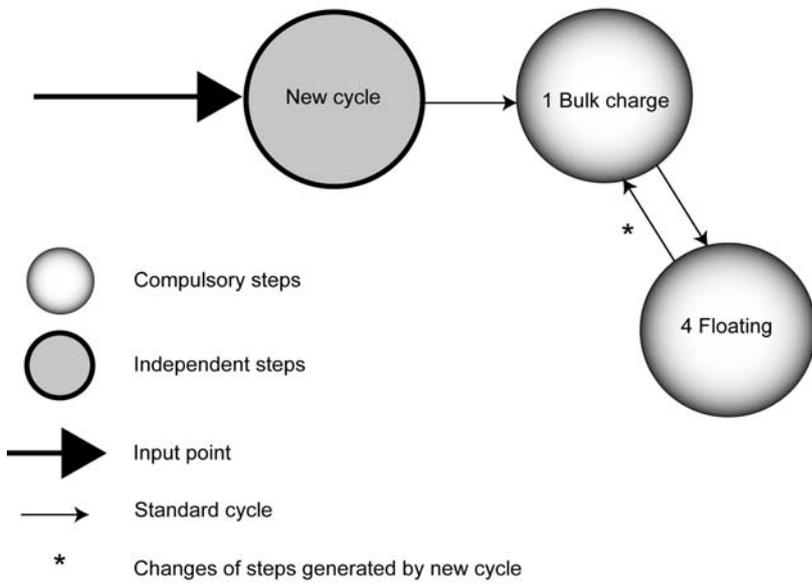


The bulk charge and floating phases cannot be deactivated. If the conditions for starting a new battery charge cycle have come together, the bulk charge phase starts immediately.

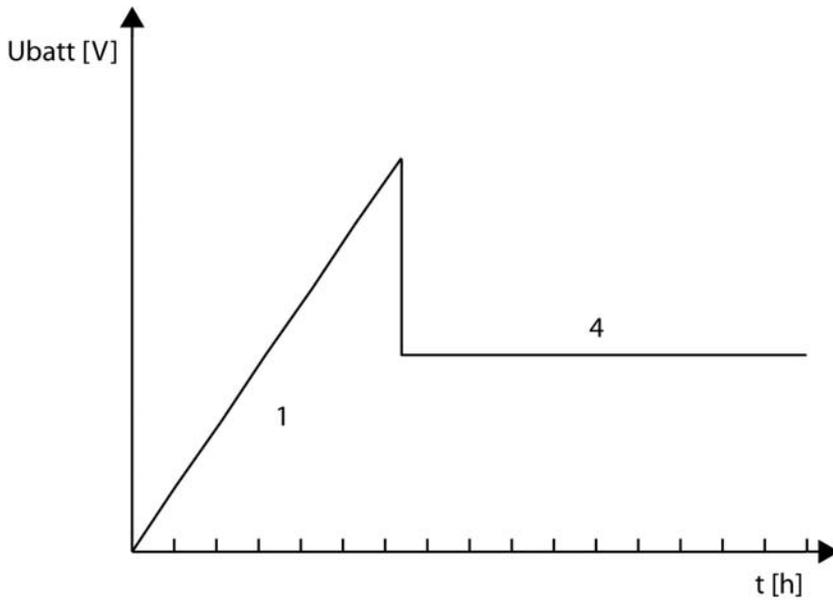



### Default battery cycle

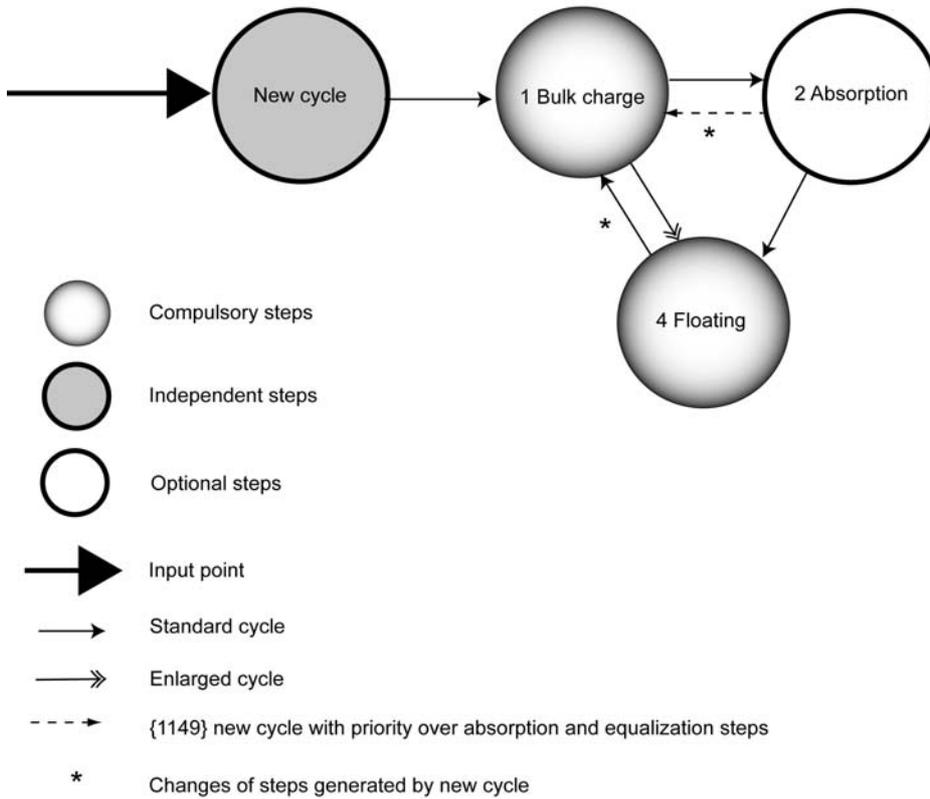

The battery cycle fits a large number of batteries by default, irrespective of whether they are gel batteries or not.

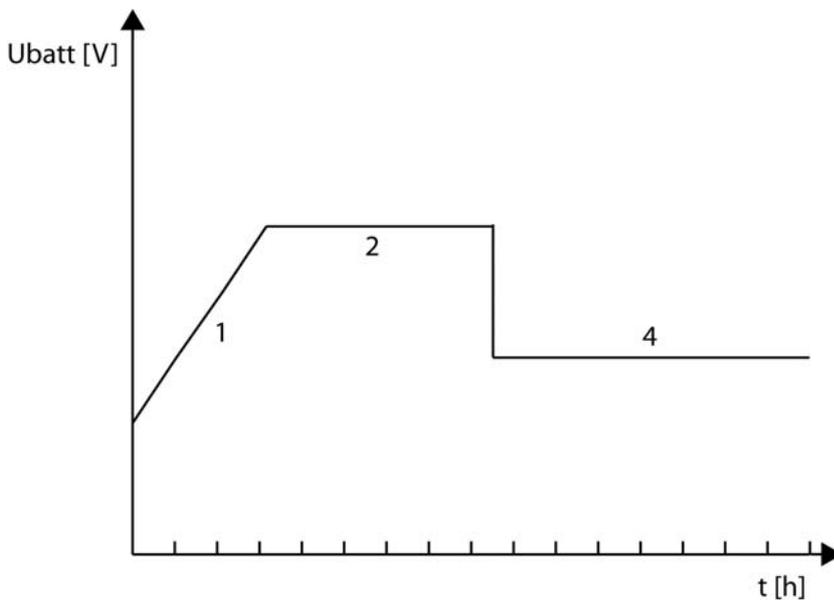


Complete battery cycle

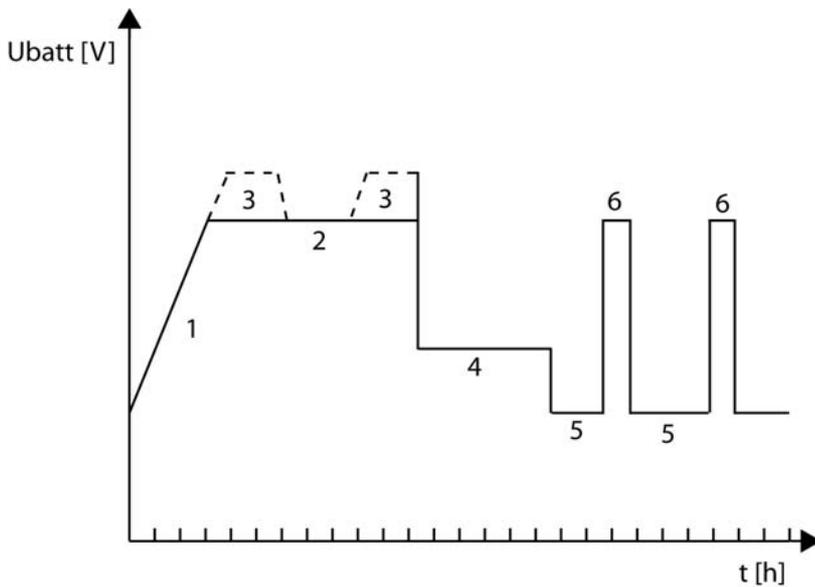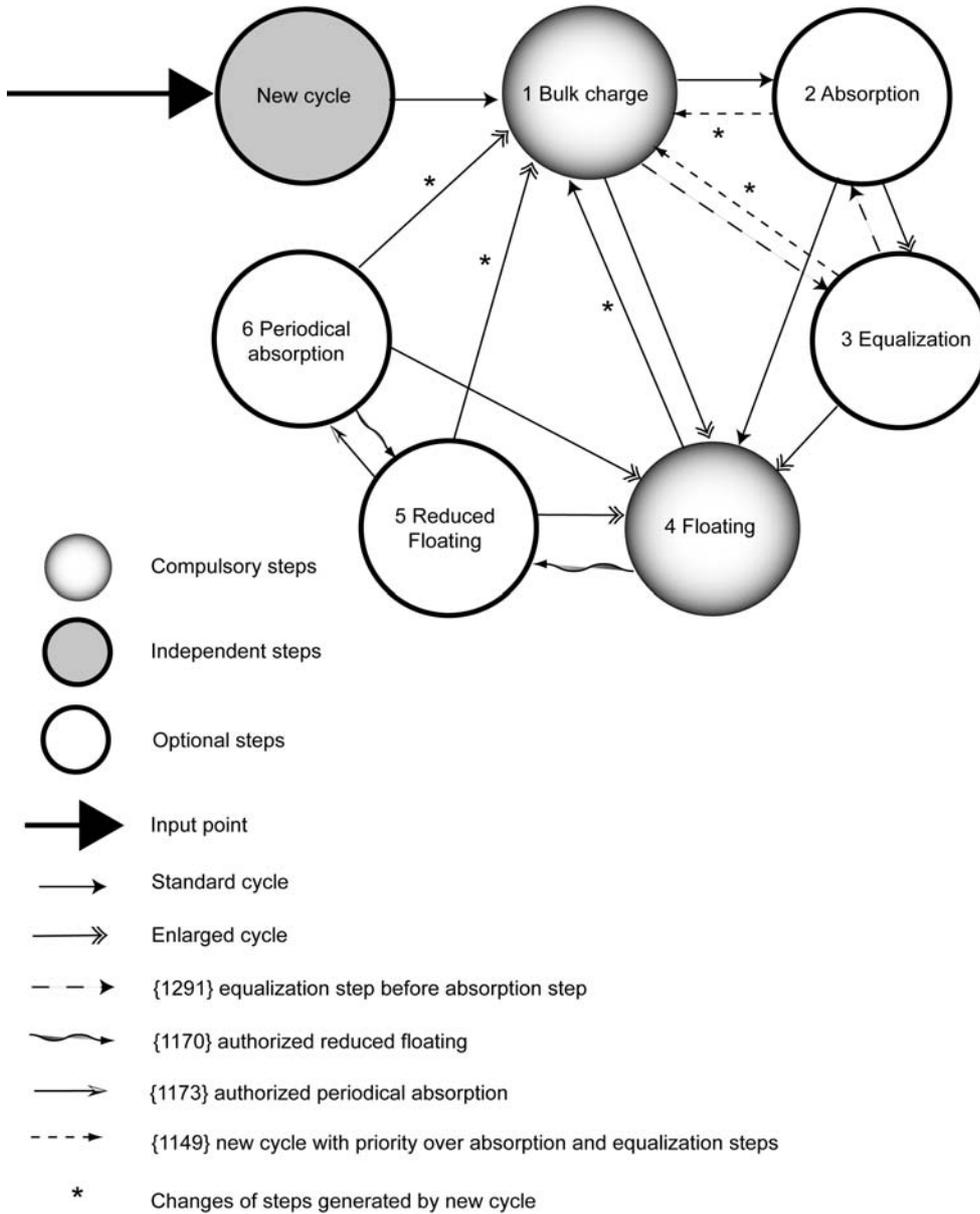

### Authorized charger {1125}

The battery charger function is either activated or not. If this function is not authorized, it is necessary to charge the batteries using a source of energy not connected to the Xtender.

Where there is lock on the inverter, charger or transfer function, a small padlock is displayed on the configuration display.

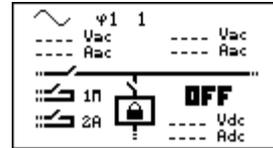

### Charge current {1138}

Use this value in order to adapt the charge current to the battery. With this configuration, the maximum current to be used for charging your battery is adjusted. The current appropriate for the battery can be found in its technical data. The value set by this configuration is used during the whole bulk charge phase.

|          |   |
|----------|---|
| <b>i</b> | Use this setting to adapt the charge current only with regard to the battery. To adapt the charge current to your source, use the parameter for maximum current at the source (power sharing) {1107}.<br>The right setting of these two values is essential for correct operation as well as the lifetime of your installation. |
|----------|---|

|          |   |
|----------|---|
| <b>i</b> | If you don't have any indication of the charge current, the most commonly used value is a fifth of the capacity. Ex. for 500Ah :500/5 = 100A.<br>Caution, if your batteries are in serie, the capacity for the formula above is only that of one battery and not the sum of them. |
|----------|---|

### Temperature correction coefficient {1139}


If a battery temperature sensor is used, the charge and discharge voltages are automatically adapted to the temperature of the batteries. The compensation is given in millivolts by degree Celsius (°C) and by battery cell.

### Undervoltage {1568}

#### Level of battery undervoltage at no load {1108}

Allows adjustment of the battery's low voltage level at which the inverter and Smart-Boost functions are deactivated. This adjustment is applied in the case of a zero charge and is automatically adapted with regard to the power required from the batteries. This configuration is a factory setting for lead-acid batteries. Poor adjustment of this value leads to early ageing of the batteries due to deep discharges.

- A. Battery voltage
- B. Duration of undervoltage before disconnection {1190}
- C. Disconnection due to undervoltage
- D. Undervoltage level {1108}

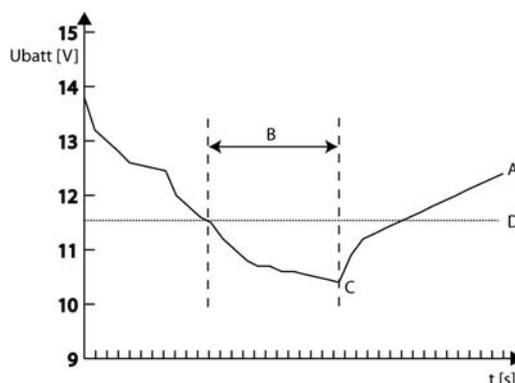

Adjust this configuration using the technical data for your battery.



The battery undervoltage level is automatically adapted to the instantaneous power of the consumers to compensate for internal losses in the battery and cables.

### **Dynamic compensation of the batteries undervoltage {1531}**

#### *Dynamic battery undervoltage compensation {1191}*

This setting allows you to activate (or not) the dynamic battery undervoltage compensation. If this setting is deactivated, the disconnection voltage is identical, whatever the charge on the inverter of the Xtender.

#### *Type of dynamic compensation {1532}*

This parameter enables you to choose between an automatic or a manual dynamic compensation. If you use the manual compensation, you must adjust the parameter ... undervoltage at full load.

#### *Low voltage disconnection at full-load {1109}*

The battery undervoltage is adapted to the nominal current of the inverter (dynamic undervoltage compensation). Vous pouvez adapter la tension de coupure à la charge nominale de l'onduleur en fonction des spécificités de vos batteries.

### **Duration of undervoltage before disconnection {1190}**

If the battery voltage is beneath the disconnection threshold, the inverter and Smart-Boost functions are deactivated, but not immediately. This setting allows you to adjust the delay between falling below the disconnection threshold and the current disconnection.

### **Reactivation voltage after battery undervoltage {1110}**

When the Xtender has shut off the inverter function following a battery undervoltage, it starts up again if the battery voltage returns to acceptable value. This setting allows you to fix the voltage at which the inverter and Smart-Boost functions are reactivated.

### **Acoustic alarm of the battery undervoltage {1196}**

When the battery is discharged, the inverter stops in order to protect it from deep discharge. Before disconnecting, the inverter indicates this state via a message and activates the acoustic alarm. The alarm goes out when the inverter stops or after a defined duration {1469}

### ***Adaptable low voltage disconnection {1194}***

A battery permanently operating when it is practically discharged sees its lifetime drastically reduced. In order to force the client to recharge the battery, the undervoltage threshold may be increased with each undervoltage disconnection. The low threshold is increased with each disconnection, and returns to its original value if the battery has been recharged up to a certain voltage. For this reason, the client will not be able to constantly discharge the battery without at least having recharged it.

### **Adaptable battery low voltage disconnection maximum voltage {1195}**

The undervoltage threshold is increased with each undervoltage, but no higher than the value fixed by this setting.

### **Reset voltage of the adaptable correction {1307}**

The battery undervoltage threshold returns to its original value if the battery reaches the voltage determined by this threshold.

### **Increment of the adaptative correction {1298}**

At each shut down by undervoltage, the shut down threshold is increased by this value.

### ***Maximum operating voltage {1121}***

This setting allows you to adjust the maximum battery voltage for operation in inverter mode.

### ***Reactivation voltage after battery overvoltage {1122}***

In case of a battery overvoltage, the battery has to return to a voltage lower than the value fixed by this setting in order to unlock inverter operation. If the auto-restart after overvoltage function is activated, the Xtender will automatically restart once the battery voltage has gone beneath this value.

### ***Battery maintenance voltage (floating) {1140}***

Use this configuration to adjust the voltage that will be used when the battery is completely charged. This voltage prevents automatic discharging and maintains the battery at its maximum level of charge.

### ***Force passage to floating mode {1467}***

This configuration may be used to force a battery cycle in progress and to bring it to the end of charge values. If the battery voltage level is higher, the charger is temporarily disconnected. If the battery level is lower, the charging current is increased up to the maximum in order to reach the set level as quickly as possible.

### ***New cycle {1141}***

Battery charging is a complex function that generally ends with a maintenance phase (floating) of indeterminate duration. The configurations below allow adjustment of the conditions that lead to the starting of a new charge cycle.

#### **Force new cycle {1142}**

This configuration allows a new charge cycle to be forced, and the bulk phase follows straight away.

#### **Voltage 1 for a new cycle {1143} and**

#### **Duration at undervoltage 1 for a new cycle {1144}**

#### **Voltage 2 for a new cycle {1145} and**

#### **Duration at undervoltage 2 for a new cycle {1146}**

The battery voltage value, below which a new cycle is started, can be specified. The battery voltage must remain below this threshold for the duration that is also to be determined. Two voltages associated with two durations are configurable. Generally, a higher voltage is used with a longer duration and a lower voltage with a shorter duration.

### New priority cycle on the absorption and equalization phases {1149}

Activate this configuration to accept or interrupt the absorption and equalization phases to start a new cycle. In the opposite case, even if the conditions are fulfilled for starting a new charge cycle, the battery charging proceeds normally by following the programmed phases.




In the event of battery charging with renewable energy sources such as solar energy, for example, this configuration must remain deactivated (\*no) in order to avoid cycles taking place too frequently.

### Restricted maximum cycle frequency {1147}

#### Minimum duration between cycles {1148}

If you wish to limit the frequency of the charge cycles, this setting allows you to lock the system so that a new battery charge cycle will not be initiated, even if the conditions for doing so have been met. The duration of the lock does not depend on the duration of the cycle. It takes into account the duration between the start of each cycle.

- A: New cycle
- B: Presence of AC-In source
- C: Floating voltage

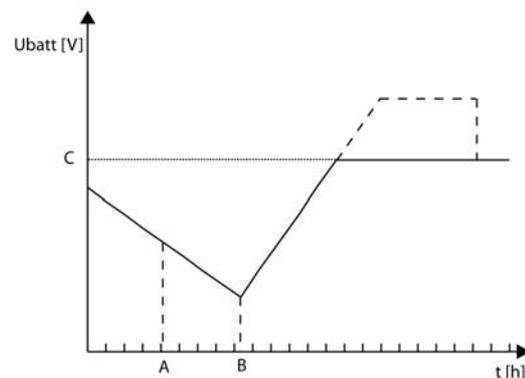

If you activate this function and you adjust the duration setting to 24h, you will only have one charge cycle per day. In this case, if the conditions for a new cycle are met, the cycle will not take place and the charger will keep the battery at floating voltage.

### Absorption phase {1451}

During this phase, the battery accumulates the final percentages of the energy it is storing. This phase is carried out with a constant voltage.

#### Authorized absorption {1155}

This configuration determines whether or not the absorption phase is used. If this phase is deactivated, the charger goes directly to the authorized phase that follows it.

#### Absorption voltage {1156}

Use this configuration to adjust the voltage that is used for the absorption phase.

#### Duration of absorption {1157}

Use this configuration to adjust the duration of the absorption. The absorption phase starts once the set voltage {1156} is reached. When the duration has run out, the charger automatically goes to the authorized phase that follows it.

### Completion of absorption released by the current {1158}

The absorption phase may be interrupted if the battery charge current automatically passes below a certain threshold. This may be used in order to limit the duration of the operation of a generator while there is an acceptable battery charge.

|   |   |
|---|---|
|  | During the absorption phase, as a matter of fact, the charge current reduces progressively. If the bulk charge has been carried out with a current which is correct for the battery, it is not necessary to adhere to a fixed duration to end the charging. |
|---|---|

### Current at end of absorption {1159}


Set the current value below which the absorption phase is considered to be at an end. When the current of the charger goes below this value, the next step starts.

### Control of the maximum frequency of the absorptions {1160}

#### Minimum duration since the last absorption {1161}

This setting is very similar to setting {1147}, but it allows you to make the battery charge up to the absorption voltage and then immediately go down to the floating voltage.

- A: New cycle
- B: Presence of source
- C: Floating voltage
- D: Absorption voltage

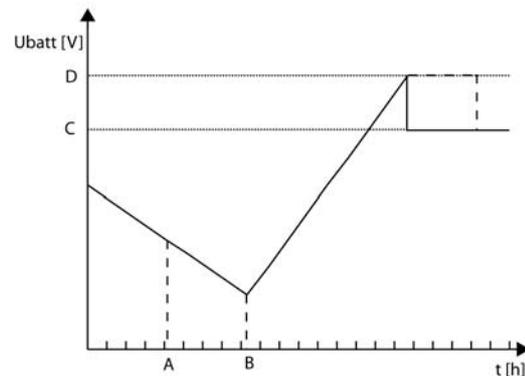

### Equalization phase {1452}

Certain types of battery require equalization in order to avoid the stratification of water and acid that they contain. Use the configurations below in order to adjust the usage conditions for this charge phase.

|   |   |
|---|---|
|  | During an equalization phase, a large quantity of gas is released that is highly explosive (hydrogen). Ensure that you adhere to the battery manufacturer's instructions for this function. In all cases, ensure that there is sufficient ventilation around the batteries. |
|---|---|

|   |   |
|---|---|
|  | During the equalization phase, the water of the battery is separated into gases (hydrogen and oxygen) and this action serves to decrease the level of liquid in the batteries. Check their level regularly. |
|---|---|

### Force an equalization {1162}

Use this configuration to force the start of an equalization phase.


|   |   |
|---|---|
|  | It is only possible to force an equalization phase if the equalization is authorized. Once the phase has started, prohibiting the phase does not stop the equalization. To stop the equalization, use Force passage to maintenance (floating) or Force new cycle. |
|---|---|

### Authorized equalization {1163}

This configuration determines whether or not the equalization may be used on the installation.

### Equalization before absorption phase {1291}

This configuration determines in the charge cycle, in which equalization will be activated, if the equalization is carried out after or before the absorption phase. The equalization phase is carried out before the absorption phase by default.

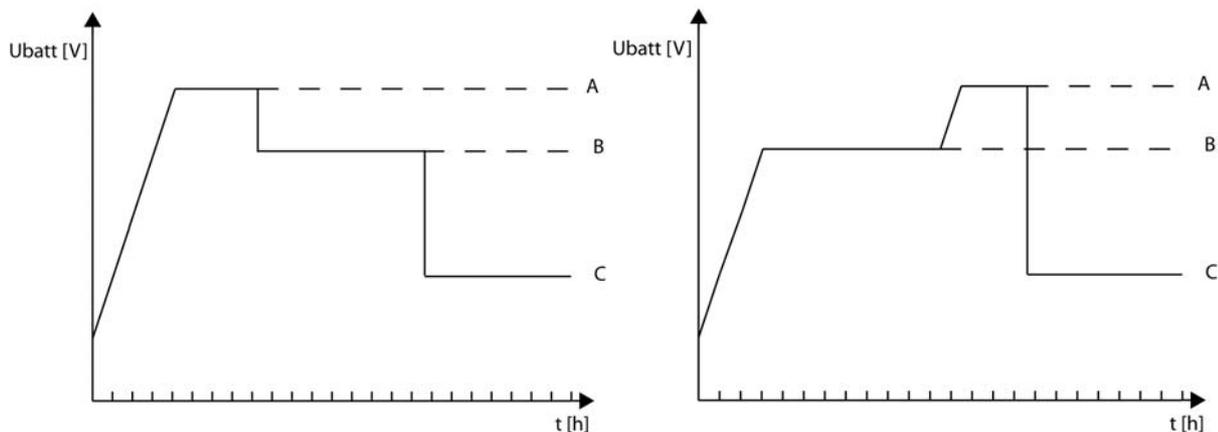

- A. Equalization
- B. Absorption
- C. Floating

### Equalization current {1290}

The equalization phase can be carried out with a limited current, which can be adjusted using this configuration. In all cases the current does not exceed that of the bulk charge phase {1138}

### Equalization voltage {1164}

Set the voltage at which the equalization is carried out using this configuration.

### Duration of equalization {1165}

Use this configuration to adjust the duration of the equalization. The equalization phase starts once the set voltage {1164} is reached. When the duration has run out, the charger automatically goes to the authorized phase that follows it.

### Number of cycles prior to equalization {1166}

Equalization is not carried out at each charging cycle. This configuration allows the number of charging cycles to be adjusted where equalization is not active.

### Equalization at set intervals {1284}

In the event of usage with few charge cycles, it may be necessary to carry out equalization cycles at set intervals and not with a number of set cycles. If this configuration is activated, a new battery charge cycle with an activated equalization phase with the programmed interval is started {1285}.

### *Weeks between equalizations {1285}*

Use this configuration to determine the time intervals that separate the battery charge cycles with active equalization phases.

|          |  |
|----------|--|
| <b>i</b> | Should incomplete charge cycles occur (for example, when charging by using solar generators), this function is also useful in order to limit the frequency of equalization cycles. |
|----------|--|

### **End of equalization activated by the current {1168}**

The equalization phase can be interrupted if the charge current of the battery goes under a certain threshold. This can be used to limit the operating period of a genset while keeping an acceptable battery charge.

|          |   |
|----------|---|
| <b>i</b> | During the equalization phase, the charge current decreases progressively in a natural way. If the bulk charge has been achieved with a current suitable for the battery, it is not necessary to respect a fixed period to complete the charge. |
|----------|---|


### *End of equalization current {1169}*

Set the current under which the equalization phase will be considered as completed. When the charge current goes under this value the next phase starts.

### *Reduced floating phase {1453}*

In case the batteries are in low demand, the reduced floating phase may be activated. This phase makes it possible to reduce water consumption. In any case, respect the charge curve supplied by your battery manufacturer.

- A: Absorption phase
- B: Floating phase
- C: Duration before reduced floating phase
- D: Reduced floating voltage

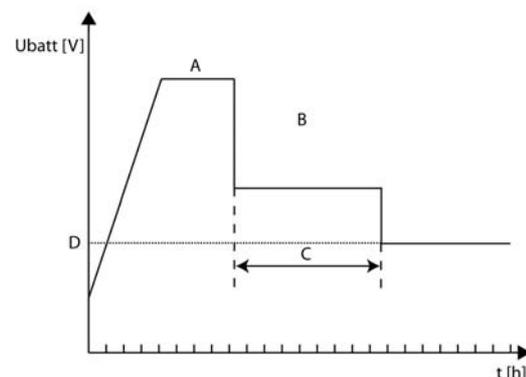

### **Authorized reduced floating phase {1170}**

Allows you to authorize the reduced floating phase.

### **Duration of floating before reduced floating {1171}**

The reduced floating phase begins after the floating phase. This setting allows you to fix the duration of the floating phase which precedes the reduced floating phase.


### **Voltage of reduced floating {1172}**

Allows you to fix the battery voltage for the reduced floating phase.

### *Periodic absorption phase {1454}*

The floating and reduced floating phases cause the stratification of the acid and the water in the batteries. The periodic absorption phase allows you to counter this problem.

- A: Duration of reduced floating before periodic absorption {1175}
- B: Periodic absorption voltage {1174}
- C: Duration of periodic absorption {1176}

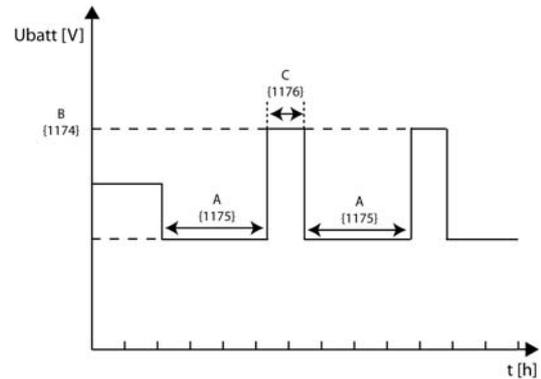

#### **Authorized periodic absorption {1173}**

Allows you to authorize the periodic absorption phase.

#### **Periodic absorption voltage {1174}**

Allows you to fix the battery voltage for the periodic absorption phase.

#### **Duration of reduced floating before periodic absorption {1175}**

The periodic absorption phase begins after the reduced floating phase. This setting allows you to fix the duration of the reduced floating phase which precedes the periodic absorption phase.

#### **Duration of periodic absorption {1176}**

This setting fixes the duration of the periodic absorption. Once this duration has elapsed, the battery returns to the reduced floating phase.

## **INVERTER {1186}**

To set the different parameters of the function inverter, use this menu.


### *Authorized inverter {1124}*

This configuration authorizes operation in inverter mode. If the inverter is deactivated, a voltage will be present on the output terminals (AC OUT) only if a correct voltage is present at the input (AC-in) and the transfer is not prohibited.

|  |  |
|--|--|
|  | This function can be used for supplying non-critical consumers while ensuring that the battery is not discharged even if the source is faulty. |
|--|--|

|  |   |
|--|---|
|  | Note, that if the Smart-Boost function is activated, it is possible to discharge the battery even if the inverter function is locked. |
|--|---|

Where there is lock on the inverter, charger or transfer function, a small padlock is displayed on the configuration display.

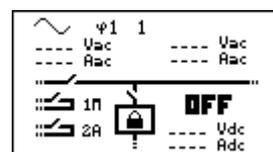

### ***Output voltage {1286}***

The output voltage can be adjusted using this configuration.

|          |  |
|----------|--|
| <b>i</b> | In certain fields of application – for example, when the energy source is limited (solar or generator only) – it may be useful to reduce the output voltage of the inverter. This generally leads to a resulting reduction in the energetic consumption without significantly decreasing comfort. For example, a 100 W light bulb consumes around 100W to 220V and 15% more at 230V. |
|----------|--|

### ***Increase of the linear AC-Out voltage with the battery voltage {1548}***

This parameter enables you to set that the output voltage is influenced by the batteries voltage. The function depends on the batteries charge cycle and uses the reference voltage of the running cycle.

For instance: if the battery is carrying out an absorption, the output voltage will be modified close to this setting value. If the battery is in floating phase, the output voltage will be modified close to this setting value.

### ***Maximum increase of the AC-Out voltage by the battery voltage***

#### ***{1560}***

This parameter allows you to set the maximum increase of the AC-Out voltage if the previous function is activated.


A : {1560}

B : Reference of the battery cycle

C : 0.5V for 12V

1V for 24V

2V for 48V

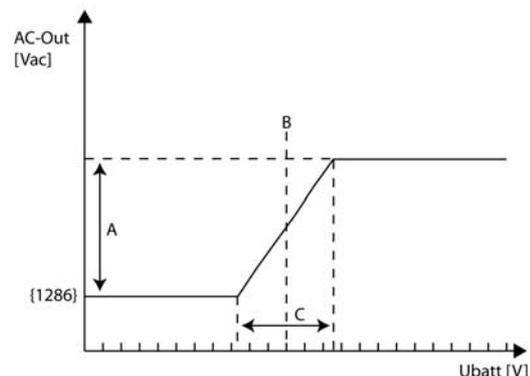

|          |   |
|----------|---|
| <b>i</b> | The main application of this function is the active loads control. It exists on the market voltage regulated loads that allow the intelligent consumption of the energy in excess (dump loads). |
|----------|---|

|          |   |
|----------|---|
| <b>i</b> | We recommend to use an initial voltage of 220 Vac and not 230 Vac {1286} This allows to avoid a too high output voltage (for instance 240 Vac) when the function is active. |
|----------|---|

### ***Frequency {1112}***


This setting allows you to alter the output frequency of the inverter of the Xtender. This setting changes the limit frequencies on the charger's synchronization.

|          |   |
|----------|---|
| <b>i</b> | If you change the frequency from 50 to 60 Hz, the standard synchronization frequencies change from 45-65 to 55-75 Hz {1505}{1506} |
|----------|---|

### *Increase of the frequency at full battery {1536}*

This function allows you to increase the inverter frequency when the battery is fully charged. The frequency variation is being carried out by index and non linear (frequency shift).

- A : Reference of the battery cycle
- B : Floating voltage {1140}
- C : 0.5V for 12V  
1V for 24V  
2V for 48V

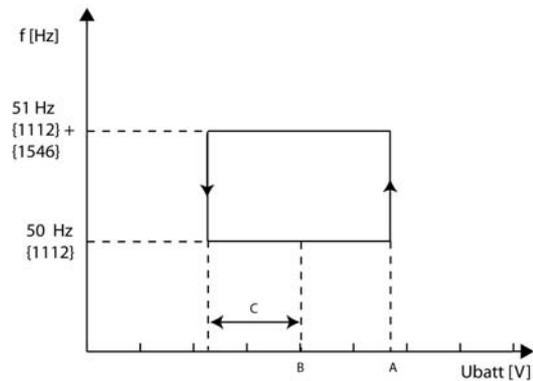

If you use this parameter with parameter {1549}, you will have the two corrections stacked over one another.



The main application of this parameter is the automatic control of a grid inverter connected to the Xtender output. When the batteries are not fully charged, the grid inverter charges them through the Xtender. Once the batteries are charged, the Xtender modifies the output frequency and the grid inverter stops automatically.




The grid inverter must be compatible with this solution (grid feeding cut if the frequency is too high). If the grid inverter does not cut it may lead to a batteries overload and their definitive damaging.



The grid inverter power must not exceed either the Xtender nominal power or the maximum power charge of the batteries, otherwise it will lead to irreversible damages to them.

### ***Frequency increase with the battery voltage {1549}***

If you activate this parameter, the output frequency in inverter mode will vary in proportion to the battery voltage. The function is depending on the batteries charge cycle and uses the reference voltage of the current cycle. The basic frequency is increased up to the maximum value of parameter {1546}.

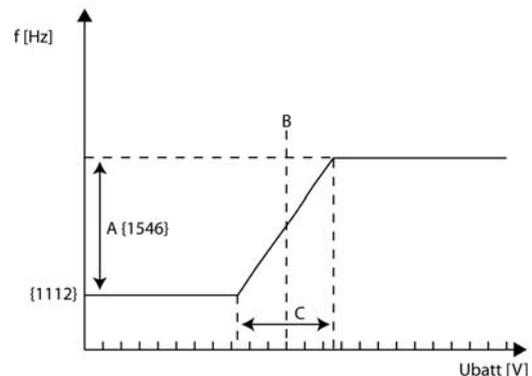

A : Maximum increase of the frequency {1546}

B : Battery cycle voltage reference

C : 0.5V for 12V

1V for 24V

2V for 48V

For instance if the battery carries out an absorption, the output frequency will be modified around this setting value. If the battery is in floating phase, the output frequency will be modified around this setting value.



If you use this parameter with parameter {1536}, you will have the two corrections stacked over one another.

### ***Maximum increase of the frequency {1546}***

This parameter determines how much the basic frequency is increased when a frequency variation is wished.

### ***Standby and start (load detection) {1420}***

#### **Standby level {1187}**

The standby function allows energy to be saved if there is no consumer present at the inverter output. In this case, the inverter disconnects its output and periodically emits a load search pulse. If a consumer is detected, it goes back into operational mode while measuring the power supplied and returns to standby if the consumer is deactivated.

This configuration allows adjustment of the power output at which the inverter goes into standby mode.

Proceed as follows to adjust this configuration:

Make sure that the inverter mode is active (no voltage present at the AC In input). The input voltage is 0 and the input relay is indicated as open in real time on the information screen.

Increase the standby level value {1187} to the maximum

Activate the smallest consumer that can be detected and ensure that all the others are deactivated.

Wait for the inverter to pass to standby, and the consumer then engages intermittently around once a second.

Progressively reduce the standby level value {1187} until the consumer runs permanently. If the consumer works for several seconds then stops, decrease the value of the standby level again.

An adjustment value between 0 and 100 is displayed. The value 100 represents the minimum sensitivity (biggest consumer detected).



If you would like to deactivate the standby function, it is sufficient to adjust the detection level to 0. In this case, the Xtender remains permanently activated if it is working in inverter mode.

### Duration between the standby pulses {1189}

This setting allows you to determine the interval between the standby pulses.

### Number of standby periods {1188}

This setting determines the number of periods which are generated at the time of the standby burst.

|   |  |
|---|--|
|  | <p>Certain loads which are very difficult to detect may activate the inverter if the burst is longer than the only period normally used.</p> <p>In certain very particular cases, the standby is used to supply very small consumers. Prolonging the search burst allows you to correctly supply these consumers without the risk of losing the supply during the waiting period between the pulses.</p> |
|---|--|


### Solsafe presence {1438}

This parameter allows the connection on the AC-Out side of an inverter for grid feeding. It also authorizes the Xtender to accept the energy coming from the output and to use it to charge the batteries.

### AC-IN AND TRANSFER {1197}

These configurations manage the combined functions between the charger and inverter. The conditions for passing from one function to another are adjusted in this category.


- A. Stoppage of charger operation {1309}
- B. Disconnection of transfer subject to delay {1199}
- C. Delay before opening of the transfer {1198}
- D. Immediate passage to the inverter threshold {1200}

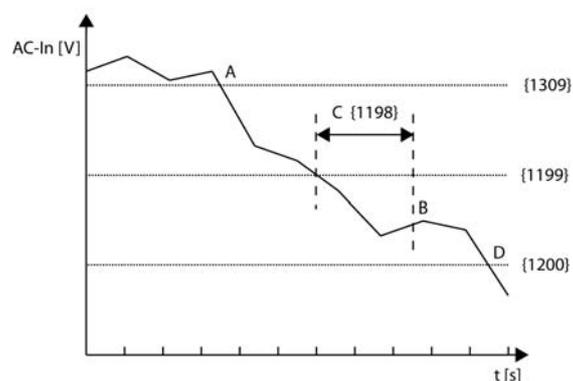

### Authorized transfer {1128}

The transfer relay is authorized or not. If the transfer is not authorized, a correct voltage at the AC IN input will not be transferred to the output and to the users. The battery charger function is not possible and the Xtender operates only in inverter mode.

Where there is lock on the inverter, charger or transfer function, a small padlock is displayed on the configuration display.

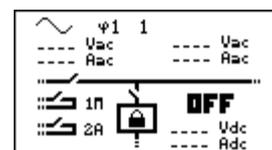

### Delay before closing of the transfer relay {1528}


This parameter enables to delay the closing of the transfer relay even if the AC-In voltage is present.

|   |   |
|---|---|
|  | <p>This function can be useful while working with gensets having a pre-warming delay.</p> |
|---|---|

### **Maximum current of the AC source (power sharing) {1107}**

Adjust this configuration in the event of connection to a limited power source, for example, a generator of moderate power output or a dock or camping connection. The adjustment of this value limits the instantaneous power consumed from the source in charger mode. The power available is attributed by first priority to consumers and then to battery charging. If the consumption level changes, the battery charge current is automatically adjusted.

- A. Power available and used to recharge the batteries
- B. Maximum AC source current (adjusted to 10 A here)
- C. Consumer current
- D. Power supplied by the inverter (Smart-Boost function)

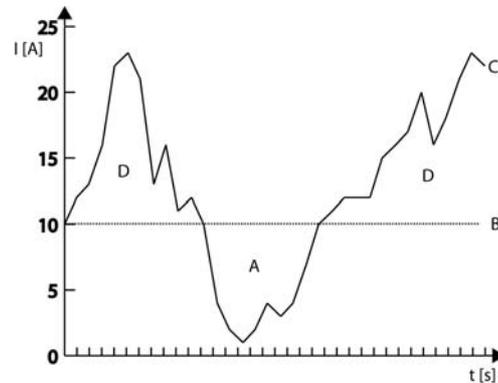

**i** If the consumption level is higher than the controlled level, the maximum source current will be exceeded, except when the Smart-Boost function is activated.

**i** It's possible to access faster to this function, please refer to the page 15

### **Decrease of the source max. current with the input voltage {1527}**

This parameter forces the adaptation of the max. current of the source to the AC-in voltage.

**i** If the voltage goes down, for instance with a genset, the parameter that determines the input max. current is adapted likewise. In this way not only the battery charge current is adapted but also the Xtender power assistance if the function Smart-Boost is activated.

### **Smart-Boost authorized {1126}**

The function Smart-Boost is deactivated by default. In this case no assistance will be provided to the source and if the source is overloaded, the energy from the battery is not drawn. Do authorize this function if you have a low power source (generator, shore power or camping plug) and you want more power available.

**i** When the smart boost function is active, it is possible to discharge the batteries, even if the Xtender is connected to a source and the charger is active.

### **Authorization for exceeding the power sharing current without interrupting the transfer {1436}**

The parameter {1107} allows you to adapt the running of the Xtender to the maximum power of the source. In case this value is overrun, the transfer relay is not open and the circuit breaker on the source side may go on default. With this parameter you can force the transfer relay to open itself and the Xtender to work in inverter mode.



Use this function if you have available a source that is smaller than the Xtender and if you don't use the function Smart-Boost. In this way, in case of overload of the source, all the power is supplied by the Xtender, up to its own limits.

### ***Activate immediate detection of grid outage (UPS) {1435}***

This parameter allows to starting the inverter mode as quick as possible in case of fluctuations of the AC-In grid. This function is useful when it comes to very sensitive loads that require an uninterruptible power supply (UPS). If this function is active, being connected to a fluctuating source (weak grid or unstable generator) will lead to a frequent switching between inverter and charger modes by opening and closing of the transfer relay.

### ***Tolerance on the immediate detection of a grid loss {1510}***

When the immediate detection of a grid loss is activated, this parameter allows you to increase or decrease the detection sensitivity. The higher the figure the weaker the sensitivity.

### ***Transfer AC-In for delayed transfer opening {1199}***

This configuration determines the voltage below which the transfer relay will open after a certain period of time. The Xtender will then run in inverter mode.

### ***Delay before passing to inverter {1198}***

When the input voltage is below the transfer voltage to the inverter, the transfer relay does not open immediately. With this configuration, the period during which the transfer remains drawn can be specified. After this duration, the transfer relay is opened and the inverter function is activated (if the function has not been blocked or deactivated).



This delay is particularly useful on less stable grids or with generators with an output voltage that varies considerably during the activation of heavy loads.

### ***Immediate transfer AC-In voltage {1200}***

Use the adjustment of this configuration to adjust the critical voltage for the operation of equipment that must not experience interruptions. In the case of a fluctuating grid, if its voltage passes below the value of the configuration this immediately activates the inverter function, thereby ensuring supply to the consumers.

### ***Adjusting the charge current {1471}***

This setting allows you to adjust the value of the charge current of the batteries as a function of various external parameters.

#### **Minimum AC In voltage to authorize the charging {1309}**

In the event of sources with limited power output (such as a generator, for example) the use of strong consumers at the output may lead to a drop in voltage. The adjustment of this configuration allows disconnection of the battery charging function and thus maintains the power available to other consumers without influencing the voltage of the source.


#### **Adaptation range of the charge current according to the input voltage {1433}**

While the input voltage decreases, the charge current of the batteries is automatically lowered to avoid overloading the source. This parameter allows you to determine the voltage range over which this adaptation of the charge current of the batteries is carried out.

### Correction coefficient for the voltage passing to the inverter {1295}

When the AC-IN input voltage decreases, the charge current of the batteries is automatically diminished accordingly. With this parameter, you determine the decrease coefficient of the charger current at charger shunt off threshold.

- A: Transfer relay closed {1199}
- B: Start of charge current reduction = Disconnection of charger {1309} + {1433}
- C: Current reduction factor {1295}

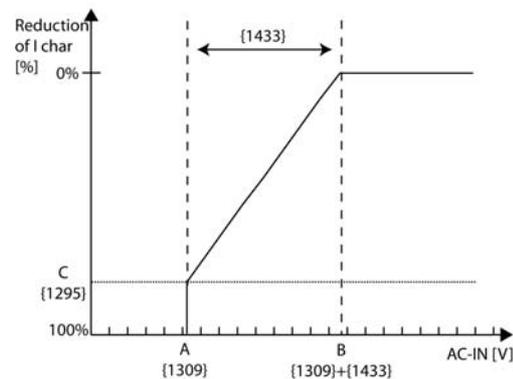

This setting is particularly useful when running a generator, as it allows you to adapt the charge current of the batteries to the fluctuations of the generator voltage without overloading it.

### Frequency delta accepted above End {1505}

This setting allows you to determine the upper limit of the accepted frequency. This value is added to parameter {1112}, the output frequency of the inverter. If the frequency of the source exceeds this value, the transfer relay is opened after the duration determined by the setting {1507}.

### Frequency delta accepted below End {1506}

This setting allows you to determine the lower limit of the accepted frequency. This value is subtracted from parameter {1112}, the output frequency of the inverter. If the frequency of the source is lower than this value, the transfer relay is opened after the duration determined by this setting {1507}.

### Duration of erroneous frequency before disconnecting the transfer relay

#### {1507}

If the input frequency is not included among the values determined by the settings above, the transfer relay is deactivated after the duration determined by this setting.

## CONFIGURATION FOR AUXILIARY CONTACTS 1 AND 2

### {1201} {1310}

The Xtender inverter/charger is equipped with two auxiliary relays each with one free of potential contact (reverser). These two relays allow multiple functions to be carried out by using adequate cabling as well as simple programming.

The programming of each contact is carried out independently except when conditions require the use of two relays. In this case, the programmed events for activating the second relay are automatically deactivated.

The extended functions of the auxiliary contacts are described at the end of the chapter on simple functions.


The auxiliary contacts are activated immediately in response to the programmed signals. When the activation conditions are no longer fulfilled, they are deactivated with a delay of 2 seconds to avoid overswitching.

The auxiliary contacts respond to various signal types presented graphically below.

The following types of basic events may activate the contacts:

Simple event  
Scheduled event  
Level

In the following description, each parameter has two reference numbers. The reference on the left relates to auxiliary contact 1 and the reference on the right to auxiliary contact 2 ({reference of the auxiliary contact 1} {reference of the auxiliary contact2}).

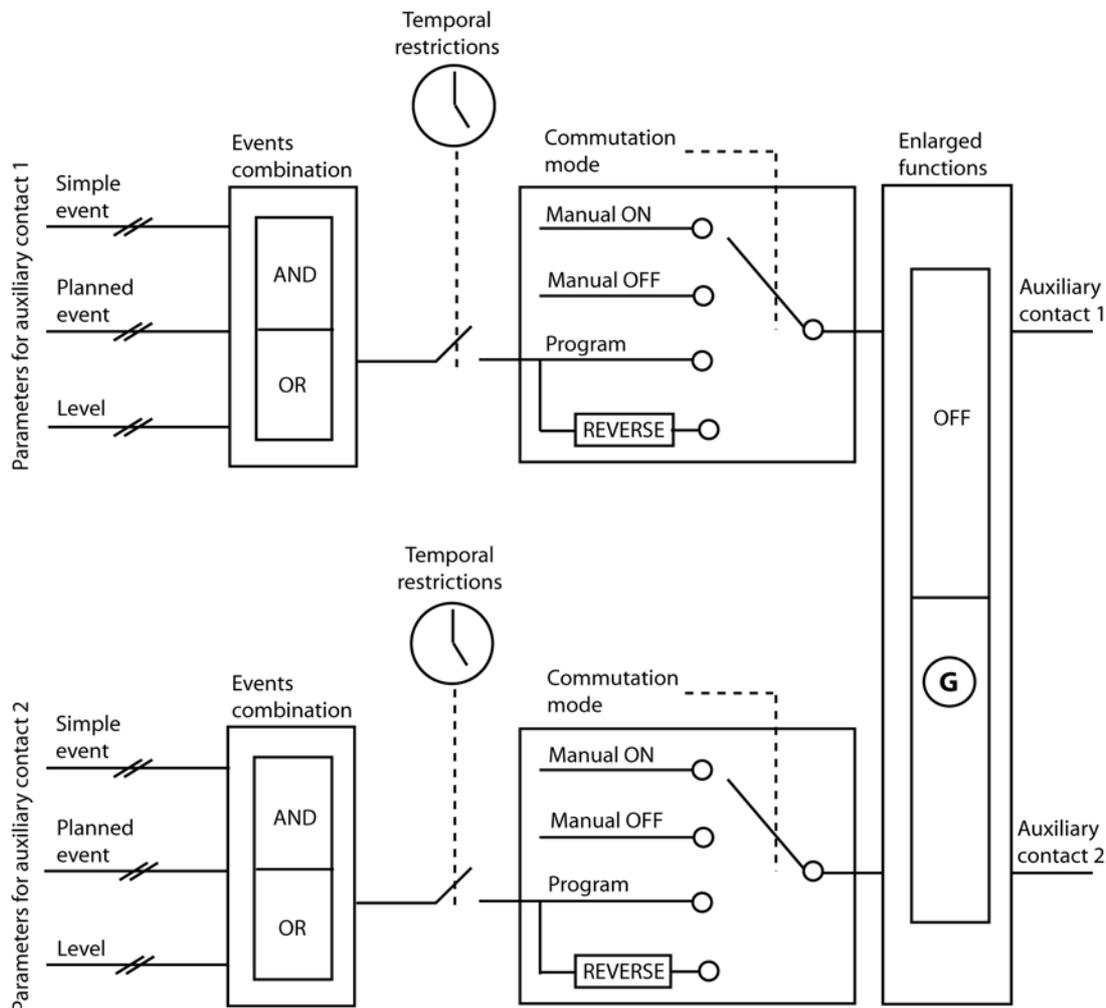

## Simple functions

### *Reset all settings {1569} {1570}*

This function serves to reset all previous settings done on the corresponding auxiliary contact. Once this operation done, the auxiliary contact is not activated anymore.  
Caution: this function cannot be cancelled.



Use this function before programming any function for an auxiliary contact. By doing this way you are sure that you begin with no unexpected setting who can activate the contact.

### *Switching mode {1202} {1311}*

The auxiliary contacts may be controlled in 4 different ways:

Manual ON: In this mode, the contact is permanently drawn whatever the external conditions or programming

Manual OFF: In this mode, the contact is permanently released whatever the external conditions or programming

Automatic: In this mode, the auxiliary contact is activated according to the conditions and restrictions of its programming.

Reversed automatic: In this mode, the conditions and restrictions define the release of the contact.

### ***Combination of events mode {1497} {1498}***

This configuration defines how the various events intended to activate the auxiliary contact are combined.

Either a single event suffices to activate the contact (OR function) or it must have all the active events in order for the contact to be activated (AND function).

### ***Limit the time of activation {1512} {1513}***

### ***Maximum duration of activation {1514} {1515}***

When the conditions are met, either one or two relays are activated permanently. If you wish that the activation duration is limited in time, even if the conditions are met, you can activate this function. Once the relay is activated, a countdown runs according to the duration you have selected. Once this countdown is completed the relay is released, even if the conditions are still there. The relay can not be anymore activated as long as the activation conditions have not disappeared.

### **Temporal restrictions {1203} {1312}**

These configurations allow the time frame to be defined in which the contact should under no circumstances be activated. Three distinct schedules are accessible in the form of restriction programs (programs 1 to 3). For each program, it is possible to select the day of the week where the restriction is activated. If the day is selected it appears on the screen and if it is not selected it is represented on the screen by two horizontal lines.

Once the days are selected, it is necessary to adjust the time frame where the restriction is active using the "starting time" and "finishing time" configurations. If the finishing time is programmed before the starting time, the restriction time frame is not taken into account. Below are the configurations with their references:

Program 1 {1204} {1313}

Days of the week {1205} {1314}

Starting time {1206} {1315}

Finishing time {1207} {1316}

Program 2 {1208} {1317}

Days of the week {1209} {1318}

Starting time {1210} {1319}

Finishing time {1211} {1320}

Program 3 {1212} {1321}

Days of the week {1213} {1322}

Starting time {1214} {1323}

Finishing time {1215} {1324}



If your installer has made additional adjustments, it is possible that the restrictions could be active even if they do not appear in one of the three programs available to you.

### ***Contacts activated with set schedules {1269} {1378}***

The auxiliary contact can also be activated like a programmable clock. Three different weekly programs are available.

For each program, the time frame may be applied to one or several days of the week.

If the finishing time is programmed before the starting time, the time frame is not taken into account.

Program 1 {1270} {1379}

Days of the week {1271} {1380}

Time of start of activation {1272} {1381}

Time of end of activation {1273} {1382}

Program 2 {1274} {1383}

Days of the week {1275} {1384}

Time of start of activation {1276} {1385}

Time of end of activation {1277} {1386}

Program 3 {1278} {1387}

Days of the week {1279} {1388}

Time of start of activation {1280} {1389}

Time of end of activation {1281} {1390}

### ***Contacts activated by an event {1455} {1456}***

The auxiliary contacts may be activated by the states or events occurring in the installation. Each event may be combined with another to establish complex functions.

#### **Xtender OFF {1225} {1333}**

The contact is activated if the Xtender inverter/charger is switched off, either following a fault or manually.

#### **Xtender ON {1518} {1519}**

The auxiliary contact is activated if the Xtender inverter/charger is switched on.

#### **Remote ON/OFF input active {1543} {1544}**

The auxiliary contact is activated if the Remote ON/OFF input is active.

#### **Battery undervoltage alarm {1226} {1334}**

If the undervoltage threshold is reached, this activates the contact. In contrast to the acoustic alarm that is deactivated after a set time, this signal remains active as long as the battery voltage is below the threshold. If the undervoltage fault cuts in, this condition remains active as does the contact.

#### **Battery overvoltage {1227} {1335}**

Activates the contact in the event of battery overvoltage.

#### **Inverter or smart boost overload {1228} {1336}**

Activates the contact in the event of an error due to excessive power in the inverter or the Smart Boost function. In the event that the inverter disconnects due to excess power and it is attempting to restart, the contact is not activated until the end of the attempts.

**Overtemperature {1229} {1337}**

Activates the contact in the event of overtemperature in the electronics or the transformer.

**No Overtemperature alarm {1520} {1521}**

Activates the auxiliary contact if the charger function is active. When the function Smart-Boost is running, the condition is not met to activate the contact.

**Active charger {1231} {1339}**

Activates the auxiliary contact if the charger function is active. When the Smart-Boost function is operating, the condition for activating the contact is not fulfilled.

**Active inverter {1232} {1340}**

Activates the auxiliary contact if the inverter function is active.

**Smart-Boost active {1233} {1341}**

Activates the auxiliary contact if the Smart-Boost function is active. For more information on the smart boost function, refer to the manual for the Xtender inverter/charger.

**AC In present with fault {1234} {1342}**

Activates the auxiliary contact if there is voltage present at the AC In input but this voltage does not fulfil the conditions for activating the transfer relay.

**AC In present {1235} {1343}**

Activates the auxiliary contact if a voltage is present at the AC In input. This condition is independent of the state of the transfer relay.

**Transfer relay drawn {1236} {1344}**

Activates the auxiliary contact if the transfer relay is drawn.

**AC Out present {1237} {1345}**

Activates the auxiliary contact if a voltage is present at the output of the Xtender inverter/charger.

**Battery charging in bulk charge phase {1238} {1346}**

Activate the auxiliary contact if the battery is in bulk charge phase.

**Battery charging in absorption phase {1239} {1347}**

Activates the auxiliary contact if the battery is in absorption phase. If the periodic extended absorption function is activated, the contact is also activated in this phase.

**Battery charging in equalization phase {1240} {1348}**

Activates the auxiliary contact if the battery is in equalization phase.

### **Battery charging in floating phase {1242} {1350}**

Activates the auxiliary contact if the battery is in maintenance phase. If the extended reduced floating function is activated, the contact is also activated in this phase.

### **Battery charging in reduced floating phase {1243} {1351} and**

### **Battery charging in periodic absorption phase {1244} {1352}**

You can activate the auxiliary contacts on the reduced floating phase and the periodic absorption phase.

### **Autonomy test in progress {1529} {1530}**

This parameter allows you to activate the auxiliary relays if an autonomy test is in progress. In that case, the relays are activated on the two types of test : monthly or weekly.

### ***Contacts activated by the battery voltage {1245} {1353}***

These configurations allow activation of the auxiliary contacts if the battery voltage passes below a selected voltage during a period that is configurable as well. Three voltages linked to three durations are configurable to activate the auxiliary contact.

The auxiliary contact will only be activated after the battery exceeds again a certain voltage value and also after a duration, both independently of the activation parameters.

This voltage and this duration are programmable too.

Dynamic compensation of the thresholds {1288} {1354}

Voltage 1 active {1246} {1355}

Voltage 1 {1247} {1356}

Duration 1 {1248} {1357}

Voltage 2 active {1249} {1358}

Voltage 2 {1250} {1359}

Duration 2 {1251} {1360}

Voltage 3 active {1252} {1361}

Voltage 3 {1253} {1362}

Duration 3 {1254} {1363}

Voltage for deactivation of the auxiliary contact {1255} {1364}

Duration over battery voltage for deactivation {1256} {1365}

Deactivate if the battery is in floating mode {1516} {1517}

### **Dynamic compensation of the thresholds {1288} {1354}**

If the contacts are activated according to the battery voltage, you can use the voltage dynamically compensated for each threshold.

If this function is not activated, the average battery voltage will be used.

If this function is activated, the real battery voltage is compensated according the power used.

### **Deactivate if the battery is in floating mode {1516} {1517}**

If you activate one of the auxiliary contacts according to the battery voltage, you can force the deactivation if the battery is in floating mode. In this way, even if the deactivation voltage is not reached or if the duration of the voltage deactivation is not completed, the auxiliary contact will be released.

## *Contacts activated by inverter power or Smart-Boost*

### **{1257} {1366}**

If the power output of the inverter exceeds a certain level, the contact may be activated. The excess is linked to a duration. Three power levels linked to three durations are configurable to activate the auxiliary contact.

The auxiliary contact will only be activated after the output power passes below a value and over a duration, both independently of the activation configurations.

If the Smart-Boost function is active, these configurations are also taken into account with the power of the boost.

Power 1 active {1258} {1367}

Power 1 {1259} {1368}

Duration 1 {1260} {1369}

Power 2 active {1261} {1370}

Power 2 {1262} {1371}

Duration 2 {1263} {1372}

Power 3 active {1264} {1373}

Power 3 {1265} {1374}

Duration 3 {1266} {1375}

Power for deactivation of the auxiliary contact {1267} {1376}

Duration below power for deactivation {1268} {1377}

## **EXTENDED FUNCTIONS {1489}**

### *Generator startup {1490}*

The two contacts may be combined in order to automatically start up a generator equipped with an electric starter. In this case the two contacts are dedicated to this function.


Auxiliary contact 1 serves as an operational contact and auxiliary contact 2 as a startup contact.

The startup condition of the generator must be programmed with the configurations of auxiliary contact 1. The startup is carried out by first activating the operational contact and then activating the startup contact. The latter engages several times, if necessary, to start up the motor. If a voltage appears at the terminals of AC In, the startup contact is released.

Duration of starter impulse {1492}

Duration between attempts {1494}

Number of attempts {1493}

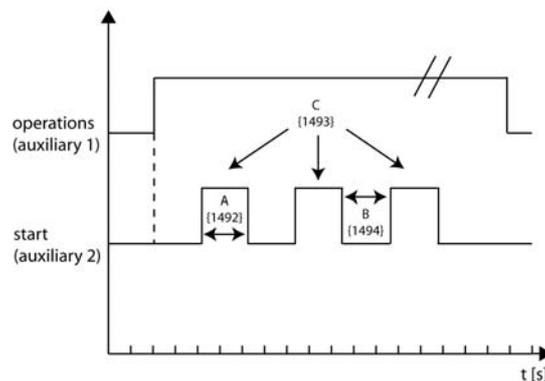

### **Generator startup {1491}**

Activates the combination of the two auxiliary contacts for the generator start and the management of the start impulses.

### **Duration of starter impulse {1492}**

With this configuration you can adjust the time at which the startup contact is activated.

### **Number of startup attempts {1493}**

The startup contact is activated a limited number of times in order to protect the starter if the generator has a fault. Once the maximum number of startups has been reached, the operational contact is also deactivated. For a new attempt to be made the condition that generated the startup must disappear and reappear.

### **Duration between the starter attempts {1494}**

This configuration determines the duration between the startup attempts. It also determines the duration between the activation of the operational contact and the first attempt at restarting.

## **SYSTEM {1101}**

### ***Command entry {1537}***

The following parameters allow to customize the command entry.

#### **Command entry active {1545}**

This parameter allows you to determine if the command entry is activated closed or open.

#### **Transfer prohibited {1538}**

If this parameter is activated, the command entry forbids the closing of the transfer relay.

#### **Inverter prohibited {1539}**

If this parameter is activated, the command entry forbids the inverter function.

#### **Charger prohibited {1540}**

If this parameter is activated, the command entry forbids the battery charger function.

#### **Smart Boost prohibited {1541}**

If this parameter is activated, the command entry forbids the Smart-Boost function.

#### **Use a different value for the source maximum current {1566}**

If this parameter is activated, the value set for the max current of the source is reversed with the value programmed by the parameter below.

#### **Second maximum current of the source {1567}**

Value used instead of the main value when the control entry is activated.



Use this function if you connect regularly two different sources like a genset and shore power. By using this function, you can go from one input limit to another without having to program the maximum value at each change of source.

### ***Battery as priority energy source {1296}***

This parameter allows using in priority the energy stored in the battery even when an AC-In source is connected.



Use this function for instance if you are connected to an external source of renewable energy which you want to use in priority.

### **Voltage of the battery priority {1297}**

When the function "battery as the priority energy source" is activated, the Xtender will authorize the battery discharge until this voltage. Below this voltage the charger is put back on order to avoid a deeper discharge of the battery.

### ***Automatic restart {1129}***

In the event of an anomaly on the installation, the combi Xtender stops automatically. Depending on the seriousness of the fault, when this disappears, the Xtender may restart automatically without any user intervention (fault confirmation). The following functions allow the events for automatic restart to be defined.

After battery undervoltage {1130}

Number of battery undervoltages allowed before final stop {1304}

Leadtime to counting the battery undervoltages allowed before final stop {1404}

Number of critical battery undervoltages before final stop {1305}

Leadtime to counting the critical battery undervoltages allowed before final stop {1405}

After battery overvoltage {1131}

After inverter or Smart-Boost overload {1132}

After overtemperature {1134}



Whatever the restart method, the event is recorded in the event history so that it can be called at any time.

### ***Number of battery undervoltages allowed before final stop {1304} and***

### ***Leadtime to counting the battery undervoltages allowed before final stop {1404}***

If battery undervoltage faults occur to your system, the inverter and Smart-Boost functions are deactivated in order to protect the battery against deep discharges.

These functions can be reactivated automatically if the fault disappears. With the parameter {1304}, you can adjust the number of the faults before these functions are definitely deactivated. In this case, an intervention is necessary to reactivate these functions (fault acknowledgement).

The duration parameter allows setting the time during which these faults can be repeated.

Once this duration has come to an end, if the number of faults is not reached, the counter goes back to 0 and the faults can occur again.



To cancel the automatic reactivation, set 1 for the number of battery undervoltages allowed before final stop.  
For a permanent automatical reactivation, set 0.

### ***Number of critical battery undervoltages before final stop {1305} and***

### ***Leadtime to counting the critical battery undervoltages allowed before final stop***

### ***{1405}***

The critical battery undervoltages can also be automatically acknowledged in case of undervoltage disappearance. Like for the undervoltages (see previous paragraph) you can adjust the number of restarts of the inverter and Smart-Boost functions once the fault disappears.

### *Delay before restart after overload {1533}*

If the function inverter is stopped after an overload (power of the users too high) the inverter will do one or several attempts to restart. You can use this parameter to determine the time between the restart attempts (in seconds).



This gives you more time to disconnect the users which caused the overload.

### *Auto-start when switched on {1111}*

When this setting is activated, the Xtender starts itself automatically when the battery is connected.



Note that in this case, the output of the AC-Out is immediately supplied, and a lethal voltage is present on its terminals.

### *Ground/neutral system {1484}*

This menu allows you to determine the switching rules for the neutral and its connection to the ground in transfer relay operation (inverter mode or charger mode).

#### **Ground relay prohibited {1485}**

If you activate this setting (yes), there will be no connection between the neutral and the ground, whatever the mode of operation (inverter or charger).

If this setting is deactivated (no), the neutral is connected to the ground during operation in inverter mode and disconnected in charger mode, i.e. when the transfer relay is closed and the AC-In is connected to the AC-Out.

#### **Neutral always connected {1486}**

If this setting is activated, the neutral of the AC-Out remains connected to the neutral of the AC-In when the Xtender is operating in inverter mode.

### *Self-test of autonomy {1473}*

In case of use in emergency systems, certain regulations impose a periodic test of the system's autonomy. You can automate this test by using the following menus. There are two tests available, a weekly test and a monthly one.

#### **Weekly test {1474}**


These options allow you to set up a test which will take place every week.

#### **Manual start of a weekly test {1495}**

Allows you to immediately carry out a weekly test, without taking the predefined days into account.

### ***Days of the week {1475}***

You can carry out a test per day of the week if you wish. The days displayed are those on which the tests will be carried out.

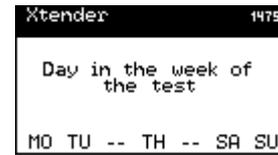

### ***Time of test start {1476}, Duration of test {1477}***

With these two settings you determine the time of the start and the duration of the weekly test. If this test is carried out several days of the week, these settings are identical for each day.

### **Monthly test {1478}**


These options allow you to set up a test which will take place up to once a month.

### **Manual start of a monthly test {1496}**

Allows you to immediately carry out a monthly test, without taking the predefined days into account.

### **Month of test {1479}**

You may carry out up to one test per month using this setting. The months displayed (the first letter of the month only) represent the months in which the monthly test will be carried out.

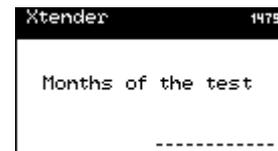

### **Date of the monthly test {1480}**

You can choose the day on which the test will take place (from 1 to 31), if the day does not exist (e.g. February 31) the test will not be carried out.

### **Day of the weekly test {1481}**

You can also choose the day of the week (Monday to Sunday) on which the test will take place. If a day of the week is activated, the setting "Date of the monthly test {1480}" indicates the week of the test.

|   |   |
|---|---|
|  | <p>For example:<br/>{1480} = 3 and {1481} = Tuesday, the test will take place on the third Tuesday of the month(s) selected in {1479}</p> |
|---|---|

### **Time of test start {1482}, Duration of test {1483}**

With these two settings you determine the time of the start and the duration of the monthly test. If this test is carried out several months of the year, these settings are identical for each test.

### ***Reset of all inverters {1468}***

This parameter allows you to restart all inverters.

## **MULTI XTENDER {1282}**

This section allows setting the operating possibilities of systems with several Xtenders. Either parallel or 3-phase.

### ***3-phase integral mode {1283}***

If you activate this parameter, the system will work in order to have either a 3-phase output, or no output voltage. For instance in case of one phase overload, if the integral mode is activated, the cut of this phase will lead to the cut of all phases.

### ***Multiple authorized inverters {1461}***

This parameter allows to forbid the setting in parallel or in 3-phase of a system. If this parameter is deactivated and several Xtender are connected with the link cable, it will be impossible to put them on.

### ***Multiple independent inverters {1462}***

This setting allows you to use several Xtenders connected via the same communication bus, without using synchronization. The phase selection tabs are therefore not in operation. However, in order to display the user information, the RCC remote control uses this information (if two inverters are programmed on the same phase, they appear as if they are in parallel on the remote control).

### ***Authorize the stand-by of the secondary inverters (slaves) {1547}***

When several Xtenders are connected in parallel and the energy consumption is reduced, one single Xtender may be enough to cope with the needs. In that case, the others can be put in stand-by in order to save energy. This parameter allows you to authorize or not the stand-by of the secondary Xtenders.



As soon as the power reaches around 75% of the Xtender nominal power the others are activated.  
The activation time is around 50ms.

## **GRID-FEEDING {1522}**

It is possible under some conditions to feed the grid with energy (AC-In). The following options allow you to control the different parameters involved.

### ***Grid-feeding authorized {1127}***

This parameter allows to authorize or not the grid-feeding. By default setting the grid-feeding is not authorized. In that case, no energy is sent back to the grid, whatever the operating mode of the Xtender.


The basic grid-feeding function maintains the battery charged at the standard cycle voltage (absorption, floating, ...). If there is excess energy in the batteries then power is sent to the grid. Per example for an installation connected to a grid with battery full, if a solar charger connected to the battery raises the voltage, grid-feeding is done to maintain voltage at the floating level.

### ***Maximum grid-feeding current {1523}***

This parameter allows setting the current limit of the grid-feeding. Whatever the setting of this parameter, the maximum current of the source is respected {1107} (power sharing).

The grid-feeding is reduced linearly when the frequency is over the nominal frequency of the inverter. Until the reference user frequency {1112}+1Hz the grid-feeding is to the maximum and at user frequency+2Hz the grid-feeding current is zero. Typically in a 50Hz system, the grid-feeding is at the maximum at 51Hz or below, is half at 51.5Hz and is zero at 52Hz and over.

This behaviour is used to be compatible with frequency shift power control in off-grid systems.

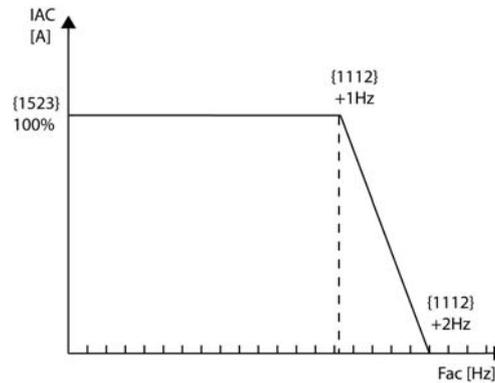

### **Forced grid-feeding {1524} {1525} {1526}**

With the forced grid-feeding, it is possible to discharge the batteries in the grid during a given time frame. The goal is to support a grid at during a given time of the day with stored energy. Between the start time {1525} and the stop time {1526} the batteries are discharge to the grid-feeding voltage target {1524}. The maximum grid-feeding current is always given by the {1523} parameter. If the start time and the stop time are the same, then the standard grid-feeding is used and not the forced greed-feeding (no discharge of the battery into the grid).

Per example the grid-feeding is allowed and forced between 19h00 and 20h00 at 24V. During the day, the batteries are charged and if there is excess solar energy, it is sent to the grid to maintain the floating voltage. At 19h00 the inverter starts to discharge the batteries in the grid at the given maximal current. It stops to discharge at 20h.



Be careful with grid-feeding function. You must among others respect the rules in force prescribed by your utility.

The grid-feeding with inverters connected to batteries is forbidden in some countries. There is no ENS function or any other similar function linked with the grid-feeding function of the Xtender. You can add an external ENS detector.

## INFORMATION ON THE SYSTEM

The system information allows you to check the versions of the various elements of your installation.



## REMOTE CONTROLS

You will receive information on the hardware and software versions for each remote control. Furthermore, you have access to its unique ID number. This unique number is marked FID followed by its ID.

## XTENDER


For each Xtender connected at the remote control, you can consult the following information: the hardware version of the motherboard itself as well as the powerboard, the software version of the Xtender program and the unique ID of the Xtender. This unique number is also marked FID and followed by its ID.

## UPDATES

The RCC remote control program as well as the code in the inverters/chargers of the Xtender series can be updated in order to integrate new features.

For the RCC remote control it is also possible to implement new display languages (up to a maximum of 4 on each RCC remote control). You may obtain information about the availability of updates or additional languages from your installer or consult the website: [www.studer-innotec.com](http://www.studer-innotec.com).

### UPDATING PROCESS



To carry out an update, enter the SD card containing the correct files in the RCC remote control slot meant for this.

The system checks the compatibility of the hardware with the software present on the SD card and if it proves to be compatible the update is carried out automatically.

The SD card must not be removed before the end of the updating process. Yet if the updating process is interrupted, the SD card has to be inserted again and the process will carry on.

The steps of the updating process are the following:

Updating the code of the remote control.

Updating of the files of the remote control.

Updating of the code of the inverters.

Updating of the files of the inverters.

The updating process takes 3 to 15 minutes, depending on the number of inverters connected to the remote control.

Once the update has been carried out, the remote control display one of this message:

« The updating is completed »

« Your installation is already updated »

« Data transfer uncompleted ». In this case, the update process is uncompleted. You must start the update process again from the beginning.

When there is a change of language, the system restarts automatically with the new language as the current language.

If the installation consists of several remote controls, each of them has to be updated separately.

### COMPATIBILITY

Studer Innotec guarantees the compatibility of the software updates with the hardware for one year, starting from the date of purchase. The updates are no longer guaranteed beyond this date and a hardware upgrade may be required. Please contact your reseller for any additional information on compatibility.

## APPLICATION EXAMPLES


The examples below illustrate some implementation options for current installations. Useful configurations for these situations are also given. These are common and non-obligatory configurations.

For more details on each configuration shown, please refer to the complete description given above in this manual.

### GENERAL USE : INVERTER, CHARGER WITH GRID

Description:

In this configuration, the Xtender is connected to a grid with high power output. The basic functions are configured for this type of application. The loads are supplied by the grid via the transfer relay and this helps to charge the battery. In the event of a disconnection from the grid, the transfer is stopped and the inverter is activated automatically.

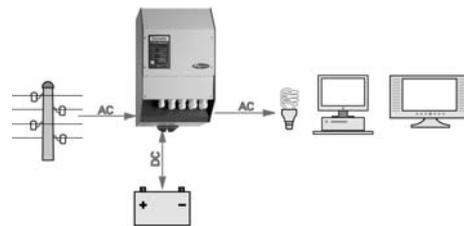

Associated current configurations:

Battery charge current {1138} Adapt this configuration to the technical data for the batteries for the best charging capacity.

Adjustment of the standby level {1187} Adjust this configuration if the minimum load has not been detected or, conversely, if the inverter remains engaged when all the loads have been deactivated.


Additional configurations:

Battery curve {1140} {1156} {1157} Adapt these configurations in order to adjust the voltage levels and the durations of charge to your battery manufacturer's data.

### USE OF A LIMITED POWER SOURCE

Description:

For example, a source such as a generator, a camping or dock connection. In this case the power available is limited. In the case of high power consumers the source is insufficient and needs an assistance by means of the energy stored in the batteries.

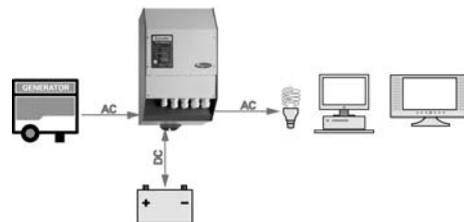

Associated current configurations:

Maximum current of the AC source {1107} By adjusting this configuration to the maximum current that the source can supply, the power available is ideally shared between the battery charging and the consumers. For example, if a load is deactivated, the battery charger current is automatically increased.


Locking: Smart-Boost active {1126} In the event that the maximum source current is exceeded, the inverter supplies the energy required to keep the source current at the set maximum level. Thus, the inopportune stopping of the generator is avoided, the circuit breaker of the dock or camping connection is not activated and the supply of the loads is assured.

Option of exceeding the power sharing value without opening the transfer relay {1436}. Allows retention of the drawn transfer in the event of consumption of peak currents such as compressor startups.

## USE TO INCREASE THE POWER ON AN EXISTING INSTALLATION

### Description:

The availability of an inverter or a inverter/charger allows its power to be extended with an Xtender connected in cascade. The maximum power of the first inverter is limited by the maximum current from the transfer relay of the Xtender.

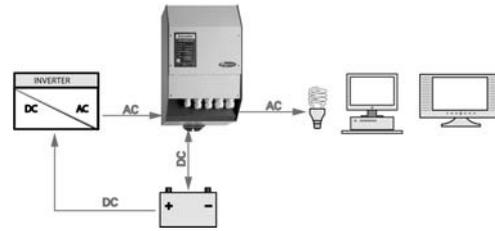

### Associated current configurations:

Maximum current of the AC source {1107} Adjust this configuration in relation to the maximum current that can supply the old inverter.


Locking: Smart-Boost inactive {1126} Suppress the locking of this function: This way, when the first inverter has reached its maximum power, the power consumed that will be supplied by the Xtender could be increased.

Locking: Inactive charger {1125} This lock, without which the battery energy would be taken by the first inverter, is returned by the Xtender charger. This would only have the effect of discharging the battery with losses caused in the two inverters or inverter/chargers.

## LOAD SHEDDING OF THE SECOND PRIORITY LOADS

### Description:

Consumers with different supply priorities allow automatic disconnection of the supply to consumers of lower priority if the battery becomes weak. The supply of the priority loads is thus assured, such as lighting or computers, for example. In this case, the low-priority loads must be cabled via one of the auxiliary relays. The reference for the example below corresponds to the auxiliary contact no 1.

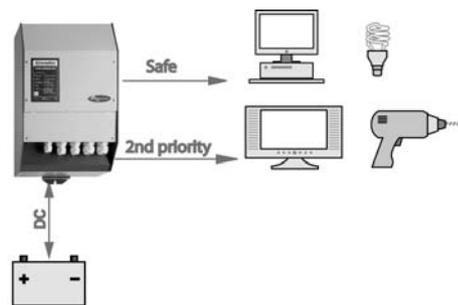

### Associated current configurations:

Communication mode {1202}

Relay activated by the battery voltage {1245}

Voltage 1 active {1246}

Voltage 1 {1247}

Duration 1 active {1248}

Voltage for deactivation of the auxiliary relay {1255}

Duration for deactivation {1256}

## APPENDICES

### APPENDIX 1 : LIST OF CONFIGURATION INTERDEPENDENCIES

| N°   | Configuration                                   | N°                   | Minimum limit by   | N°   | Maximum limit by                                |
|------|---|----------------------|--|------|---|
| 1108 | Undervoltage of the empty battery               | 1109                 | Undervoltage of the charged battery  | 1110 | Reactivation voltage after battery undervoltage |
| 1109 | Undervoltage of the charged battery             |                      |  | 1108 | Undervoltage of the empty battery               |
| 1110 | Reactivation voltage after battery undervoltage | 1108                 | Undervoltage of the empty battery  |      |   |
| 1113 | Activation temperature for buzzer               | 1114                 | Deactivation temperature for buzzer  |      |   |
| 1114 | Deactivation temperature for buzzer             |                      |  | 1113 | Activation temperature for buzzer               |
| 1115 | Maximum operating temperature                   | 1116<br>1308<br>1292 | Restart temperature<br>Temperature at which the charge current begins to reduce<br>Temperature for the start of the output correction (Uout) |      |   |
| 1116 | Restart temperature                             |                      |  | 1115 | Maximum operating temperature                   |
| 1117 | Activation temperature for ventilator speed 1   | 1118                 | Deactivation temperature for ventilator speed 1  |      |   |
| 1118 | Deactivation temperature for ventilator speed 1 |                      |  | 1117 | Activation temperature for ventilator speed 1   |
| 1119 | Activation temperature for ventilator speed 2   | 1120                 | Deactivation temperature for ventilator speed 2  |      |   |
| 1120 | Deactivation temperature for ventilator speed 2 |                      |  | 1119 | Activation temperature for ventilator speed 2   |
| 1121 | Maximum operating voltage                       | 1122                 | Reactivation voltage after battery overvoltage   |      |   |

|      |   |                      |  |                      |  |
|------|---|----------------------|--|----------------------|--|
| 1122 | Reactivation voltage after battery overvoltage            |                      |  | 1121                 | Maximum operating voltage                |
| 1308 | Temperature at which the charge current begins to reduce  |                      |  | 1115                 | Maximum operating temperature            |
| 1140 | Battery maintenance voltage (floating)                    |                      |  | 1156                 | Battery absorption voltage               |
| 1152 | Startup voltage of the timer before alarm                 |                      |  | 1156                 | Battery absorption voltage               |
| 1156 | Battery absorption voltage                                | 1140                 | Battery maintenance voltage (floating)                   |                      |  |
| 1164 | Battery equalization voltage                              | 1156                 | Battery absorption voltage                               |                      |  |
| 1172 | Reduced maintenance voltage                               |                      |  | 1140                 | "Battery maintenance voltage (floating)" |
| 1174 | Periodic absorption voltage                               | 1172                 | Reduced maintenance voltage                              |                      |  |
| 1292 | Temperature for the start of the output correction (Uout) |                      |  | 1115                 | Maximum operating temperature            |
| 1195 | Adaptable maximum low voltage                             | 1108                 | Undervoltage of the empty battery                        |                      |  |
| 1199 | Transfer voltage to the inverter                          | 1200                 | Immediate open critical threshold for the transfer (UPS) |                      |  |
| 1200 | Immediate open critical threshold for the transfer (UPS)  |                      |  | 1199                 | Transfer voltage to the inverter         |
| 1255 | Deactivation voltage                                      | 1247<br>1250<br>1253 | Voltage 1<br>Voltage 2<br>Voltage 3                      |                      |  |
| 1267 | Deactivation power  |                      |  | 1259<br>1262<br>1265 | Power 1<br>Power 2<br>Power 3            |
| 1364 | Deactivation voltage                                      | 1356<br>1359<br>1362 | Voltage 1<br>Voltage 2<br>Voltage 3                      |                      |  |
| 1376 | Deactivation power  |                      |  | 1368<br>1371<br>1374 | Power 1<br>Power 2<br>Power 3            |

## FACTORY SETTING VALUES

| Level  | User ref. | Parameter  | Unit       | 12            |        |               | 24            |        |               | 48            |        |               |
|--------|-----------|--|------------|---------------|--------|---------------|---------------|--------|---------------|---------------|--------|---------------|
|        |           |  |            | Factory       | Min    | Max           | Factory       | Min    | Max           | Factory       | Min    | Max           |
| Basic  | 1100      | BASIC SETTINGS   |            |               |        |               |               |        |               |               |        |               |
| Basic  | 1107      | Max source AC current (Power Sharing)                          | Aac        | 30            | 2      | 50            | 30            | 2      | 50            | 30            | 2      | 50            |
| Basic  | 1138      | Battery charge current   | Adc        | 60            | 0      | 200           | 60            | 0      | 200           | 60            | 0      | 200           |
| Basic  | 1126      | Smart-Boost allowed  | Yes/No     | No            | Yes    | No            | No            | Yes    | No            | No            | Yes    | No            |
| Basic  | 1124      | Inverter allowed   | Yes/No     | Yes           | Yes    | No            | Yes           | Yes    | No            | Yes           | Yes    | No            |
| Basic  | 1435      | Immediate detection of input voltage loss (UPS)                | No/Yes     | No            | No     | Yes           | No            | No     | Yes           | No            | No     | Yes           |
| Basic  | 1187      | Standby level  | %          | 10            | 0      | 100           | 10            | 0      | 100           | 10            | 0      | 100           |
| Basic  | 1395      | Restore default settings                                       |            | S             | S      | S             | S             | S      | S             | S             | S      | S             |
| Inst.  | 1287      | Restore factory settings                                       |            | S             | S      | S             | S             | S      | S             | S             | S      | S             |
| Expert | 1137      | BATTERY MANAGEMENT AND CYCLE                                   |            |               |        |               |               |        |               |               |        |               |
| Expert | 1125      | Charger allowed  | Yes/No     | Yes           | Yes    | No            | Yes           | Yes    | No            | Yes           | Yes    | No            |
| Basic  | 1138      | Battery charge current   | Adc        | 60            | 0      | 200           | 60            | 0      | 200           | 60            | 0      | 200           |
| Expert | 1139      | Battery temperature compensation                               | mV/°C/cell | -5            | -8     | 0             | -5            | -8     | 0             | -5            | -8     | 0             |
| Expert | 1568      | Undervoltage   |            |               |        |               |               |        |               |               |        |               |
| Expert | 1108      | Battery undervoltage level without load                        | Vdc        | 11.58         | 9.48   | 18            | 23.16         | 18.96  | 36            | 46.32         | 37.92  | 72            |
| Expert | 1531      | Battery undervoltage dynamic compensation                      |            |               |        |               |               |        |               |               |        |               |
| Expert | 1191      | Battery undervoltage dynamic compensation                      | No/Yes     | Yes           | No     | Yes           | Yes           | No     | Yes           | Yes           | No     | Yes           |
| Expert | 1532      | Kind of dynamic compensation                                   | Text       | Autom<br>atic | Manual | Autom<br>atic | Autom<br>atic | Manual | Autom<br>atic | Autom<br>atic | Manual | Autom<br>atic |
| Expert | 1109      | Battery undervoltage level at full load                        | Vdc        | 10.5          | 9.48   | 18            | 21            | 18.96  | 36            | 42            | 37.92  | 72            |
| Expert | 1190      | Battery undervoltage duration before turn off                  | min        | 3             | 0      | 60            | 3             | 0      | 60            | 3             | 0      | 60            |
| Expert | 1110      | Restart voltage after batteries undervoltage                   | Vdc        | 12            | 9.48   | 18            | 24            | 18.96  | 36            | 48            | 37.92  | 72            |
| Expert | 1196      | Battery low level for acoustic alarm                           | Vac        | 10.8          | 9.48   | 12            | 21.6          | 18.96  | 24            | 43.2          | 37.92  | 48            |
| Expert | 1469      | Acoustic alarm duration  | min        | 3             | 0      | 10            | 3             | 0      | 10            | 3             | 0      | 10            |
| Expert | 1194      | Battery adaptive low voltage                                   | No/Yes     | No            | No     | Yes           | No            | No     | Yes           | No            | No     | Yes           |
| Expert | 1195      | Max voltage for adaptive low voltage                           | Vac        | 12.48         | 10.2   | 12.6          | 24.96         | 20.4   | 25.2          | 49.92         | 40.8   | 50.4          |
| Expert | 1307      | Reset voltage for adaptive correction                          | Vac        | 13.2          | 9.48   | 18            | 26.4          | 18.96  | 36            | 52.8          | 37.92  | 72            |
| Expert | 1298      | Increment step of the adaptive low voltage                     | Vac        | 0.12          | 0      | 0.36          | 0.24          | 0      | 0.72          | 0.48          | 0      | 1.44          |
| Expert | 1121      | Battery overvoltage level                                      | Vdc        | 17.04         | 9.48   | 18.6          | 34.08         | 18.96  | 37.2          | 68.16         | 37.92  | 74.4          |
| Expert | 1122      | Restart voltage level after an battery overvoltage             | Vdc        | 16.2          | 9.48   | 18            | 32.4          | 18.96  | 36            | 64.8          | 37.92  | 72            |
| Expert | 1140      | Battery floating level   | Vdc        | 13.62         | 9.48   | 18            | 27.24         | 18.96  | 36            | 54.48         | 37.92  | 72            |
| Expert | 1467      | Force phase of floating  |            | S             | S      | S             | S             | S      | S             | S             | S      | S             |
| Expert | 1141      | New cycle menu   |            |               |        |               |               |        |               |               |        |               |
| Expert | 1142      | Force a new cycle  |            | S             | S      | S             | S             | S      | S             | S             | S      | S             |
| Expert | 1143      | Battery voltage level 1 to start a new cycle                   | Vdc        | 12.6          | 9.48   | 18            | 25.2          | 18.96  | 36            | 50.4          | 37.92  | 72            |
| Expert | 1144      | Time period under battery voltage level 1 to start a new cycle | min        | 30            | 0      | 240           | 30            | 0      | 240           | 30            | 0      | 240           |
| Expert | 1145      | Battery voltage level 2 to start a new cycle                   | Vdc        | 12.3          | 9.48   | 18            | 24.6          | 18.96  | 36            | 49.2          | 37.92  | 72            |
| Expert | 1146      | Time period under battery voltage level 2 to start a new cycle | sec        | 30            | 0      | 600           | 30            | 0      | 600           | 30            | 0      | 600           |
| Expert | 1149      | New cycle priority on absorption and equalization phases       | No/Yes     | No            | No     | Yes           | No            | No     | Yes           | No            | No     | Yes           |
| Expert | 1147      | Battery cycling restricted                                     | No/Yes     | No            | No     | Yes           | No            | No     | Yes           | No            | No     | Yes           |

|        |      |  |        |      |       |     |      |       |     |      |       |     |
|--------|------|--|--------|------|-------|-----|------|-------|-----|------|-------|-----|
| Expert | 1148 | Minimal delay between cycles                               | days   | 3    | 0     | 744 | 3    | 0     | 744 | 3    | 0     | 744 |
| Expert | 1451 | Phase of absorption  |        |      |       |     |      |       |     |      |       |     |
| Expert | 1155 | Absorption phase allowed                                   | No/Yes | Yes  | No    | Yes | Yes  | No    | Yes | Yes  | No    | Yes |
| Expert | 1156 | Battery absorption voltage                                 | Vdc    | 14.4 | 9.48  | 18  | 28.8 | 18.96 | 36  | 57.6 | 37.92 | 72  |
| Expert | 1157 | Absorption duration  | hours  | 2    | .25   | 18  | 2    | .25   | 18  | 2    | .25   | 18  |
| Expert | 1158 | End of absorption triggered with current                   | No/Yes | Yes  | No    | Yes | Yes  | No    | Yes | Yes  | No    | Yes |
| Expert | 1159 | Current limit to quit the absorption phase                 | Adc    | 10   | 2     | 50  | 10   | 2     | 50  | 10   | 2     | 50  |
| Expert | 1160 | Maximal frequency of absorption control                    | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1161 | Minimal delay since last absorption                        | hours  | 2    | 0     | 744 | 2    | 0     | 744 | 2    | 0     | 744 |
| Expert | 1452 | Phase of equalization                                      |        |      |       |     |      |       |     |      |       |     |
| Expert | 1162 | Force equalization   |        | S    | S     | S   | S    | S     | S   | S    | S     | S   |
| Expert | 1163 | Equalization allowed                                       | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1291 | Equalization before absorption phase                       | No/Yes | Yes  | No    | Yes | Yes  | No    | Yes | Yes  | No    | Yes |
| Expert | 1290 | Equalization current                                       | Adc    | 60   | 0     | 200 | 60   | 0     | 200 | 60   | 0     | 200 |
| Expert | 1164 | Equalization voltage                                       | Vdc    | 15.6 | 13.02 | 18  | 31.2 | 26.04 | 36  | 62.4 | 52.08 | 72  |
| Expert | 1165 | Equalization duration                                      | hours  | .5   | .25   | 10  | .5   | .25   | 10  | .5   | .25   | 10  |
| Expert | 1166 | Number of cycles before an equalization                    |        | 25   | 0     | 100 | 25   | 0     | 100 | 25   | 0     | 100 |
| Expert | 1284 | Equalization at fixed interval                             | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1285 | Weeks between equalizations                                | weeks  | 26   | 1     | 104 | 26   | 1     | 104 | 26   | 1     | 104 |
| Expert | 1168 | End of equalization triggered with current                 | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1169 | Current limit to quit the equalization phase               | Adc    | 10   | 4     | 30  | 10   | 4     | 30  | 10   | 4     | 30  |
| Expert | 1453 | Phase of reduced floating                                  |        |      |       |     |      |       |     |      |       |     |
| Expert | 1170 | Reduced floating allowed                                   | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1171 | Floating duration before reduced floating                  | days   | 1    | 0     | 31  | 1    | 0     | 31  | 1    | 0     | 31  |
| Expert | 1172 | Reduced floating voltage                                   | Vdc    | 13.2 | 13.02 | 18  | 26.4 | 26.04 | 36  | 52.8 | 52.08 | 72  |
| Expert | 1454 | Phase of periodic absorption                               |        |      |       |     |      |       |     |      |       |     |
| Expert | 1173 | Periodic absorption allowed                                | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1174 | Periodic absorption voltage                                | Vdc    | 14.4 | 13.02 | 18  | 28.8 | 26.04 | 36  | 57.6 | 52.08 | 72  |
| Expert | 1175 | Reduced floating duration before periodic absorption       | days   | 7    | 0     | 31  | 7    | 0     | 31  | 7    | 0     | 31  |
| Expert | 1176 | Periodic absorption duration                               | hours  | .5   | 0     | 10  | .5   | 0     | 10  | .5   | 0     | 10  |
| Expert | 1186 | INVERTER   |        |      |       |     |      |       |     |      |       |     |
| Basic  | 1124 | Inverter allowed   | Yes/No | Yes  | Yes   | No  | Yes  | Yes   | No  | Yes  | Yes   | No  |
| Expert | 1286 | AC Output voltage  | Vac    | 230  | 110   | 245 | 230  | 110   | 245 | 230  | 110   | 245 |
| Expert | 1548 | AC voltage increase in function of battery voltage         | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1560 | Max AC voltage increase with battery voltage               | Vac    | 10   | 5     | 15  | 10   | 5     | 15  | 10   | 5     | 15  |
| Expert | 1112 | Inverter frequency   | Hz     | 50   | 45    | 65  | 50   | 45    | 65  | 50   | 45    | 65  |
| Expert | 1536 | Inverter frequency increase when battery full              | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1549 | Inverter frequency increase in function of battery voltage | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1546 | Max frequency increase                                     | Hz     | 4    | 0     | 5   | 4    | 0     | 5   | 4    | 0     | 5   |
| Expert | 1420 | Standby and turn on  |        |      |       |     |      |       |     |      |       |     |
| Basic  | 1187 | Standby level  | %      | 10   | 0     | 100 | 10   | 0     | 100 | 10   | 0     | 100 |
| Expert | 1189 | Time delay between standby pulses                          | sec    | .8   | .2    | 10  | .8   | .2    | 10  | .8   | .2    | 10  |
| Expert | 1188 | Standby number of pulses                                   |        | 1    | 1     | 10  | 1    | 1     | 10  | 1    | 1     | 10  |
| Expert | 1438 | Solsafe presence Energy source at AC-Out side              | No/Yes | No   | No    | Yes | No   | No    | Yes | No   | No    | Yes |
| Expert | 1197 | AC-IN AND TRANSFER   |        |      |       |     |      |       |     |      |       |     |
| Expert | 1128 | Transfer relay allowed                                     | Yes/No | Yes  | Yes   | No  | Yes  | Yes   | No  | Yes  | Yes   | No  |

|        |      |  |        |                          |                          |                               |                          |                          |                               |                          |                          |                               |
|--------|------|--|--------|--------------------------|--------------------------|-------------------------------|--------------------------|--------------------------|-------------------------------|--------------------------|--------------------------|-------------------------------|
| Expert | 1528 | Delay before closing transfer relay  | min    | 0                        | 0                        | 30                            | 0                        | 0                        | 30                            | 0                        | 0                        | 30                            |
| Basic  | 1107 | Max source AC current (Power Sharing)  | Aac    | 30                       | 2                        | 50                            | 30                       | 2                        | 50                            | 30                       | 2                        | 50                            |
| Expert | 1527 | Decrease max input limit current with AC-In voltage                          | No/Yes | No                       | No                       | Yes                           | No                       | No                       | Yes                           | No                       | No                       | Yes                           |
| Basic  | 1126 | Smart-Boost allowed  | Yes/No | No                       | Yes                      | No                            | No                       | Yes                      | No                            | No                       | Yes                      | No                            |
| Expert | 1436 | Overrun AC source current limit without opening the transfer relay           | No/Yes | Yes                      | No                       | Yes                           | Yes                      | No                       | Yes                           | Yes                      | No                       | Yes                           |
| Basic  | 1435 | Immediate detection of input voltage loss (UPS)                              | No/Yes | No                       | No                       | Yes                           | No                       | No                       | Yes                           | No                       | No                       | Yes                           |
| Expert | 1510 | Tolerance on fast detection of input loss                                    |        | 2                        | 1                        | 20                            | 2                        | 1                        | 20                            | 2                        | 1                        | 20                            |
| Expert | 1199 | Input voltage giving an opening of the transfer relay with delay             | Vac    | 180                      | 50                       | 230                           | 180                      | 50                       | 230                           | 180                      | 50                       | 230                           |
| Expert | 1198 | Time delay before opening of transfer relay                                  | sec    | 8                        | 0                        | 30                            | 8                        | 0                        | 30                            | 8                        | 0                        | 30                            |
| Expert | 1200 | Input voltage giving an immediate opening of the transfer relay (UPS)        | Vac    | 120                      | 50                       | 230                           | 120                      | 50                       | 230                           | 120                      | 50                       | 230                           |
| Inst.  | 1432 | Absolute max limit for input voltage   | Vac    | 270                      | 235                      | 280                           | 270                      | 235                      | 280                           | 270                      | 235                      | 280                           |
| Expert | 1471 | Charge current derating  |        |                          |                          |                               |                          |                          |                               |                          |                          |                               |
| Expert | 1309 | AC input low limit voltage to allow charger function                         | Vac    | 185                      | 100                      | 230                           | 185                      | 100                      | 230                           | 185                      | 100                      | 230                           |
| Expert | 1433 | Adaptation range of the charge current according to the input voltage        | Vac    | 20                       | 5                        | 30                            | 20                       | 5                        | 30                            | 20                       | 5                        | 30                            |
| Expert | 1295 | Charge current decrease coef. at voltage limit to turn back in inverter mode | %      | 100                      | 0                        | 100                           | 100                      | 0                        | 100                           | 100                      | 0                        | 100                           |
| Inst.  | 1500 | Standby of the charger allowed   | No/Yes | Yes                      | No                       | Yes                           | Yes                      | No                       | Yes                           | Yes                      | No                       | Yes                           |
| Expert | 1505 | Delta frequency allowed above the standard input frequency                   | Hz     | 35                       | 0                        | 35                            | 35                       | 0                        | 35                            | 35                       | 0                        | 35                            |
| Expert | 1506 | Delta frequency allowed under the standard input frequency                   | Hz     | 15                       | 0                        | 15                            | 15                       | 0                        | 15                            | 15                       | 0                        | 15                            |
| Expert | 1507 | Duration with frequency error before opening the transfer                    | sec    | 5                        | 1                        | 5                             | 5                        | 1                        | 5                             | 5                        | 1                        | 5                             |
| Expert | 1201 | AUXILIARY CONTACT 1  |        |                          |                          |                               |                          |                          |                               |                          |                          |                               |
| Expert | 1569 | Reset all settings (AUX 1)   |        | S                        | S                        | S                             | S                        | S                        | S                             | S                        | S                        | S                             |
| Expert | 1202 | Operating mode (AUX 1)   | Text   | Autom<br>atic            | Autom<br>atic            | Manual<br>OFF                 | Autom<br>atic            | Autom<br>atic            | Manual<br>OFF                 | Autom<br>atic            | Autom<br>atic            | Manual<br>OFF                 |
| Expert | 1497 | Combination of the events for the auxiliary contact 1 (AUX 1)                | Text   | Any<br>(Functi<br>on OR) | Any<br>(Functi<br>on OR) | All<br>(Functi<br>on<br>AND)  | Any<br>(Functi<br>on OR) | Any<br>(Functi<br>on OR) | All<br>(Functi<br>on<br>AND)  | Any<br>(Functi<br>on OR) | Any<br>(Functi<br>on OR) | All<br>(Functi<br>on<br>AND)  |
| Expert | 1512 | Limit the time of activation of contact 1 (AUX 1)                            | No/Yes | No                       | No                       | Yes                           | No                       | No                       | Yes                           | No                       | No                       | Yes                           |
| Expert | 1514 | Maximum time of operation of contact 1 (AUX 1)                               | min    | 600                      | 10                       | 1000                          | 600                      | 10                       | 1000                          | 600                      | 10                       | 1000                          |
| Expert | 1203 | Time restrictions (AUX 1)  |        |                          |                          |                               |                          |                          |                               |                          |                          |                               |
| Expert | 1204 | Program 1 (AUX 1)  |        |                          |                          |                               |                          |                          |                               |                          |                          |                               |
| Expert | 1205 | Day of the week (AUX 1)  | days   | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1206 | Start hour (AUX 1)   | hh:mm  | 07:00                    | 00:00                    | 23:59                         | 07:00                    | 00:00                    | 23:59                         | 07:00                    | 00:00                    | 23:59                         |
| Expert | 1207 | End hour (AUX 1)   | hh:mm  | 20:00                    | 00:00                    | 23:59                         | 20:00                    | 00:00                    | 23:59                         | 20:00                    | 00:00                    | 23:59                         |
| Expert | 1208 | Program 2 (AUX 1)  |        |                          |                          |                               |                          |                          |                               |                          |                          |                               |
| Expert | 1209 | Day of the week (AUX 1)  | days   | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1210 | Start hour (AUX 1)   | hh:mm  | 07:00                    | 00:00                    | 23:59                         | 07:00                    | 00:00                    | 23:59                         | 07:00                    | 00:00                    | 23:59                         |
| Expert | 1211 | End hour (AUX 1)   | hh:mm  | 20:00                    | 00:00                    | 23:59                         | 20:00                    | 00:00                    | 23:59                         | 20:00                    | 00:00                    | 23:59                         |
| Expert | 1212 | Program 3 (AUX 1)  |        |                          |                          |                               |                          |                          |                               |                          |                          |                               |
| Expert | 1213 | Day of the week (AUX 1)  | days   | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH                | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH                | -----<br>-----           | -----<br>-----           | MO TU<br>WE TH                |

|        |      |   |        |                |                |                               |                |                |                               |                |                |                               |
|--------|------|---|--------|----------------|----------------|-------------------------------|----------------|----------------|-------------------------------|----------------|----------------|-------------------------------|
|        |      |   |        |                |                | FR SA<br>SU                   |                |                | FR SA<br>SU                   |                |                | FR SA<br>SU                   |
| Expert | 1214 | Start hour (AUX 1)                            | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1215 | End hour (AUX 1)                              | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Inst.  | 1216 | Program 4 (AUX 1)                             |        |                |                |                               |                |                |                               |                |                |                               |
| Inst.  | 1217 | Day of the week (AUX 1)                       | days   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Inst.  | 1218 | Start hour (AUX 1)                            | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Inst.  | 1219 | End hour (AUX 1)                              | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Inst.  | 1220 | Program 5 (AUX 1)                             |        |                |                |                               |                |                |                               |                |                |                               |
| Inst.  | 1221 | Day of the week (AUX 1)                       | days   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Inst.  | 1222 | Start hour (AUX 1)                            | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Inst.  | 1223 | End hour (AUX 1)                              | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Expert | 1269 | Activation with a fixed time schedule (AUX 1) |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1270 | Program 1 (AUX 1)                             |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1271 | Day of the week (AUX 1)                       | days   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1272 | Start hour (AUX 1)                            | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1273 | End hour (AUX 1)                              | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Expert | 1274 | Program 2 (AUX 1)                             |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1275 | Day of the week (AUX 1)                       | days   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1276 | Start hour (AUX 1)                            | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1277 | End hour (AUX 1)                              | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Expert | 1278 | Program 3 (AUX 1)                             |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1279 | Day of the week (AUX 1)                       | days   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1280 | Start hour (AUX 1)                            | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1281 | End hour (AUX 1)                              | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Expert | 1455 | Contact activ on event (AUX 1)                |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1225 | Xtender OFF (AUX 1)                           | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1518 | Xtender ON (AUX 1)                            | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1543 | Remote entry (AUX 1)                          | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1226 | Battery undervoltage (AUX 1)                  | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1227 | Battery overvoltage (AUX 1)                   | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1228 | Inverter or Smart- Boost overload (AUX 1)     | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |

|        |      |   |        |           |            |            |           |            |            |           |            |            |
|--------|------|---|--------|-----------|------------|------------|-----------|------------|------------|-----------|------------|------------|
| Expert | 1229 | Overtemperature (AUX 1)                                   | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1520 | No overtemperature (AUX 1)                                | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1231 | Active charger (AUX 1)                                    | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1232 | Active inverter (AUX 1)                                   | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1233 | Active Smart-Boost (AUX 1)                                | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1234 | AC input presence but with fault (AUX 1)                  | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1235 | AC input presence (AUX 1)                                 | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1236 | Transfer relay ON (AUX 1)                                 | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1237 | AC out presence (AUX 1)                                   | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1238 | Bulk charge phase (AUX 1)                                 | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1239 | Absorption phase (AUX 1)                                  | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1240 | Equalization phase (AUX 1)                                | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1242 | Floating (AUX 1)  | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1243 | Reduced floating (AUX 1)                                  | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1244 | Periodic absorption (AUX 1)                               | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1529 | Autonomy test running (AUX 1)                             | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1245 | Contact active in function of battery voltage (AUX 1)     |        |           |            |            |           |            |            |           |            |            |
| Expert | 1288 | Use dynamic compensation of battery level (AUX 1)         | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1246 | Battery voltage 1 activate (AUX 1)                        | No/Yes | Yes       | No         | Yes        | Yes       | No         | Yes        | Yes       | No         | Yes        |
| Expert | 1247 | Battery voltage 1 (AUX 1)                                 | Vdc    | 11.7      | 9          | 18         | 23.4      | 18         | 36         | 46.8      | 36         | 72         |
| Expert | 1248 | Delay 1 (AUX 1)   | min    | 1         | 0          | 60         | 1         | 0          | 60         | 1         | 0          | 60         |
| Expert | 1249 | Battery voltage 2 activate (AUX 1)                        | No/Yes | Yes       | No         | Yes        | Yes       | No         | Yes        | Yes       | No         | Yes        |
| Expert | 1250 | Battery voltage 2 (AUX 1)                                 | Vdc    | 12        | 9          | 18         | 24        | 18         | 36         | 48        | 36         | 72         |
| Expert | 1251 | Delay 2 (AUX 1)   | min    | 10        | 0          | 60         | 10        | 0          | 60         | 10        | 0          | 60         |
| Expert | 1252 | Battery voltage 3 activate (AUX 1)                        | No/Yes | Yes       | No         | Yes        | Yes       | No         | Yes        | Yes       | No         | Yes        |
| Expert | 1253 | Battery voltage 3 (AUX 1)                                 | Vdc    | 12.3      | 9          | 18         | 24.6      | 18         | 36         | 49.2      | 36         | 72         |
| Expert | 1254 | Delay 3 (AUX 1)   | min    | 60        | 0          | 60         | 60        | 0          | 60         | 60        | 0          | 60         |
| Expert | 1255 | Battery voltage to deactivate (AUX 1)                     | Vdc    | 13.5      | 9          | 18         | 27        | 18         | 36         | 54        | 36         | 72         |
| Expert | 1256 | Delay to deactivate (AUX 1)                               | min    | 60        | 0          | 240        | 60        | 0          | 240        | 60        | 0          | 240        |
| Expert | 1516 | Deactivate if battery in floating phase (AUX 1)           | No/Yes | Yes       | No         | Yes        | Yes       | No         | Yes        | Yes       | No         | Yes        |
| Expert | 1257 | Contact active with inverter power or smart boost (AUX 1) |        |           |            |            |           |            |            |           |            |            |
| Expert | 1258 | Power level 1 of inverter or boost activate (AUX 1)       | No/Yes | Yes       | No         | Yes        | Yes       | No         | Yes        | Yes       | No         | Yes        |
| Expert | 1259 | Power level 1 (AUX 1)                                     | % Pnom | 120       | 20         | 120        | 120       | 20         | 120        | 120       | 20         | 120        |
| Expert | 1260 | Time delay 1 (AUX 1)                                      | min    | 1         | 0          | 60         | 1         | 0          | 60         | 1         | 0          | 60         |
| Expert | 1261 | Power level 2 of inverter or boost activate (AUX 1)       | No/Yes | Yes       | No         | Yes        | Yes       | No         | Yes        | Yes       | No         | Yes        |
| Expert | 1262 | Power level 2 (AUX 1)                                     | % Pnom | 80        | 20         | 120        | 80        | 20         | 120        | 80        | 20         | 120        |
| Expert | 1263 | Time delay 2 (AUX 1)                                      | min    | 5         | 0          | 60         | 5         | 0          | 60         | 5         | 0          | 60         |
| Expert | 1264 | Power level 3 of inverter or boost activate (AUX 1)       | No/Yes | No        | No         | Yes        | No        | No         | Yes        | No        | No         | Yes        |
| Expert | 1265 | Power level 3 (AUX 1)                                     | % Pnom | 50        | 20         | 120        | 50        | 20         | 120        | 50        | 20         | 120        |
| Expert | 1266 | Time delay 3 (AUX 1)                                      | min    | 30        | 0          | 60         | 30        | 0          | 60         | 30        | 0          | 60         |
| Expert | 1267 | Inverter power level to deactivate (AUX 1)                | % Pnom | 40        | 20         | 120        | 40        | 20         | 120        | 40        | 20         | 120        |
| Expert | 1268 | Time delay to deactivate (AUX 1)                          | min    | 5         | 0          | 60         | 5         | 0          | 60         | 5         | 0          | 60         |
| Expert | 1310 | AUXILIARY CONTACT 2                                       |        |           |            |            |           |            |            |           |            |            |
| Expert | 1570 | Reset all settings (AUX 2)                                |        | S         | S          | S          | S         | S          | S          | S         | S          | S          |
| Expert | 1311 | Operating mode (AUX 2)                                    | Text   | Revers ed | Autom atic | Manual OFF | Revers ed | Autom atic | Manual OFF | Revers ed | Autom atic | Manual OFF |

|        |      |   |        | automa<br>tic           |                         |                               | automa<br>tic           |                         |                               | automa<br>tic           |                         |                               |
|--------|------|---|--------|-------------------------|-------------------------|-------------------------------|-------------------------|-------------------------|-------------------------------|-------------------------|-------------------------|-------------------------------|
| Expert | 1498 | Combination of the events for the auxiliary contact 2 (AUX 2) | Text   | Any<br>(Funci<br>on OR) | Any<br>(Funci<br>on OR) | All<br>(Funci<br>on<br>AND)   | Any<br>(Funci<br>on OR) | Any<br>(Funci<br>on OR) | All<br>(Funci<br>on<br>AND)   | Any<br>(Funci<br>on OR) | Any<br>(Funci<br>on OR) | All<br>(Funci<br>on<br>AND)   |
| Expert | 1513 | Limit the time of activation of contact 2 (AUX 2)             | No/Yes | No                      | No                      | Yes                           | No                      | No                      | Yes                           | No                      | No                      | Yes                           |
| Expert | 1515 | Maximum time of operation of contact 2 (AUX 2)                | min    | 600                     | 10                      | 1000                          | 600                     | 10                      | 1000                          | 600                     | 10                      | 1000                          |
| Expert | 1312 | Time restrictions (AUX 2)                                     |        |                         |                         |                               |                         |                         |                               |                         |                         |                               |
| Expert | 1313 | Program 1 (AUX 2)   |        |                         |                         |                               |                         |                         |                               |                         |                         |                               |
| Expert | 1314 | Day of the week (AUX 2)                                       | days   | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1315 | Start hour (AUX 2)  | hh:mm  | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         |
| Expert | 1316 | End hour (AUX 2)  | hh:mm  | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         |
| Expert | 1317 | Program 2 (AUX 2)   |        |                         |                         |                               |                         |                         |                               |                         |                         |                               |
| Expert | 1318 | Day of the week (AUX 2)                                       | days   | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1319 | Start hour (AUX 2)  | hh:mm  | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         |
| Expert | 1320 | End hour (AUX 2)  | hh:mm  | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         |
| Expert | 1321 | Program 3 (AUX 2)   |        |                         |                         |                               |                         |                         |                               |                         |                         |                               |
| Expert | 1322 | Day of the week (AUX 2)                                       | days   | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1323 | Start hour (AUX 2)  | hh:mm  | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         |
| Expert | 1324 | End hour (AUX 2)  | hh:mm  | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         |
| Inst.  | 1325 | Program 4 (AUX 2)   |        |                         |                         |                               |                         |                         |                               |                         |                         |                               |
| Inst.  | 1326 | Day of the week (AUX 2)                                       | days   | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU |
| Inst.  | 1327 | Start hour (AUX 2)  | hh:mm  | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         |
| Inst.  | 1328 | End hour (AUX 2)  | hh:mm  | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         |
| Inst.  | 1329 | Program 5 (AUX 2)   |        |                         |                         |                               |                         |                         |                               |                         |                         |                               |
| Inst.  | 1330 | Day of the week (AUX 2)                                       | days   | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH<br>FR SA<br>SU |
| Inst.  | 1331 | Start hour (AUX 2)  | hh:mm  | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         | 07:00                   | 00:00                   | 23:59                         |
| Inst.  | 1332 | End hour (AUX 2)  | hh:mm  | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         | 20:00                   | 00:00                   | 23:59                         |
| Expert | 1378 | Activation with a fixed time schedule (AUX 2)                 |        |                         |                         |                               |                         |                         |                               |                         |                         |                               |
| Expert | 1379 | Program 1 (AUX 2)   |        |                         |                         |                               |                         |                         |                               |                         |                         |                               |
| Expert | 1380 | Day of the week (AUX 2)                                       | days   | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH                | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH                | -----<br>-----          | -----<br>-----          | MO TU<br>WE TH                |

|        |      |   |        |                |                |                               |                |                |                               |                |                |                               |
|--------|------|---|--------|----------------|----------------|-------------------------------|----------------|----------------|-------------------------------|----------------|----------------|-------------------------------|
|        |      |   |        |                |                | FR SA<br>SU                   |                |                | FR SA<br>SU                   |                |                | FR SA<br>SU                   |
| Expert | 1381 | Start hour (AUX 2)                                    | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1382 | End hour (AUX 2)                                      | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Expert | 1383 | Program 2 (AUX 2)                                     |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1384 | Day of the week (AUX 2)                               | days   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1385 | Start hour (AUX 2)                                    | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1386 | End hour (AUX 2)                                      | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Expert | 1387 | Program 3 (AUX 2)                                     |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1388 | Day of the week (AUX 2)                               | days   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1389 | Start hour (AUX 2)                                    | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1390 | End hour (AUX 2)                                      | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Expert | 1456 | Contact activ on event (AUX 2)                        |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1333 | Xtender OFF (AUX 2)                                   | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1519 | Xtender ON (AUX 2)                                    | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1544 | Remote entry (AUX 2)                                  | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1334 | Battery undervoltage (AUX 2)                          | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1335 | Battery overvoltage (AUX 2)                           | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1336 | Inverter or Smart-Boost overload (AUX 2)              | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1337 | Overtemperature (AUX 2)                               | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1521 | No overtemperature (AUX 2)                            | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1339 | Active charger (AUX 2)                                | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1340 | Active inverter (AUX 2)                               | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1341 | Active Smart-Boost (AUX 2)                            | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1342 | AC input presence but with fault (AUX 2)              | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1343 | AC input presence (AUX 2)                             | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1344 | Transfer contact ON (AUX 2)                           | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1345 | AC out presence (AUX 2)                               | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1346 | Bulk charge phase (AUX 2)                             | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1347 | Absorption phase (AUX 2)                              | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1348 | Equalization phase (AUX 2)                            | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1350 | Floating (AUX 2)                                      | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1351 | Reduced floating (AUX 2)                              | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1352 | Periodic absorption (AUX 2)                           | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1530 | Autonomy test running (AUX 2)                         | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1353 | Contact active in function of battery voltage (AUX 2) |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1354 | Use dynamic compensation of battery level (AUX 2)     | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1355 | Battery voltage 1 activate (AUX 2)                    | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1356 | Battery voltage 1 (AUX 2)                             | Vdc    | 12             | 9              | 18                            | 24             | 18             | 36                            | 48             | 36             | 72                            |
| Expert | 1357 | Delay 1 (AUX 2)                                       | min    | 5              | 0              | 60                            | 5              | 0              | 60                            | 5              | 0              | 60                            |
| Expert | 1358 | Battery voltage 2 activate (AUX 2)                    | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |

|        |      |  |             |       |        |      |       |        |      |       |        |      |
|--------|------|--|-------------|-------|--------|------|-------|--------|------|-------|--------|------|
| Expert | 1359 | Battery voltage 2 (AUX 2)  | Vdc         | 11.52 | 9      | 18   | 23.04 | 18     | 36   | 46.08 | 36     | 72   |
| Expert | 1360 | Delay 2 (AUX 2)  | min         | 5     | 0      | 60   | 5     | 0      | 60   | 5     | 0      | 60   |
| Expert | 1361 | Battery voltage 3 activate (AUX 2)                                       | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1362 | Battery voltage 3 (AUX 2)  | Vdc         | 11.04 | 9      | 18   | 22.08 | 18     | 36   | 44.16 | 36     | 72   |
| Expert | 1363 | Delay 3 (AUX 2)  | min         | 5     | 0      | 60   | 5     | 0      | 60   | 5     | 0      | 60   |
| Expert | 1364 | Battery voltage to deactivate (AUX 2)                                    | Vdc         | 12.6  | 9      | 18   | 25.2  | 18     | 36   | 50.4  | 36     | 72   |
| Expert | 1365 | Delay to deactivate (AUX 2)  | min         | 5     | 0      | 240  | 5     | 0      | 240  | 5     | 0      | 240  |
| Expert | 1517 | Deactivate if battery in floating phase (AUX 2)                          | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1366 | Contact active with inverter power or smart boost (AUX 2)                |             |       |        |      |       |        |      |       |        |      |
| Expert | 1367 | Power level 1 of inverter or boost activate (AUX 2)                      | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1368 | Power level 1 (AUX 2)  | % Pnom      | 120   | 20     | 120  | 120   | 20     | 120  | 120   | 20     | 120  |
| Expert | 1369 | Time delay 1 (AUX 2)   | min         | 0     | 0      | 60   | 0     | 0      | 60   | 0     | 0      | 60   |
| Expert | 1370 | Power level 2 of inverter or boost activate (AUX 2)                      | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1371 | Power level 2 (AUX 2)  | % Pnom      | 80    | 20     | 120  | 80    | 20     | 120  | 80    | 20     | 120  |
| Expert | 1372 | Time delay 2 (AUX 2)   | min         | 5     | 0      | 60   | 5     | 0      | 60   | 5     | 0      | 60   |
| Expert | 1373 | Power level 3 of inverter or boost activate (AUX 2)                      | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1374 | Power level 3 (AUX 2)  | % Pnom      | 50    | 20     | 120  | 50    | 20     | 120  | 50    | 20     | 120  |
| Expert | 1375 | Time delay 3 (AUX 2)   | min         | 30    | 0      | 60   | 30    | 0      | 60   | 30    | 0      | 60   |
| Expert | 1376 | Inverter power level to deactivate (AUX 2)                               | % Pnom      | 40    | 20     | 120  | 40    | 20     | 120  | 40    | 20     | 120  |
| Expert | 1377 | Time delay to deactivate (AUX 2)   | min         | 5     | 0      | 60   | 5     | 0      | 60   | 5     | 0      | 60   |
| Expert | 1489 | AUXILIARY CONTACTS 1 AND 2 EXTENDED FUNCTIONS                            |             |       |        |      |       |        |      |       |        |      |
| Expert | 1490 | Genset control   |             |       |        |      |       |        |      |       |        |      |
| Expert | 1491 | Genset control   | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1492 | Choke pulse length   | sec         | 3     | 1      | 20   | 3     | 1      | 20   | 3     | 1      | 20   |
| Expert | 1493 | Number of starting attempts  |             | 5     | 0      | 20   | 5     | 0      | 20   | 5     | 0      | 20   |
| Expert | 1494 | Time between starting attempts   | sec         | 3     | 1      | 20   | 3     | 1      | 20   | 3     | 1      | 20   |
| Expert | 1101 | SYSTEM   |             |       |        |      |       |        |      |       |        |      |
| Expert | 1537 | Remote entry (Remote ON/OFF)   |             |       |        |      |       |        |      |       |        |      |
| Expert | 1545 | Remote entry active  | Closed/Open | Open  | Closed | Open | Open  | Closed | Open | Open  | Closed | Open |
| Expert | 1538 | Prohibits transfert relay  | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1539 | Prohibits inverter   | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1540 | Prohibits charger  | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1541 | Prohibits Smart Boost  | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Inst.  | 1542 | Prohibits grid injection   | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1566 | Use a alternate max input current  | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1567 | Alternate max. input current   | Aac         | 30    | 2      | 50   | 30    | 2      | 50   | 30    | 2      | 50   |
| Expert | 1296 | Batteries priority as energy source                                      | No/Yes      | No    | No     | Yes  | No    | No     | Yes  | No    | No     | Yes  |
| Expert | 1297 | Battery priority voltage   | Vdc         | 12.6  | 9.48   | 18   | 25.2  | 18.96  | 36   | 50.4  | 37.92  | 72   |
| Expert | 1565 | Buzzer alarm duration  | min         | 0     | 0      | 60   | 0     | 0      | 60   | 0     | 0      | 60   |
| Expert | 1129 | Auto restarts  |             |       |        |      |       |        |      |       |        |      |
| Expert | 1130 | After battery undervoltage   | No/Yes      | Yes   | No     | Yes  | Yes   | No     | Yes  | Yes   | No     | Yes  |
| Expert | 1304 | Number of batteries undervoltage allowed before definitive stop          |             | 3     | 1      | 20   | 3     | 1      | 20   | 3     | 1      | 20   |
| Expert | 1404 | Time period for batteries undervoltages counting                         | sec         | 0     | 0      | 3000 | 0     | 0      | 3000 | 0     | 0      | 3000 |
| Expert | 1305 | Number of batteries critical undervoltage allowed before definitive stop |             | 10    | 1      | 20   | 10    | 1      | 20   | 10    | 1      | 20   |
| Expert | 1405 | Time period for critical batteries undervoltages counting                | sec         | 10    | 0      | 3000 | 10    | 0      | 3000 | 10    | 0      | 3000 |
| Expert | 1131 | After battery overvoltage  | No/Yes      | Yes   | No     | Yes  | Yes   | No     | Yes  | Yes   | No     | Yes  |

|        |      |  |        |                |                |                               |                |                |                               |                |                |                               |
|--------|------|--|--------|----------------|----------------|-------------------------------|----------------|----------------|-------------------------------|----------------|----------------|-------------------------------|
| Expert | 1132 | After inverter or smart-boost overload       | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1533 | Delay to restart after an overload           | sec    | 5              | 2              | 120                           | 5              | 2              | 120                           | 5              | 2              | 120                           |
| Expert | 1134 | After overtemperature                        | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1111 | Autostart to the battery connection          | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1484 | System earthing (Earth - Neutral)            |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1485 | Prohibited ground relay                      | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1486 | Continuous neutral                           | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1473 | Autotest of the battery autonomy             |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1474 | Functionality test (weekly)                  | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1495 | Start manually a functionality test (weekly) |        | S              | S              | S                             | S              | S              | S                             | S              | S              | S                             |
| Expert | 1475 | Day in the week of the test                  | Text   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1476 | Hour of the beginning of the test            | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1477 | Duration of the test                         | min    | 60             | 0              | 480                           | 60             | 0              | 480                           | 60             | 0              | 480                           |
| Expert | 1478 | Autonomy test (monthly)                      | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1496 | Start manually an autonomy test (monthly)    |        | S              | S              | S                             | S              | S              | S                             | S              | S              | S                             |
| Expert | 1479 | Months of the test                           |        | -----<br>--    | -----<br>--    | JFMA<br>MJJAS<br>OND          | -----<br>--    | -----<br>--    | JFMA<br>MJJAS<br>OND          | -----<br>--    | -----<br>--    | JFMA<br>MJJAS<br>OND          |
| Expert | 1480 | Day in the month of the test                 |        | 1              | 1              | 31                            | 1              | 1              | 31                            | 1              | 1              | 31                            |
| Expert | 1481 | Day in the week of the test                  | Text   | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU | -----<br>----- | -----<br>----- | MO TU<br>WE TH<br>FR SA<br>SU |
| Expert | 1482 | Hour of the beginning of the test            | hh:mm  | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         | 07:00          | 00:00          | 23:59                         |
| Expert | 1483 | Duration of the test                         | min    | 60             | 0              | 480                           | 60             | 0              | 480                           | 60             | 0              | 480                           |
| Expert | 1468 | Reset of all the inverters                   |        | S              | S              | S                             | S              | S              | S                             | S              | S              | S                             |
| Expert | 1282 | MULTI XTENDER                                |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1283 | Integral mode for the three phase system     | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1461 | Multi inverters allowed                      | Yes/No | Yes            | Yes            | No                            | Yes            | Yes            | No                            | Yes            | Yes            | No                            |
| Expert | 1462 | Multi inverters independents                 | No/Yes | No             | No             | Yes                           | No             | No             | Yes                           | No             | No             | Yes                           |
| Expert | 1547 | Allow slaves standby in multi-Xtender system | No/Yes | Yes            | No             | Yes                           | Yes            | No             | Yes                           | Yes            | No             | Yes                           |
| Expert | 1522 | INJECTION                                    |        |                |                |                               |                |                |                               |                |                |                               |
| Expert | 1127 | Grid injection allowed                       | Yes/No | No             | Yes            | No                            | No             | Yes            | No                            | No             | Yes            | No                            |
| Expert | 1523 | Max injection current                        | Aac    | 10             | 0              | 30                            | 10             | 0              | 30                            | 10             | 0              | 30                            |
| Expert | 1524 | Battery voltage target for forced injection  | Vdc    | 12             | 9.48           | 18                            | 24             | 18.96          | 36                            | 48             | 37.92          | 72                            |
| Expert | 1525 | Forced injection start time                  | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |
| Expert | 1526 | Forced injection stop time                   | hh:mm  | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         | 20:00          | 00:00          | 23:59                         |

## INDEX OF THE NUMBERS OF PARAMETERS {XXXX}

|             |        |             |    |             |        |
|-------------|--------|-------------|----|-------------|--------|
| {1100}..... | 35     | {1188}..... | 52 | {1311}..... | 56     |
| {1101}..... | 62     | {1189}..... | 52 | {1312}..... | 57     |
| {1107}..... | 35, 53 | {1190}..... | 42 | {1333}..... | 58     |
| {1108}..... | 41     | {1191}..... | 42 | {1334}..... | 58     |
| {1109}..... | 42     | {1194}..... | 42 | {1335}..... | 58     |
| {1110}..... | 42     | {1195}..... | 42 | {1336}..... | 58     |
| {1111}..... | 64     | {1196}..... | 42 | {1337}..... | 59     |
| {1112}..... | 49     | {1197}..... | 52 | {1339}..... | 59     |
| {1121}..... | 43     | {1198}..... | 54 | {1340}..... | 59     |
| {1122}..... | 43     | {1199}..... | 54 | {1341}..... | 59     |
| {1124}..... | 36, 48 | {1200}..... | 54 | {1342}..... | 59     |
| {1125}..... | 41     | {1201}..... | 55 | {1343}..... | 59     |
| {1126}..... | 35, 53 | {1202}..... | 56 | {1344}..... | 59     |
| {1127}..... | 66     | {1203}..... | 57 | {1345}..... | 59     |
| {1128}..... | 52     | {1225}..... | 58 | {1346}..... | 59     |
| {1129}..... | 63     | {1226}..... | 58 | {1347}..... | 59     |
| {1137}..... | 37     | {1227}..... | 58 | {1348}..... | 59     |
| {1138}..... | 35, 41 | {1228}..... | 58 | {1350}..... | 60     |
| {1139}..... | 41     | {1229}..... | 59 | {1351}..... | 60     |
| {1140}..... | 43     | {1231}..... | 59 | {1352}..... | 60     |
| {1141}..... | 43     | {1232}..... | 59 | {1353}..... | 60     |
| {1142}..... | 43     | {1233}..... | 59 | {1354}..... | 60     |
| {1143}..... | 43     | {1234}..... | 59 | {1366}..... | 61     |
| {1144}..... | 43     | {1235}..... | 59 | {1378}..... | 58     |
| {1145}..... | 43     | {1236}..... | 59 | {1395}..... | 37     |
| {1146}..... | 43     | {1237}..... | 59 | {1404}..... | 63     |
| {1147}..... | 44     | {1238}..... | 59 | {1405}..... | 63     |
| {1148}..... | 44     | {1239}..... | 59 | {1420}..... | 51     |
| {1149}..... | 44     | {1240}..... | 59 | {1433}..... | 54     |
| {1155}..... | 44     | {1242}..... | 60 | {1435}..... | 36, 54 |
| {1156}..... | 44     | {1243}..... | 60 | {1436}..... | 53     |
| {1157}..... | 44     | {1244}..... | 60 | {1438}..... | 52     |
| {1158}..... | 45     | {1245}..... | 60 | {1451}..... | 44     |
| {1159}..... | 45     | {1257}..... | 61 | {1452}..... | 45     |
| {1160}..... | 45     | {1269}..... | 58 | {1453}..... | 47     |
| {1161}..... | 45     | {1282}..... | 66 | {1454}..... | 48     |
| {1162}..... | 45     | {1283}..... | 66 | {1455}..... | 58     |
| {1163}..... | 46     | {1284}..... | 46 | {1456}..... | 58     |
| {1164}..... | 46     | {1285}..... | 47 | {1461}..... | 66     |
| {1165}..... | 46     | {1286}..... | 49 | {1462}..... | 66     |
| {1166}..... | 46     | {1288}..... | 60 | {1467}..... | 43     |
| {1168}..... | 47     | {1290}..... | 46 | {1468}..... | 65     |
| {1169}..... | 47     | {1291}..... | 46 | {1471}..... | 54     |
| {1170}..... | 47     | {1295}..... | 55 | {1473}..... | 64     |
| {1171}..... | 47     | {1296}..... | 62 | {1474}..... | 64     |
| {1172}..... | 47     | {1297}..... | 63 | {1475}..... | 65     |
| {1173}..... | 48     | {1298}..... | 43 | {1476}..... | 65     |
| {1174}..... | 48     | {1304}..... | 63 | {1477}..... | 65     |
| {1175}..... | 48     | {1305}..... | 63 | {1478}..... | 65     |
| {1176}..... | 48     | {1307}..... | 43 | {1479}..... | 65     |
| {1186}..... | 48     | {1309}..... | 54 | {1480}..... | 65     |
| {1187}..... | 36, 51 | {1310}..... | 55 | {1481}..... | 65     |

|             |    |             |    |             |    |
|-------------|----|-------------|----|-------------|----|
| {1482}..... | 65 | {1521}..... | 59 | {1567}..... | 62 |
| {1483}..... | 65 | {1522}..... | 66 | {1568}..... | 41 |
| {1484}..... | 64 | {1523}..... | 66 | {1569}..... | 56 |
| {1485}..... | 64 | {1524}..... | 67 | {1570}..... | 56 |
| {1486}..... | 64 | {1525}..... | 67 | {5000}..... | 22 |
| {1489}..... | 61 | {1526}..... | 67 | {5001}..... | 23 |
| {1490}..... | 61 | {1527}..... | 53 | {5002}..... | 23 |
| {1491}..... | 61 | {1528}..... | 52 | {5006}..... | 25 |
| {1492}..... | 61 | {1529}..... | 60 | {5007}..... | 25 |
| {1493}..... | 62 | {1530}..... | 60 | {5008}..... | 25 |
| {1494}..... | 62 | {1531}..... | 42 | {5009}..... | 25 |
| {1495}..... | 64 | {1532}..... | 42 | {5010}..... | 25 |
| {1496}..... | 65 | {1533}..... | 64 | {5011}..... | 25 |
| {1497}..... | 57 | {1536}..... | 50 | {5012}..... | 23 |
| {1498}..... | 57 | {1537}..... | 62 | {5013}..... | 23 |
| {1505}..... | 55 | {1538}..... | 62 | {5015}..... | 24 |
| {1506}..... | 55 | {1539}..... | 62 | {5016}..... | 24 |
| {1507}..... | 55 | {1540}..... | 62 | {5017}..... | 24 |
| {1510}..... | 54 | {1541}..... | 62 | {5018}..... | 24 |
| {1512}..... | 57 | {1543}..... | 58 | {5019}..... | 23 |
| {1513}..... | 57 | {1544}..... | 58 | {5026}..... | 25 |
| {1514}..... | 57 | {1545}..... | 62 | {5027}..... | 25 |
| {1515}..... | 57 | {1546}..... | 51 | {5030}..... | 24 |
| {1516}..... | 60 | {1547}..... | 66 | {5032}..... | 25 |
| {1517}..... | 60 | {1548}..... | 49 | {5034}..... | 24 |
| {1518}..... | 58 | {1549}..... | 51 | {5036}..... | 22 |
| {1519}..... | 58 | {1560}..... | 49 | {5041}..... | 23 |
| {1520}..... | 59 | {1566}..... | 62 | {5045}..... | 24 |

## NOTES



***STUDER Innotec***

Rue des Casernes 57

1950 Sion – Switzerland

Tél : +41(0) 27 205 60 80

Fax : +41(0) 27 205 60 88

[info@studer-innotec.com](mailto:info@studer-innotec.com)

[www.studer-innotec.com](http://www.studer-innotec.com)